


# H2SUSSETMY UIM Coil Driver Output ASD

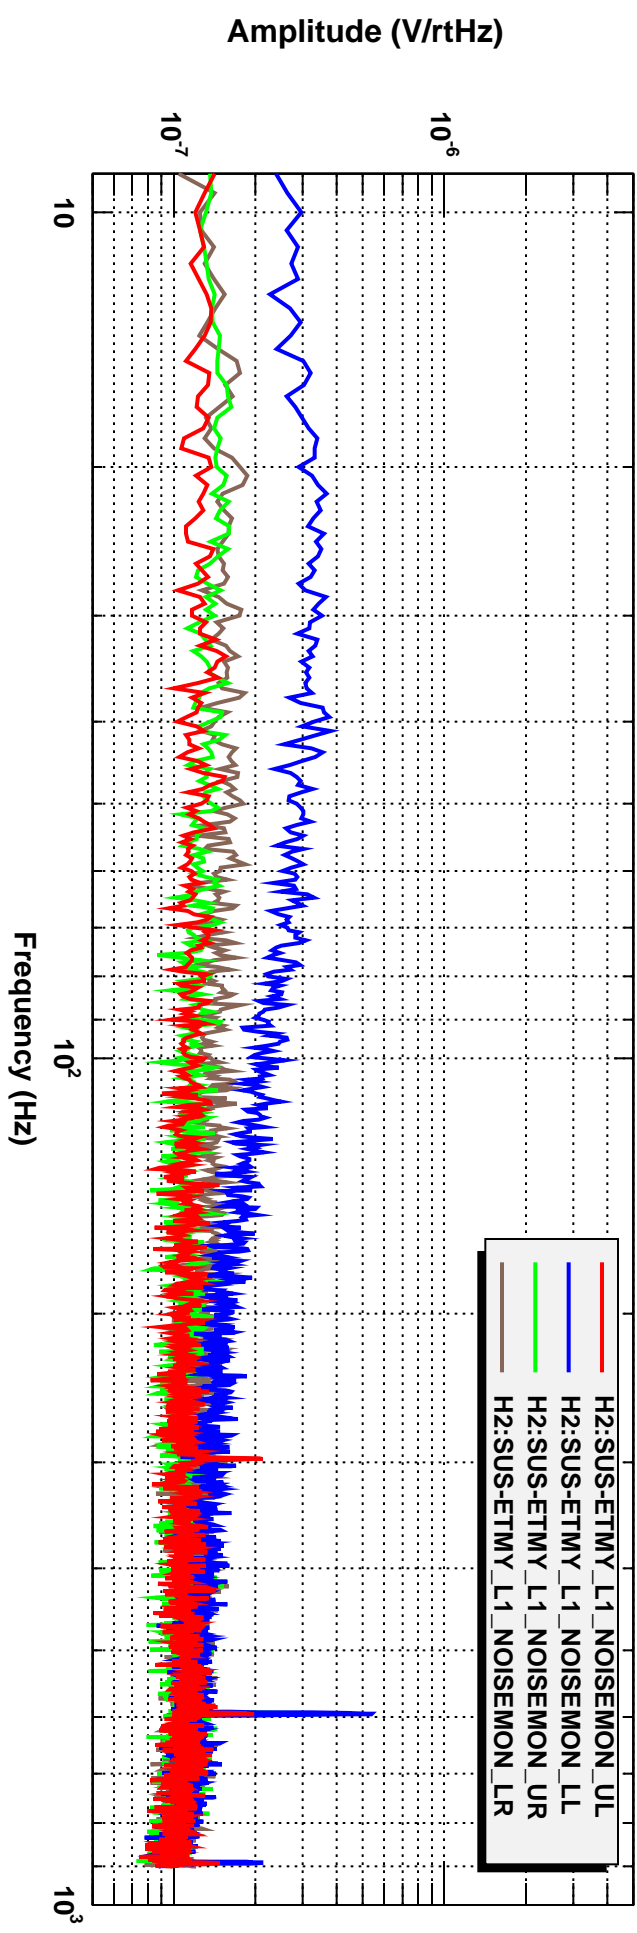

# H2SUSSETMY PUM Coil Driver Output ASD

