 
 



H1 SUS ETMX, PUM Driver

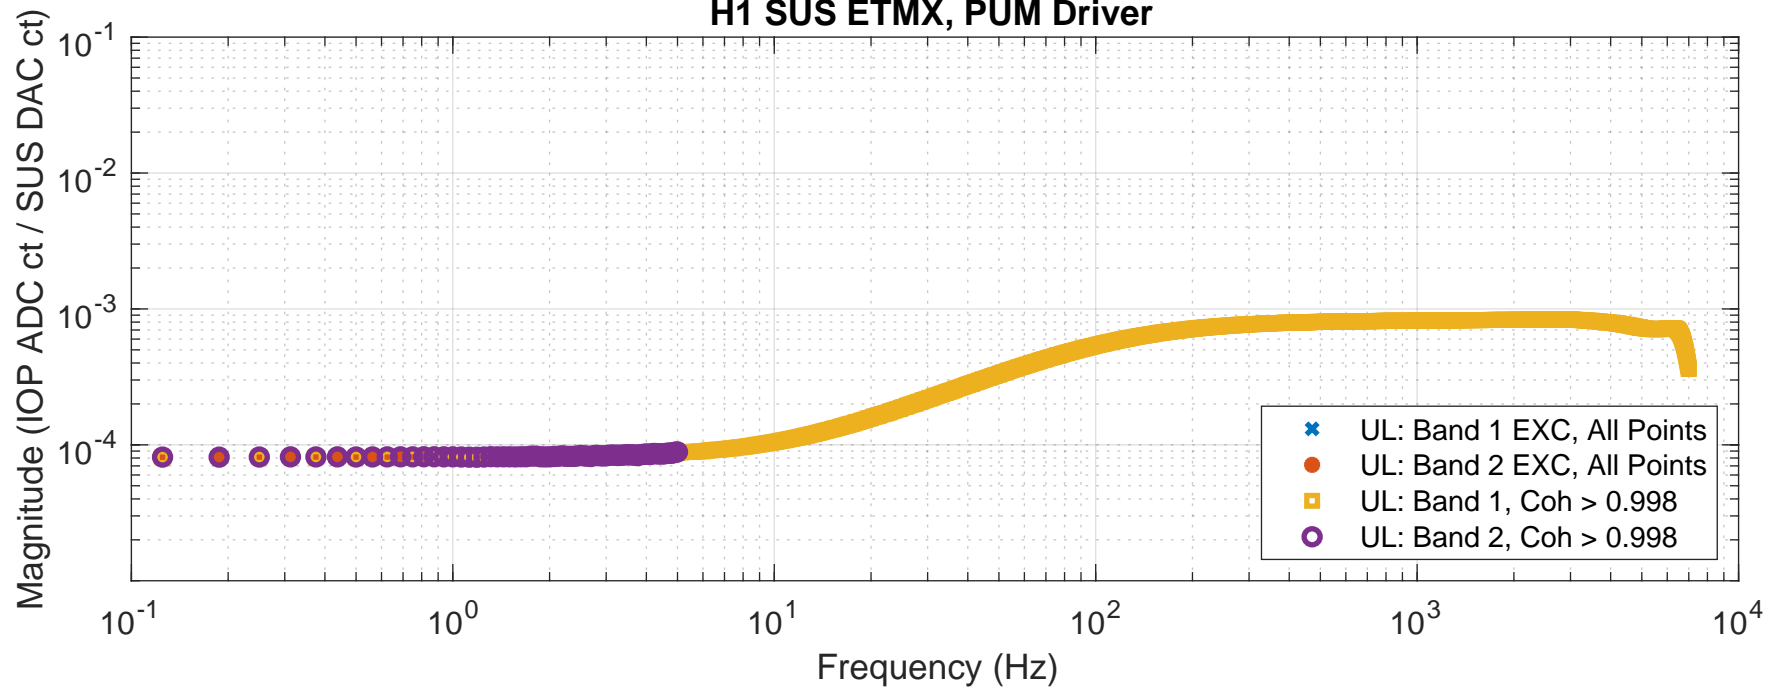


State 1

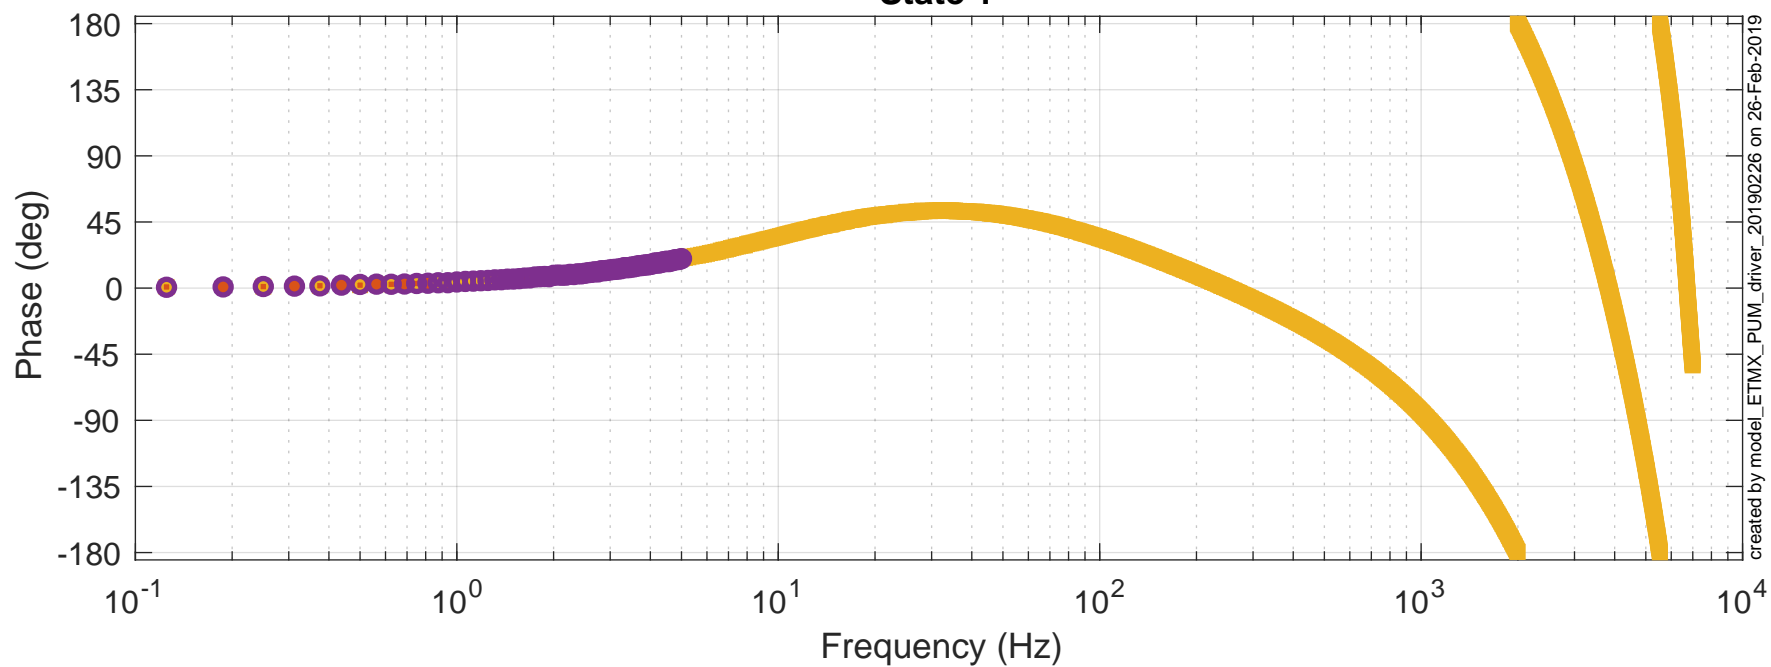

 
H1 SUS ETMX, PUM Driver

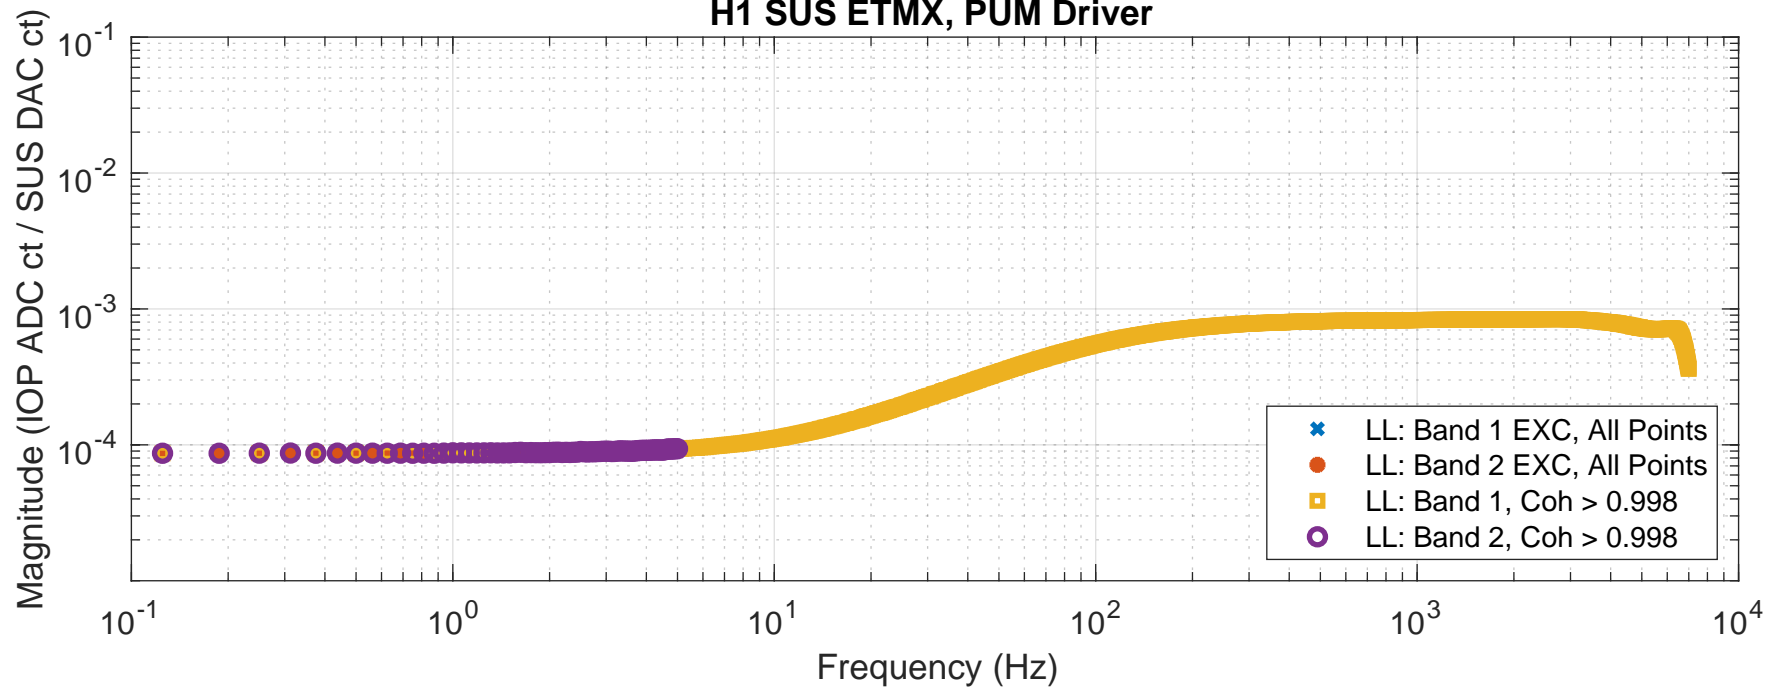


State 1

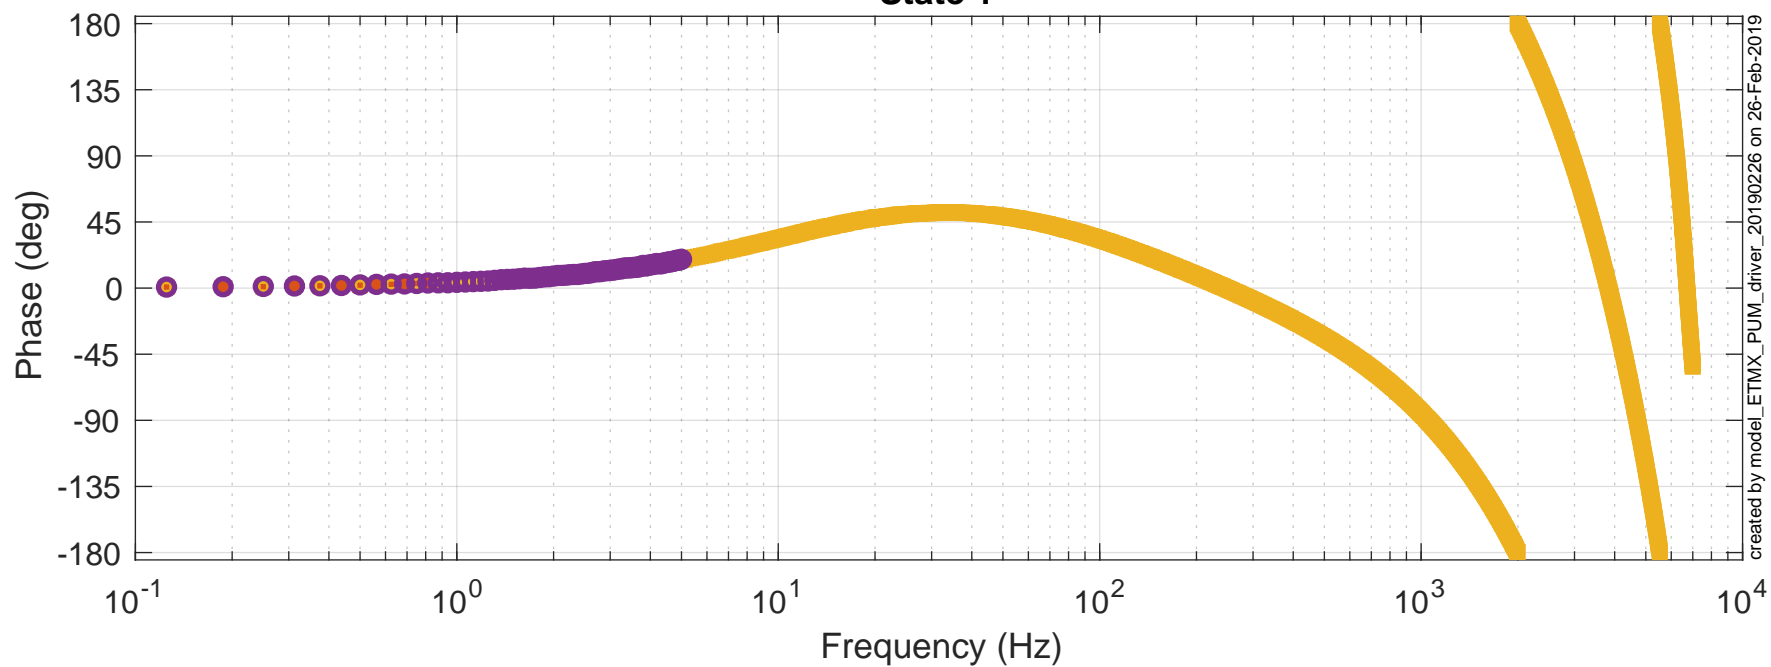 


H1 SUS ETMX, PUM Driver

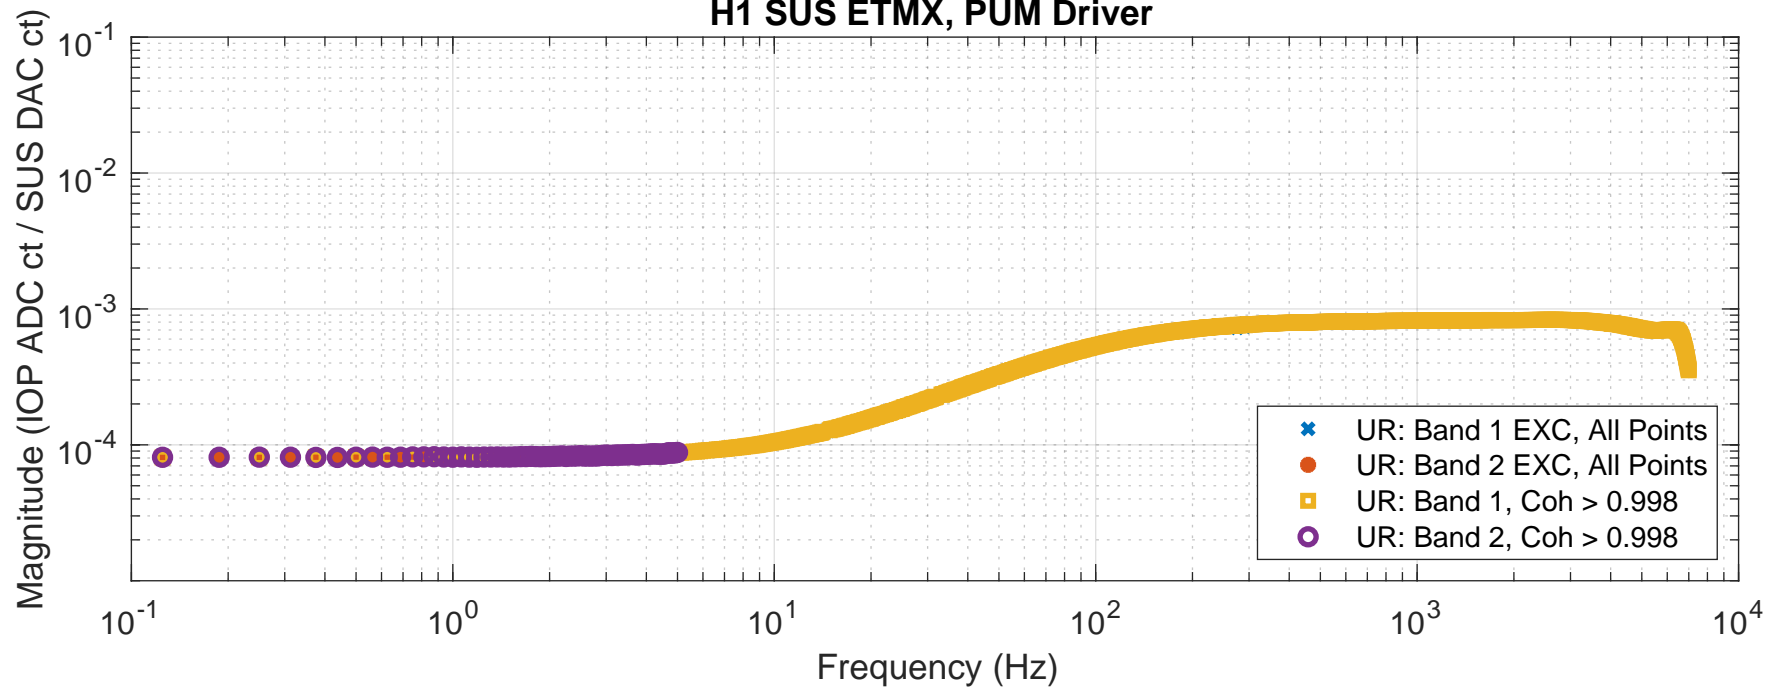 


State 1


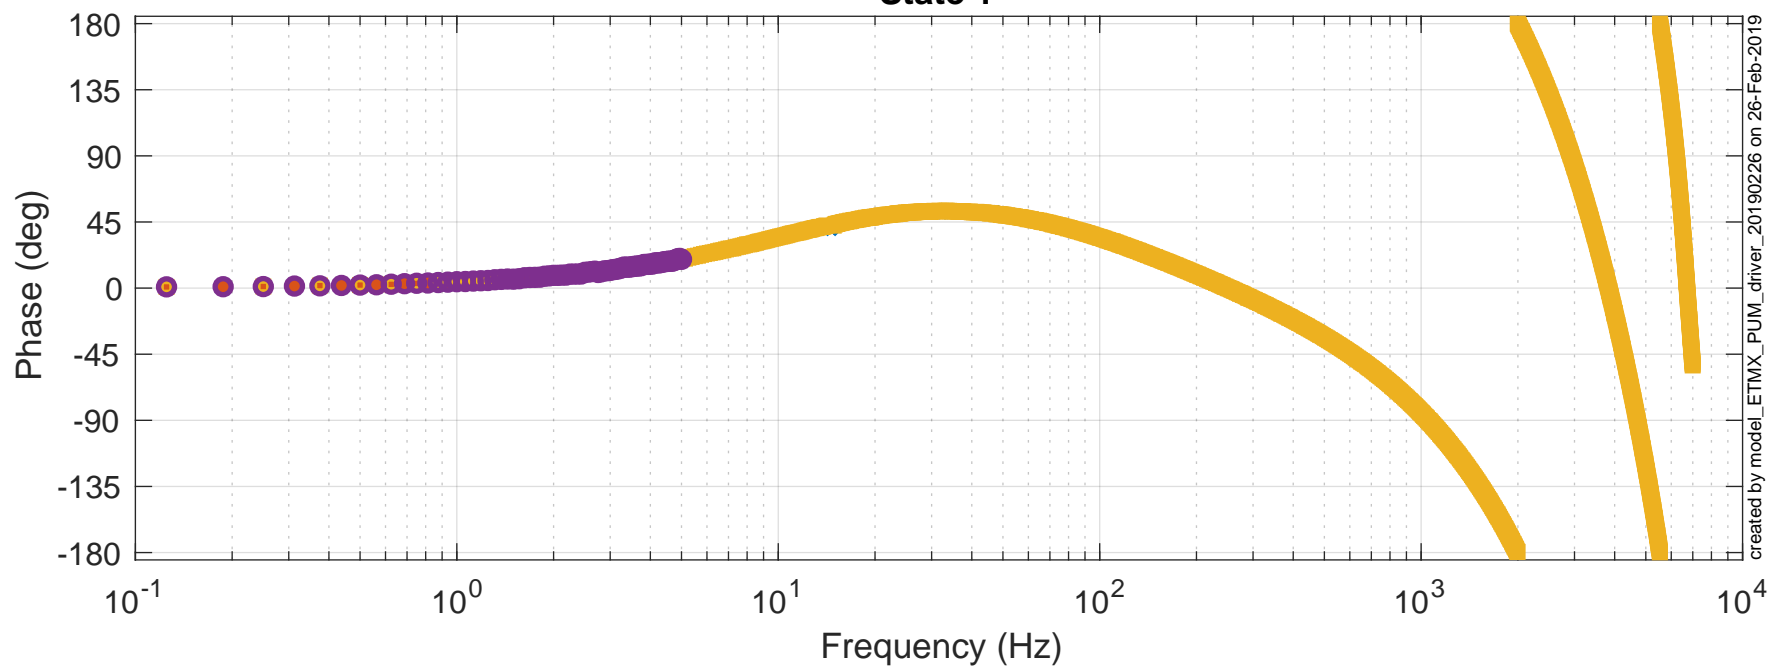 


H1 SUS ETMX, PUM Driver

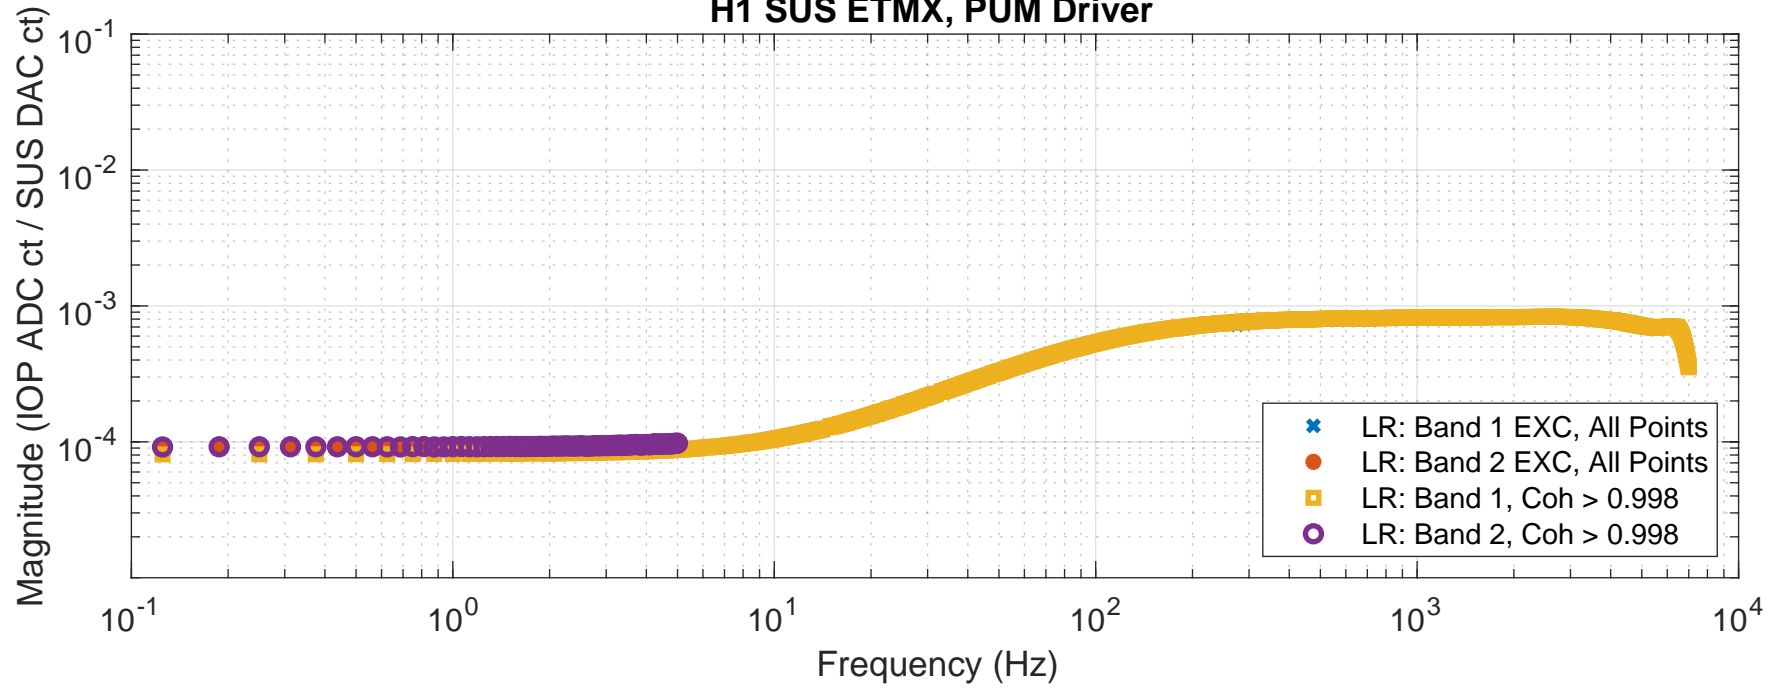 


State 1

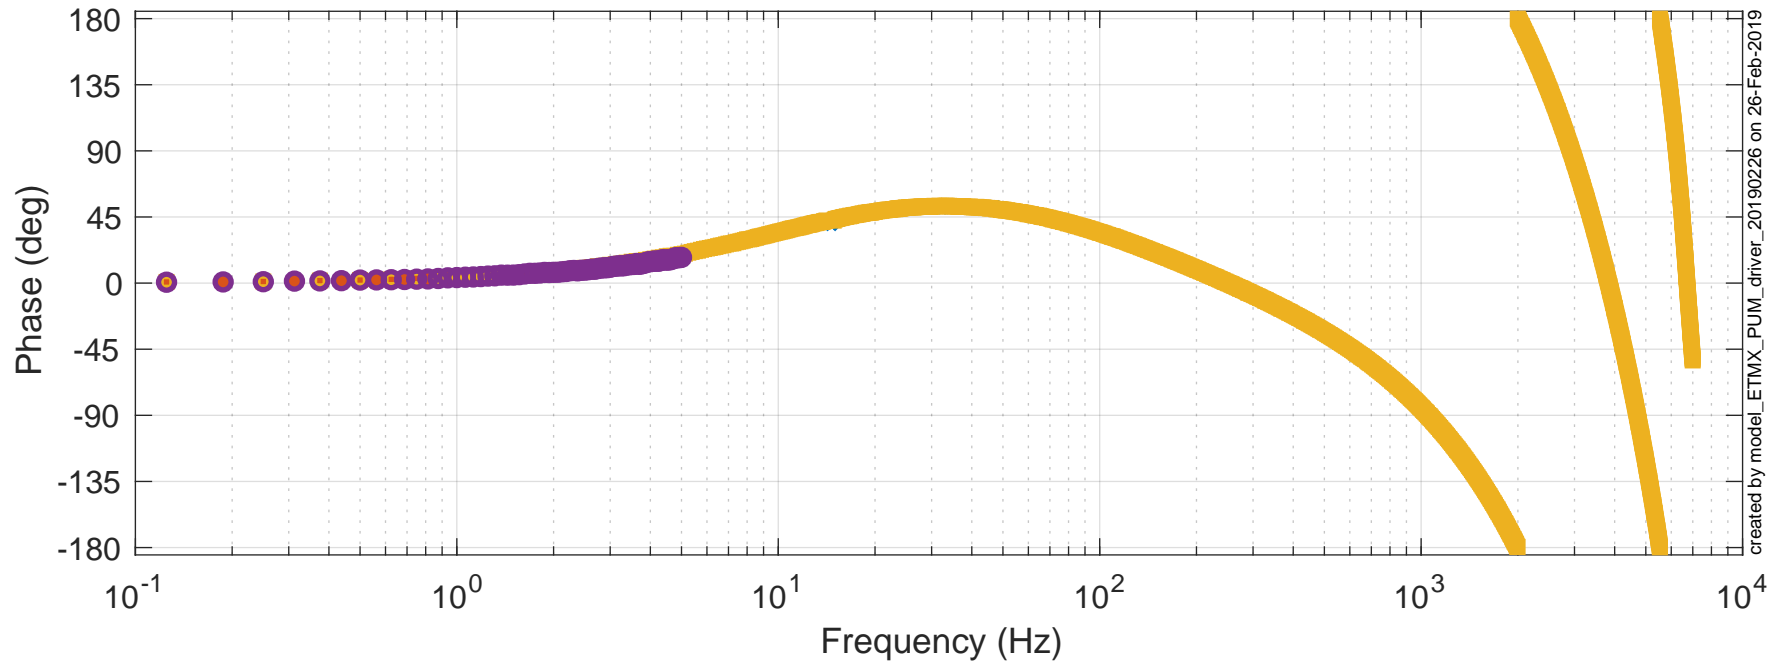 


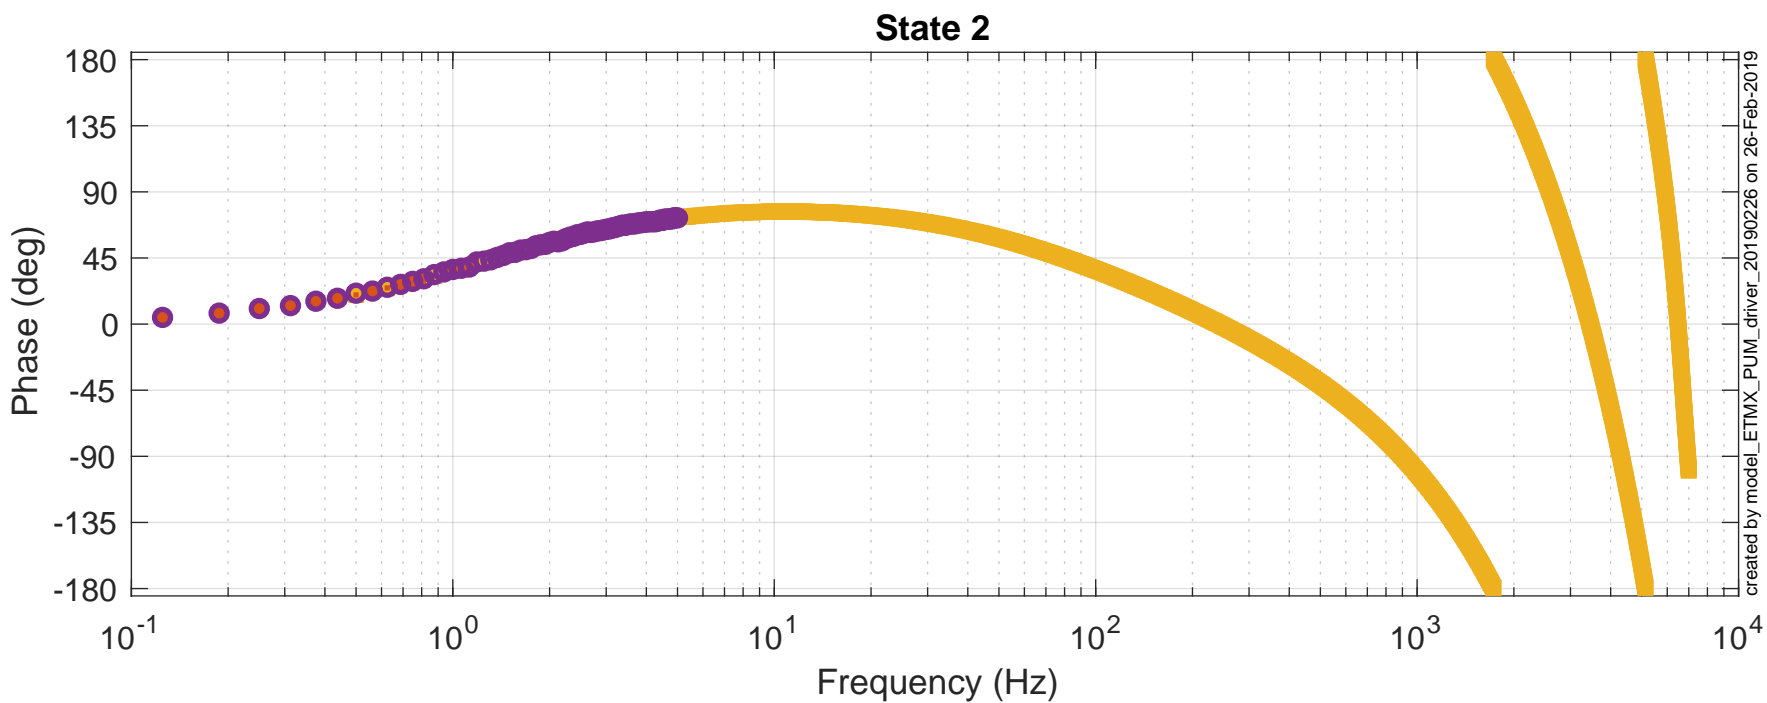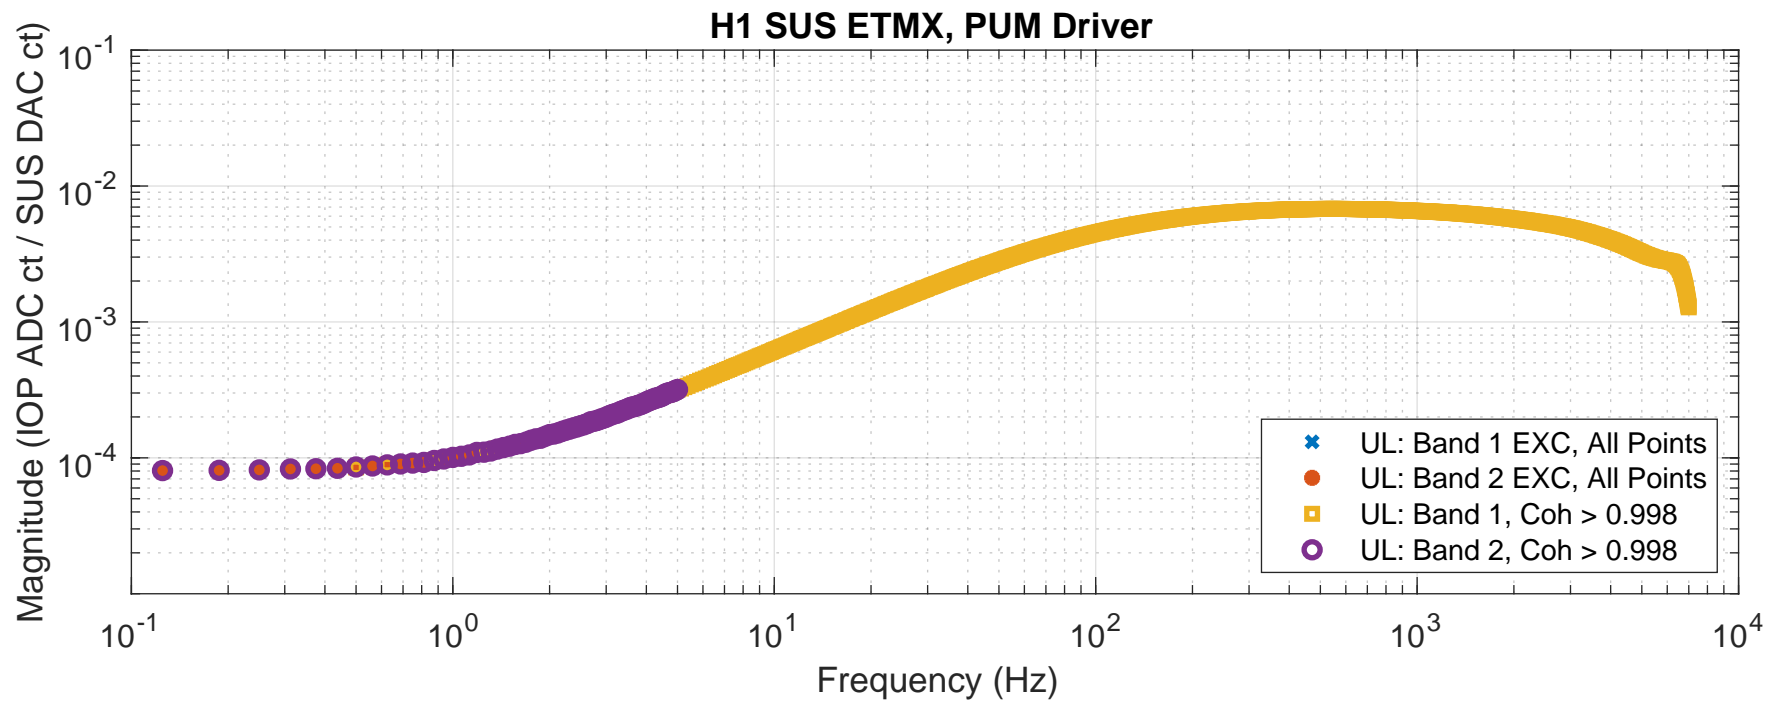  


H1 SUS ETMX, PUM Driver

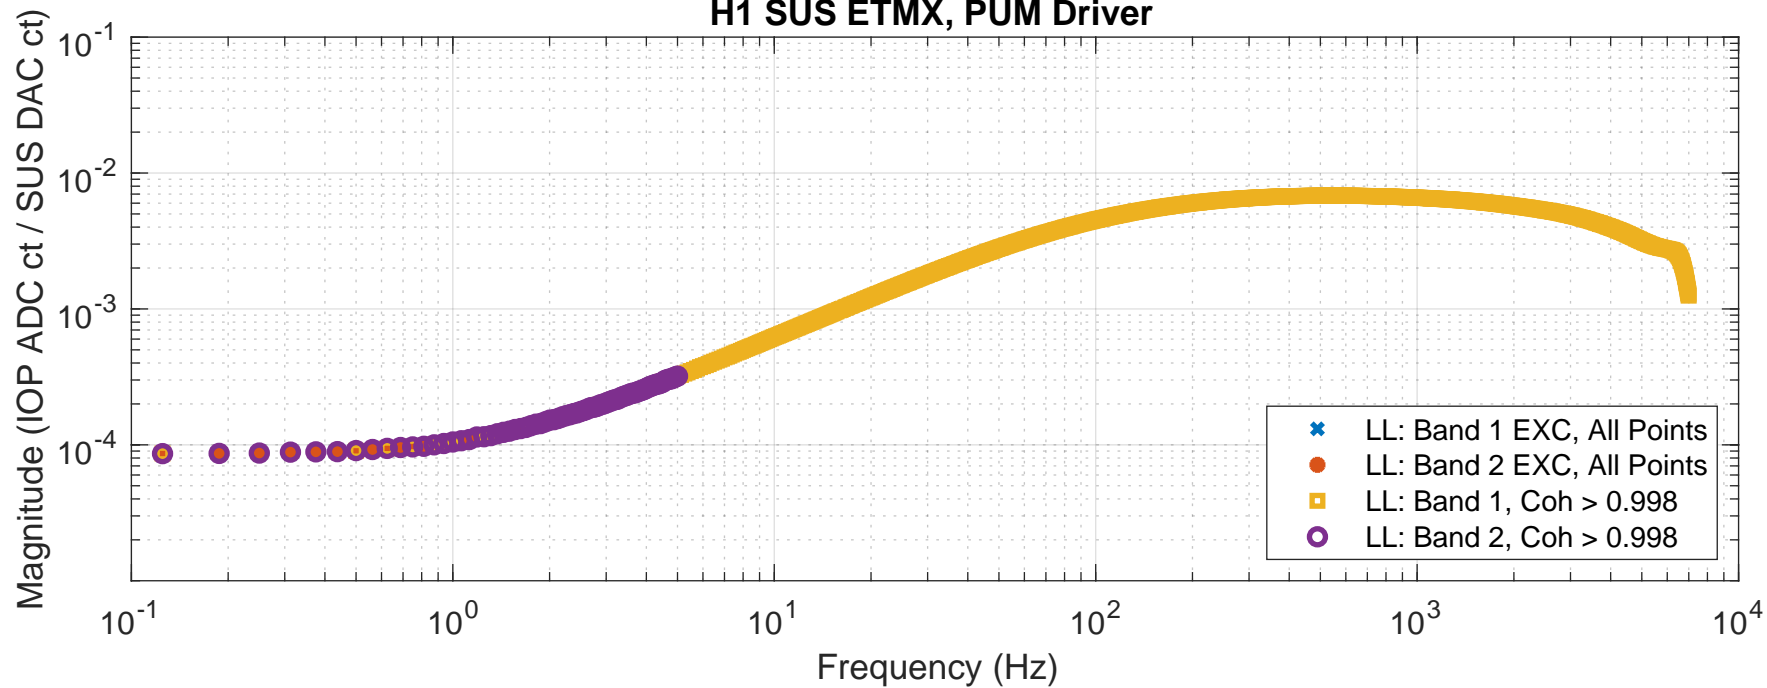 


State 2

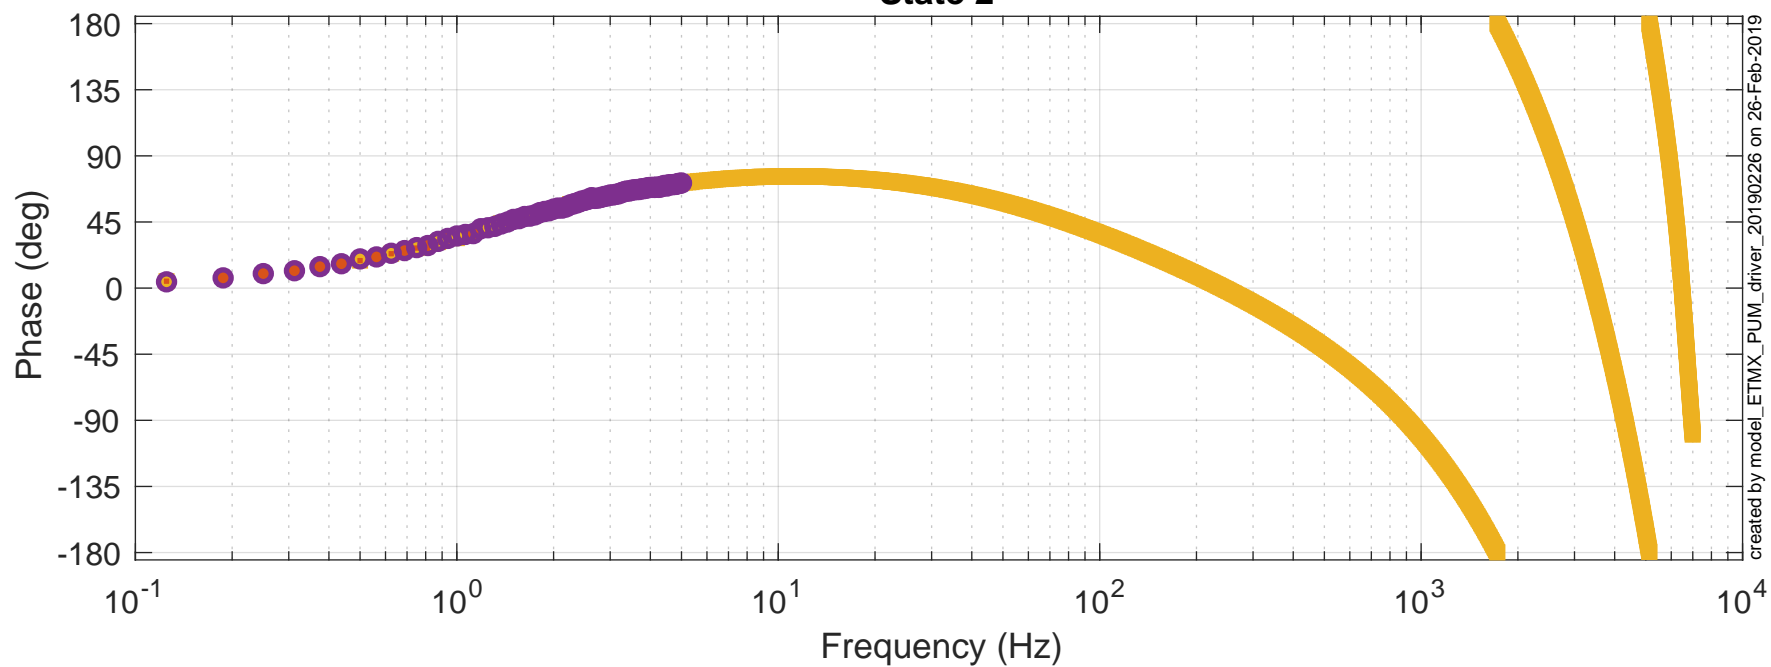 


H1 SUS ETMX, PUM Driver

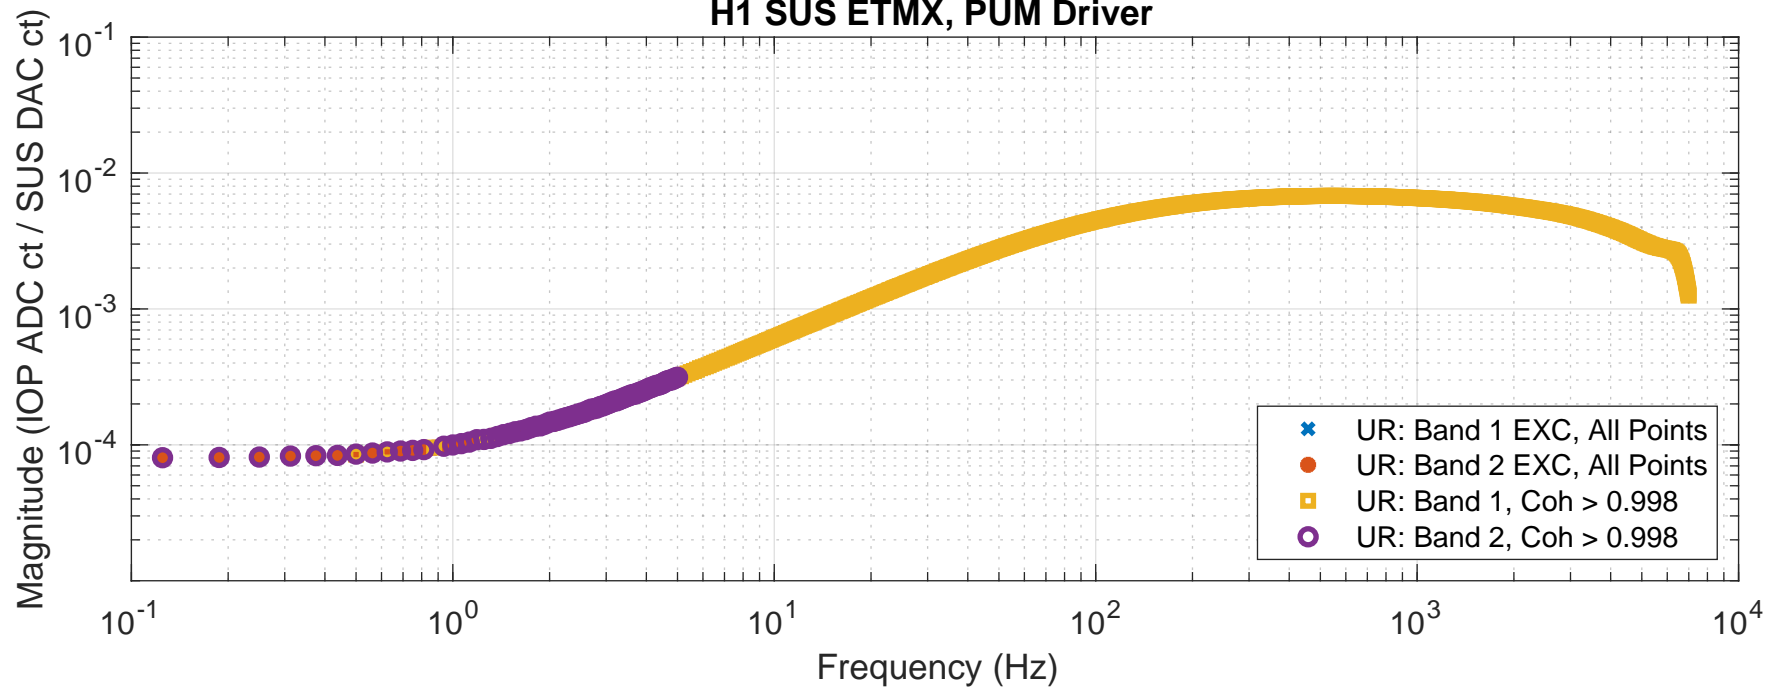 


State 2


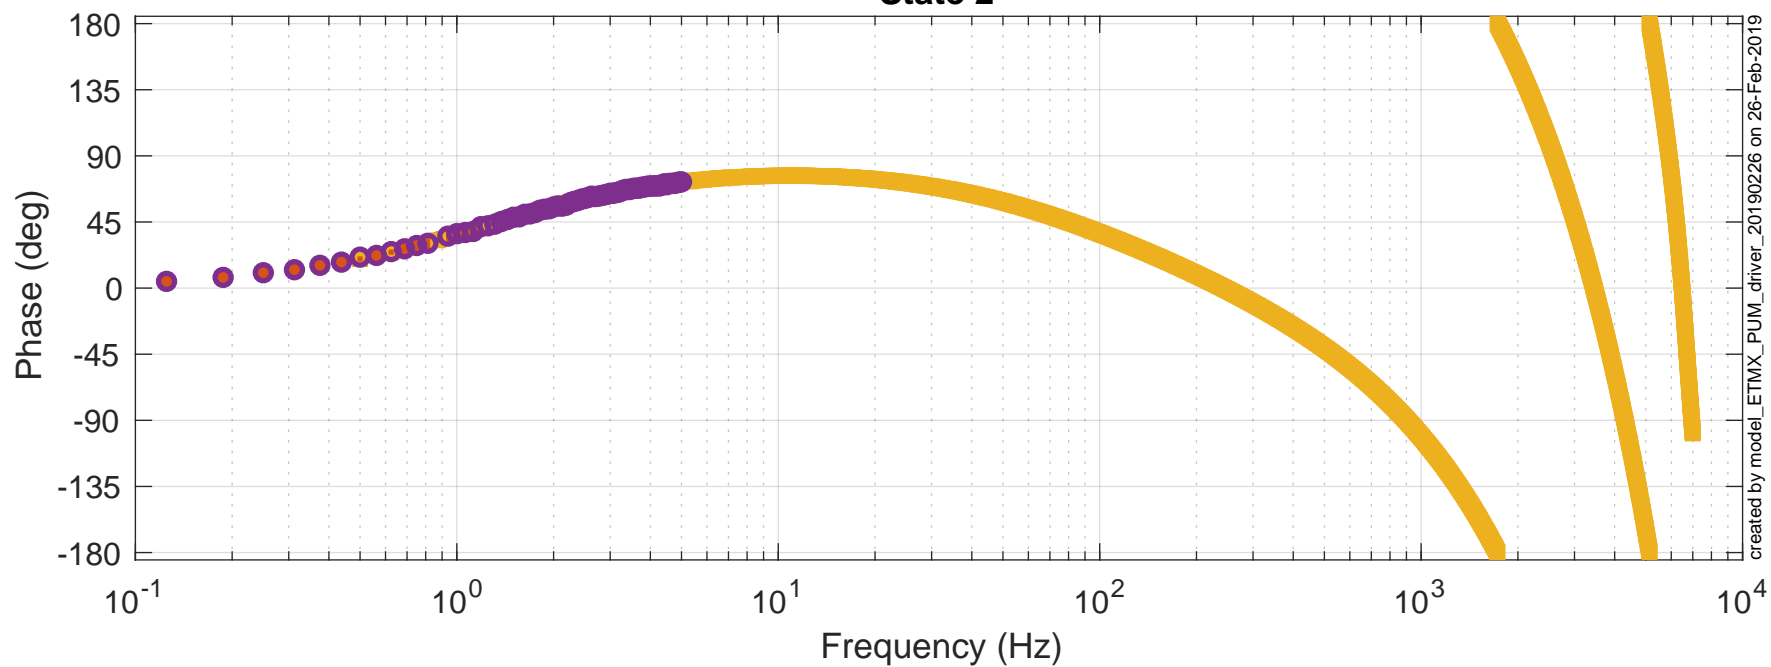 


H1 SUS ETMX, PUM Driver

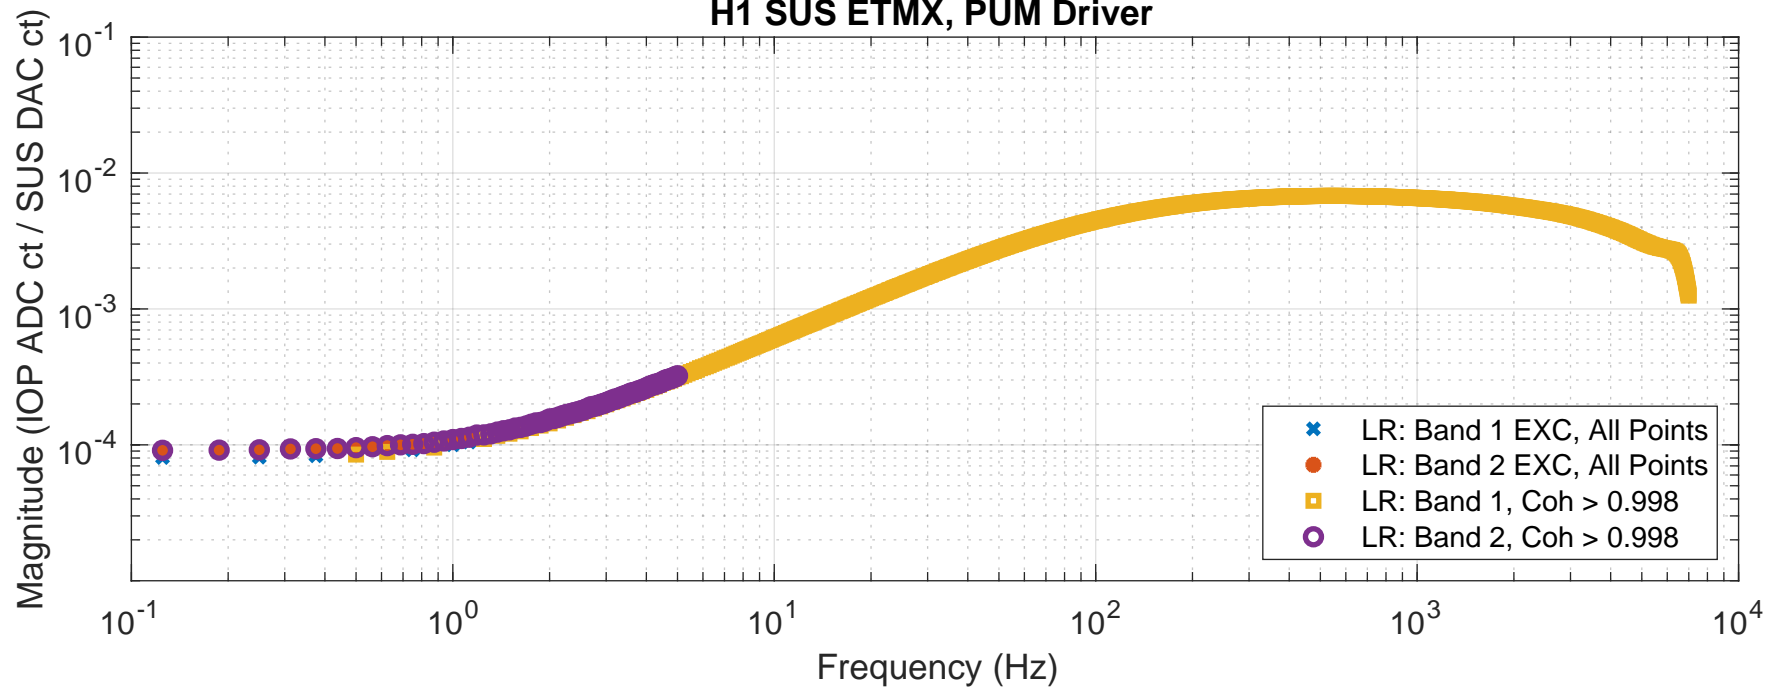 


State 2

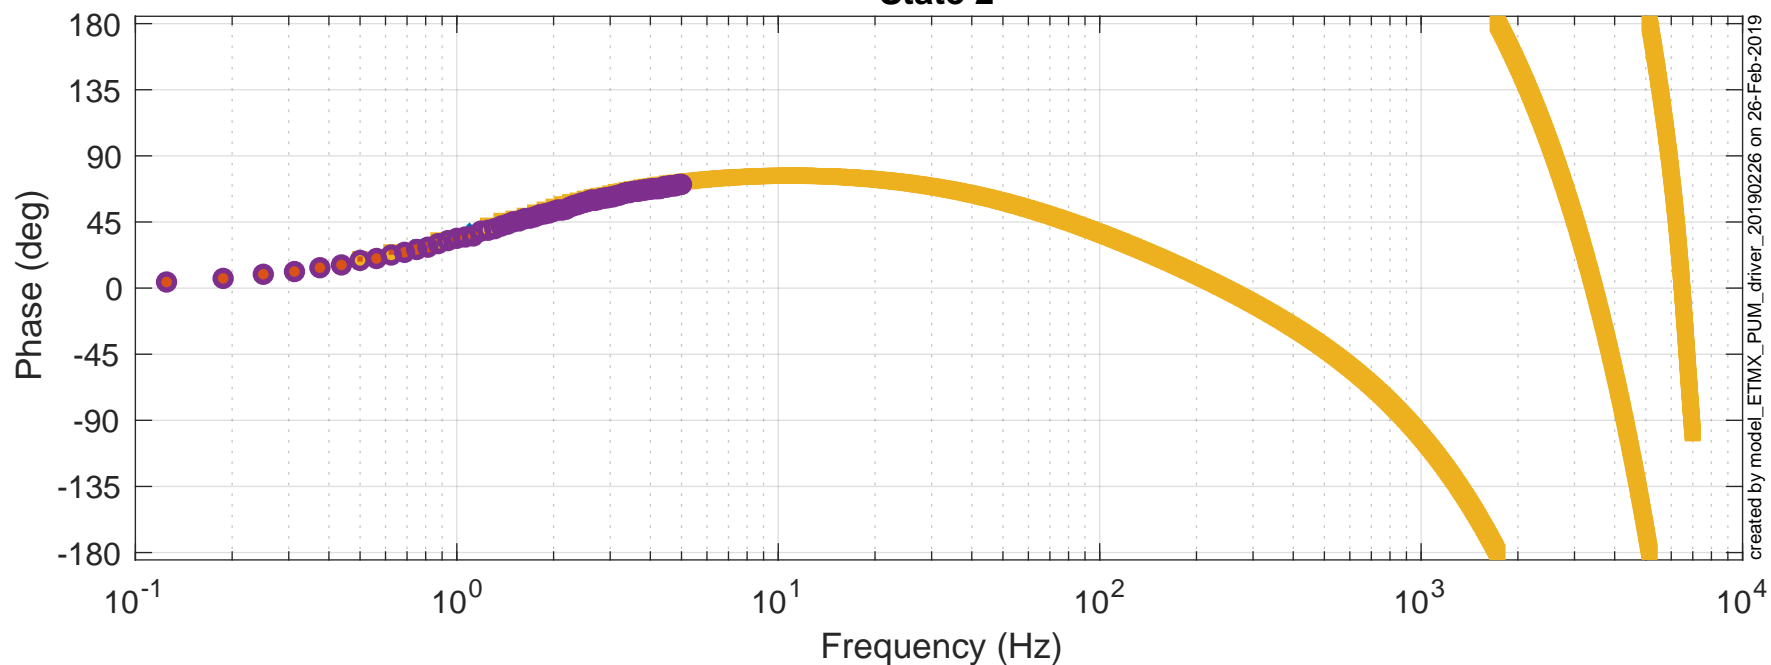 


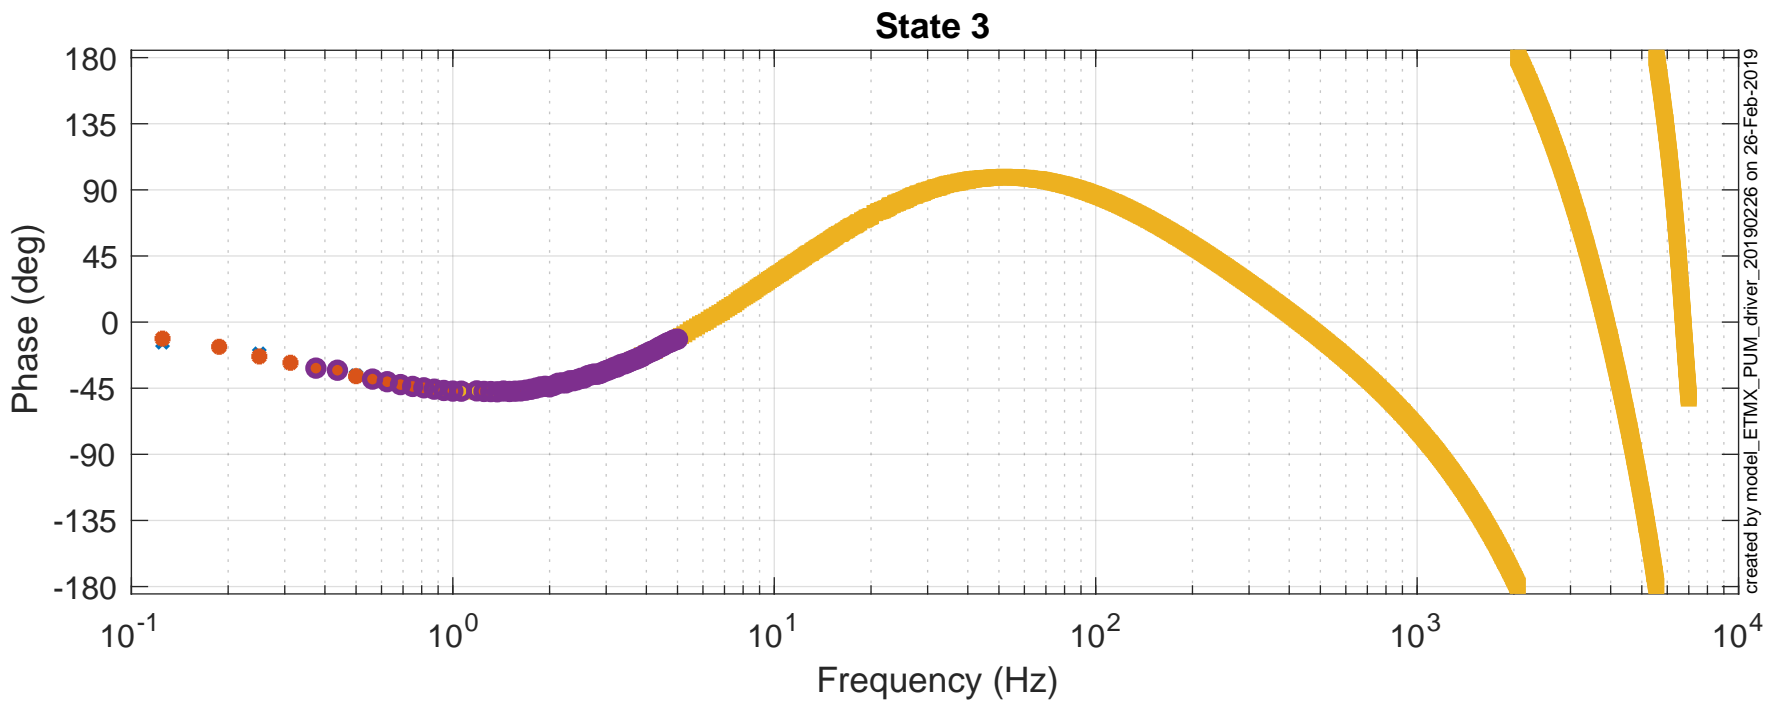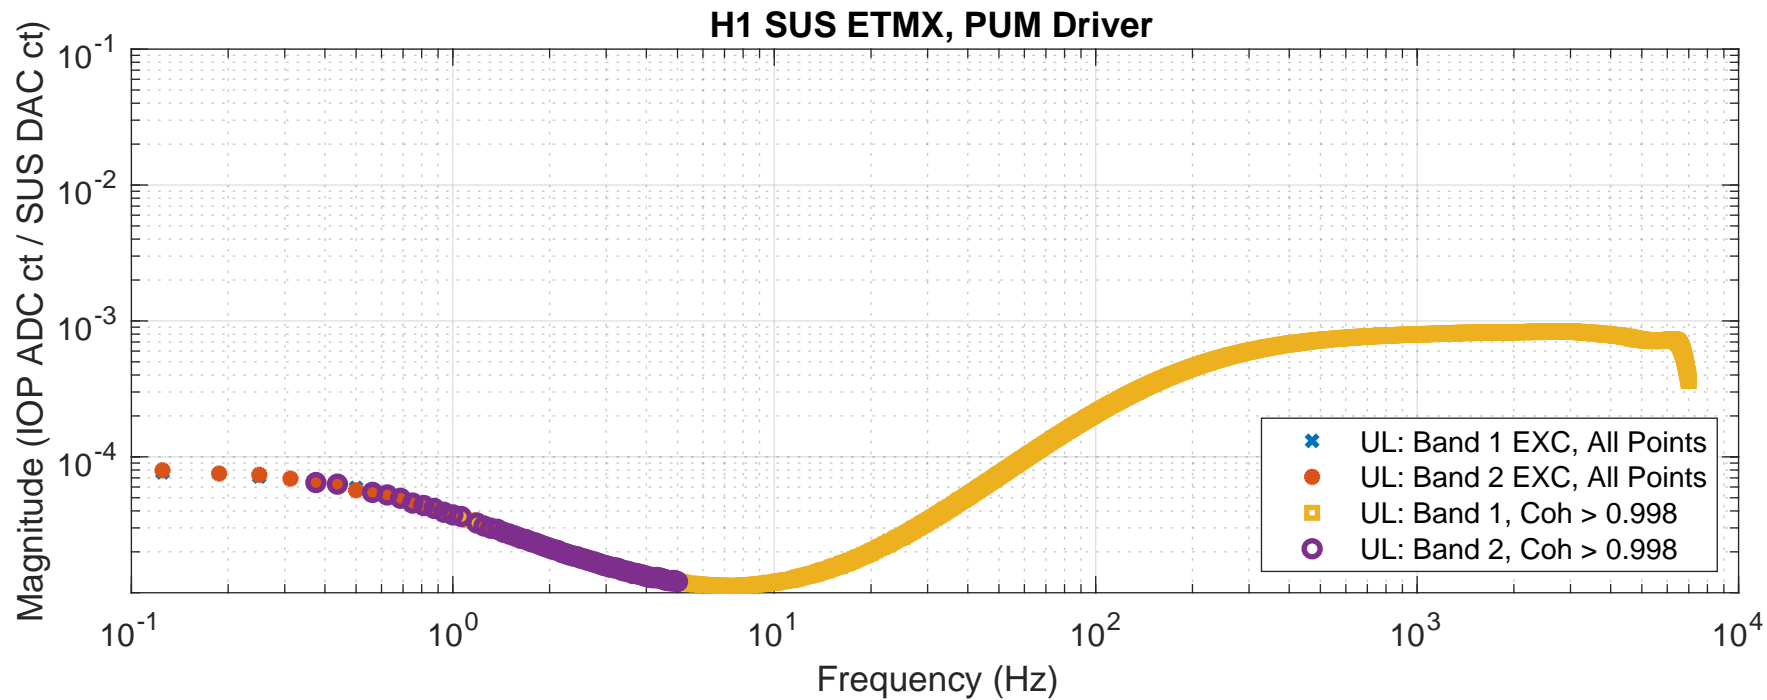  


H1 SUS ETMX, PUM Driver

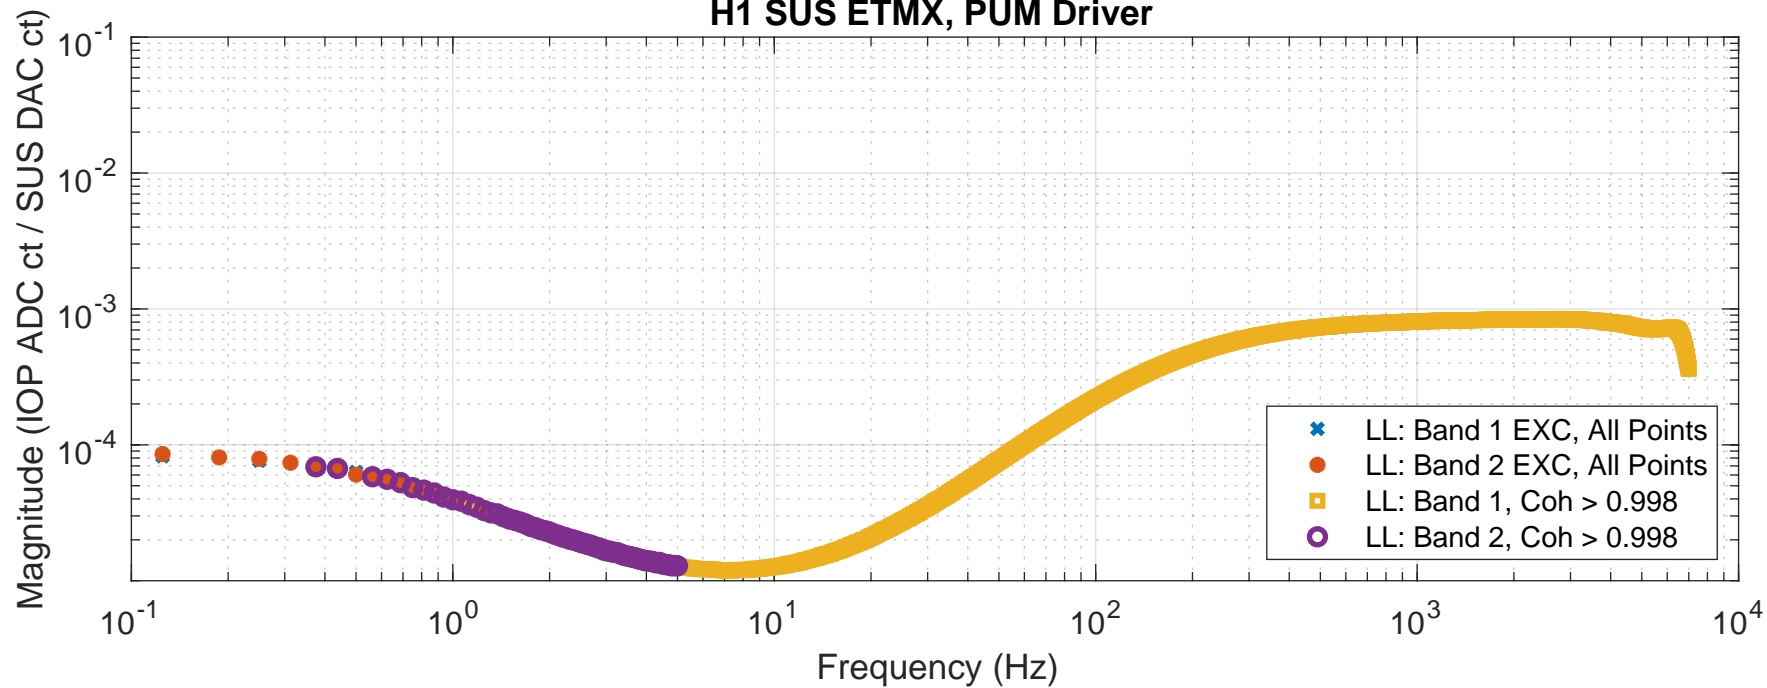 


State 3

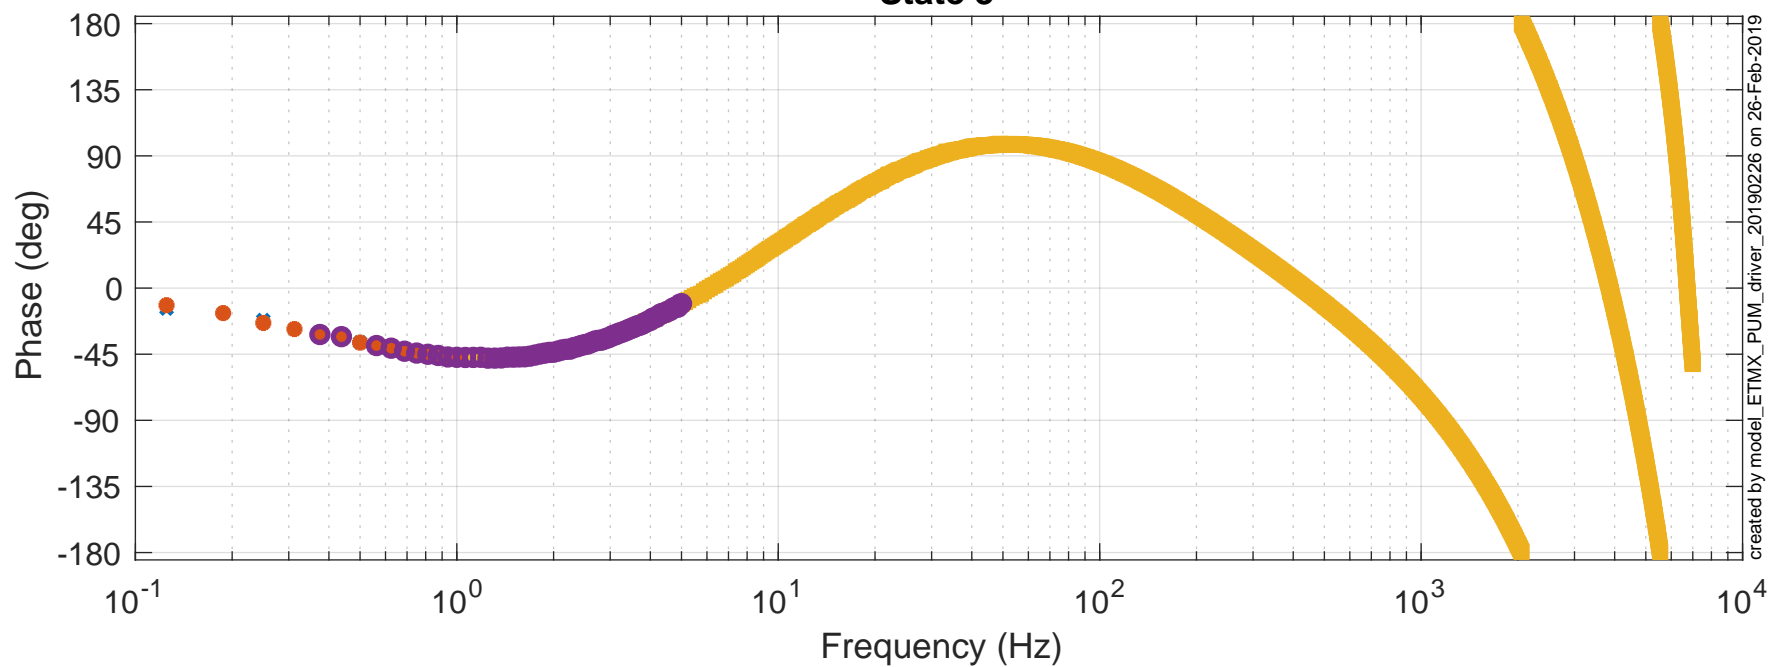 


H1 SUS ETMX, PUM Driver

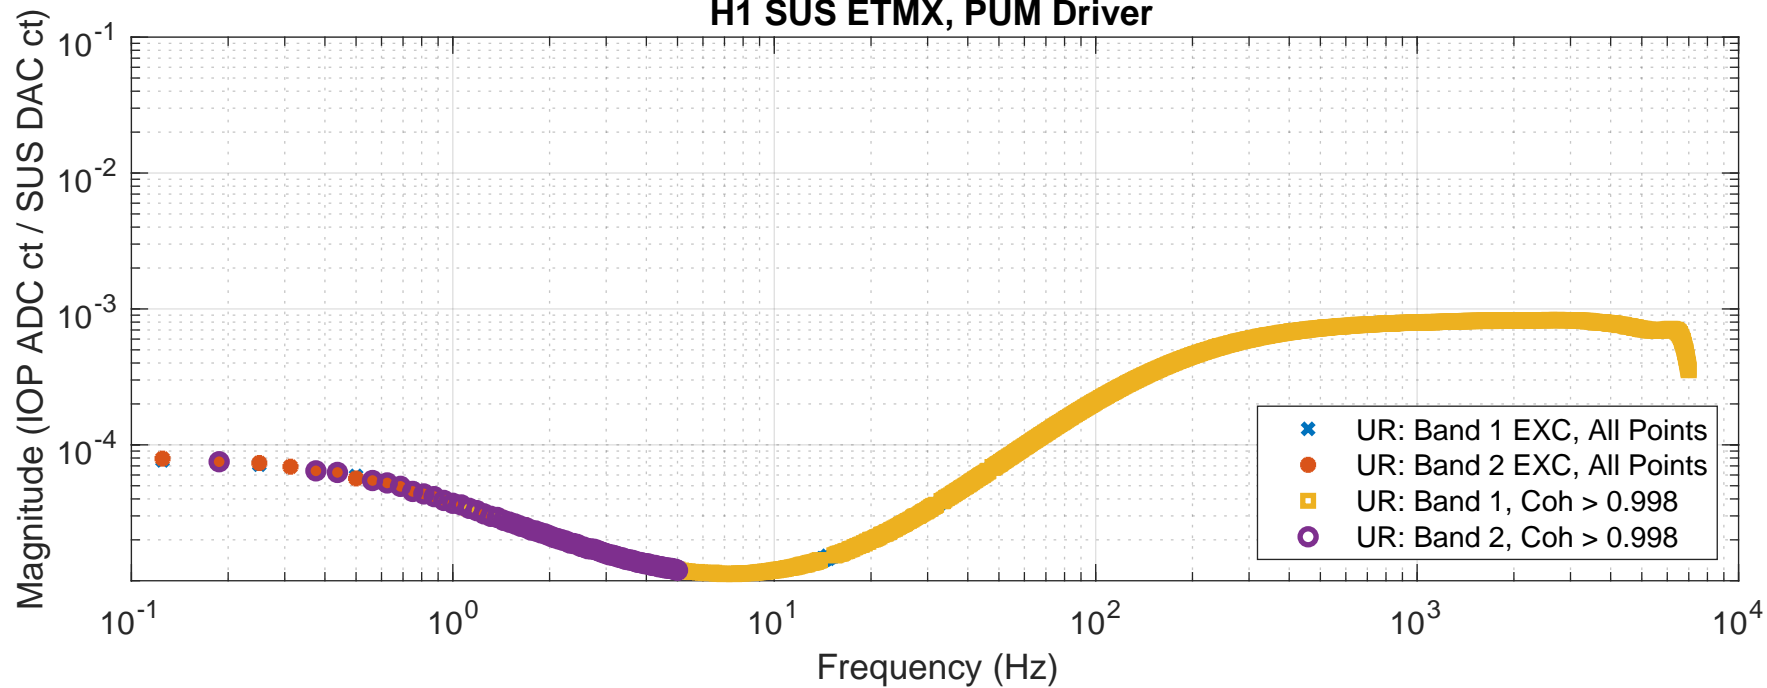 


State 3


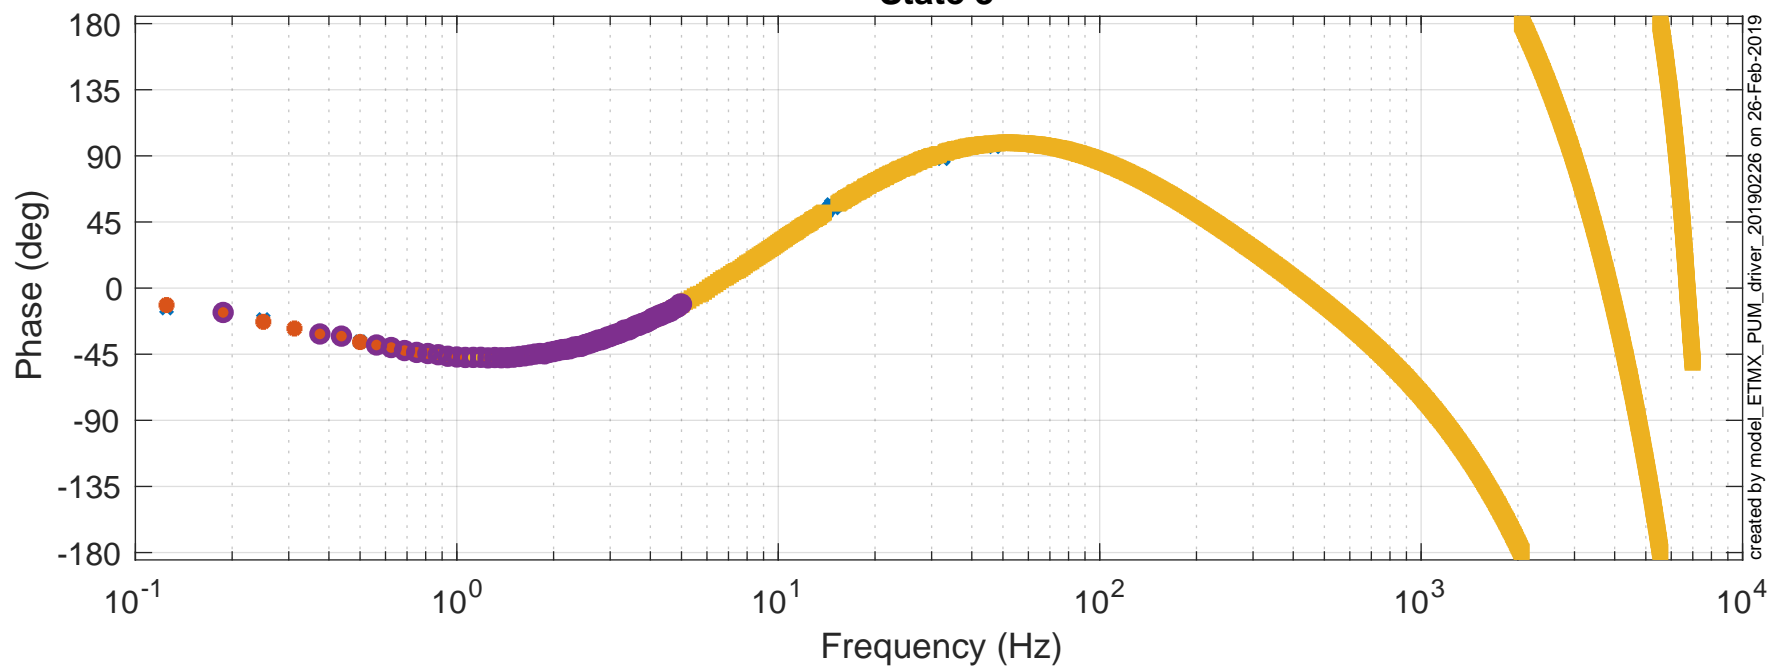 


H1 SUS ETMX, PUM Driver

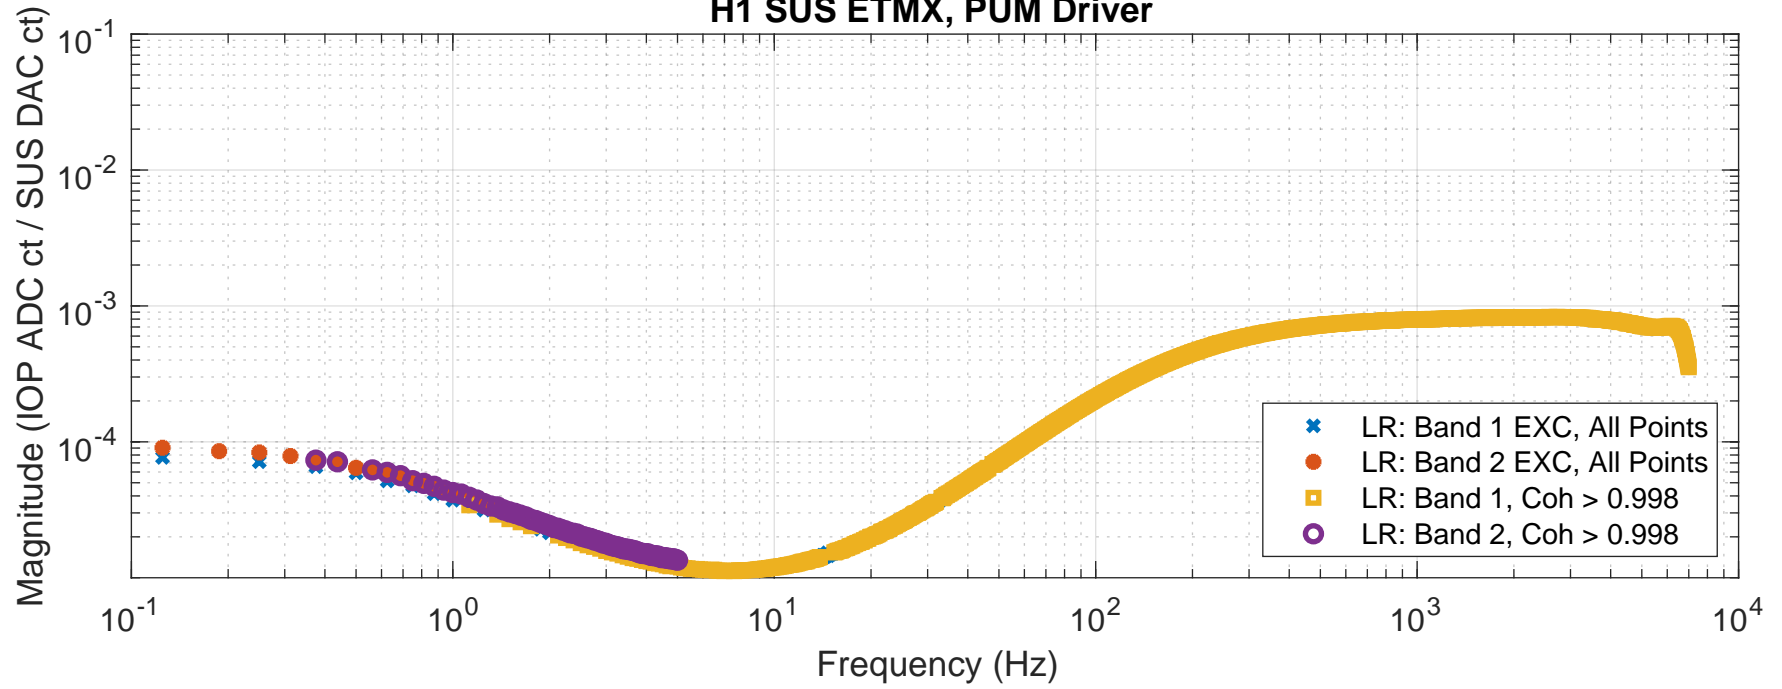 


State 3

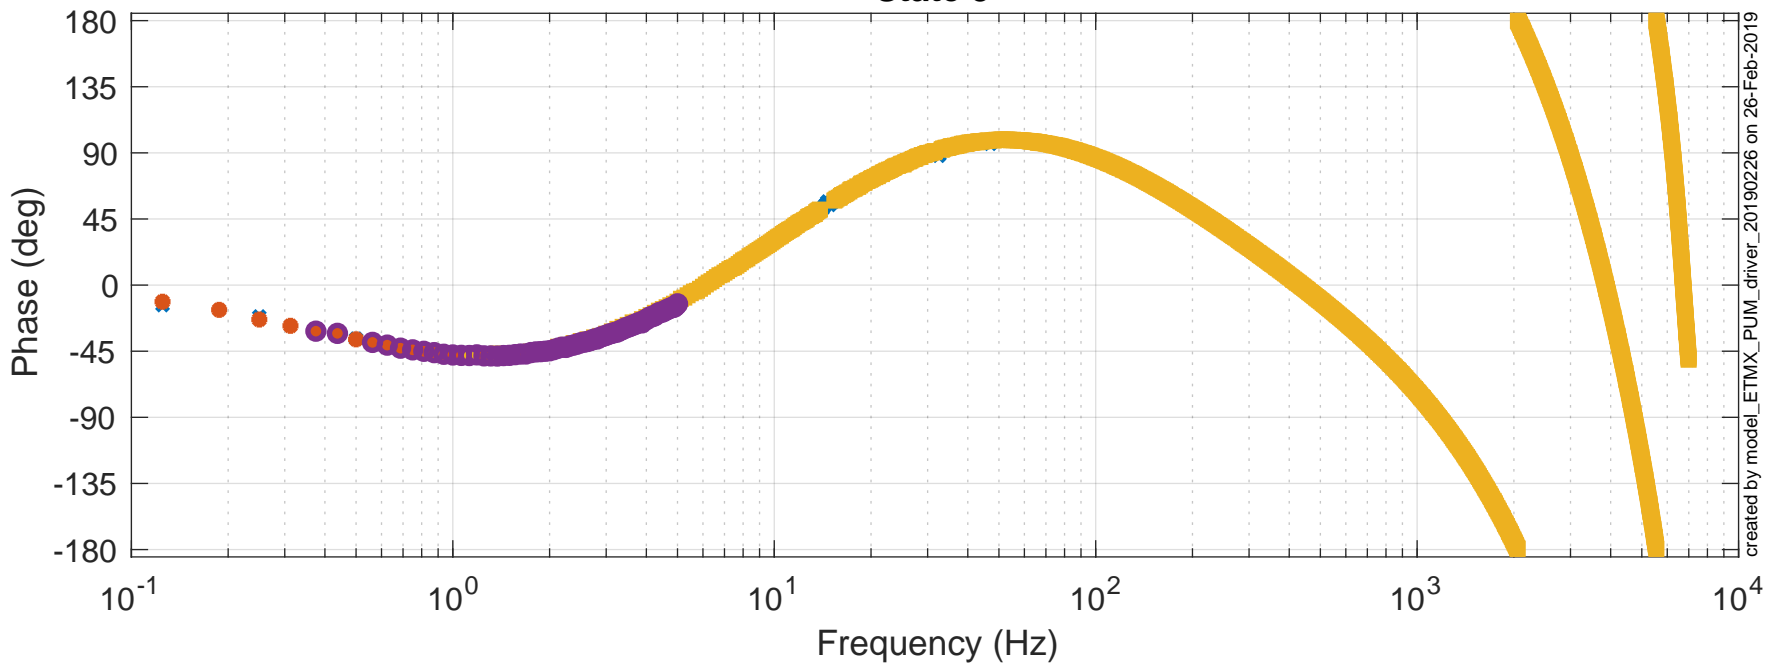 


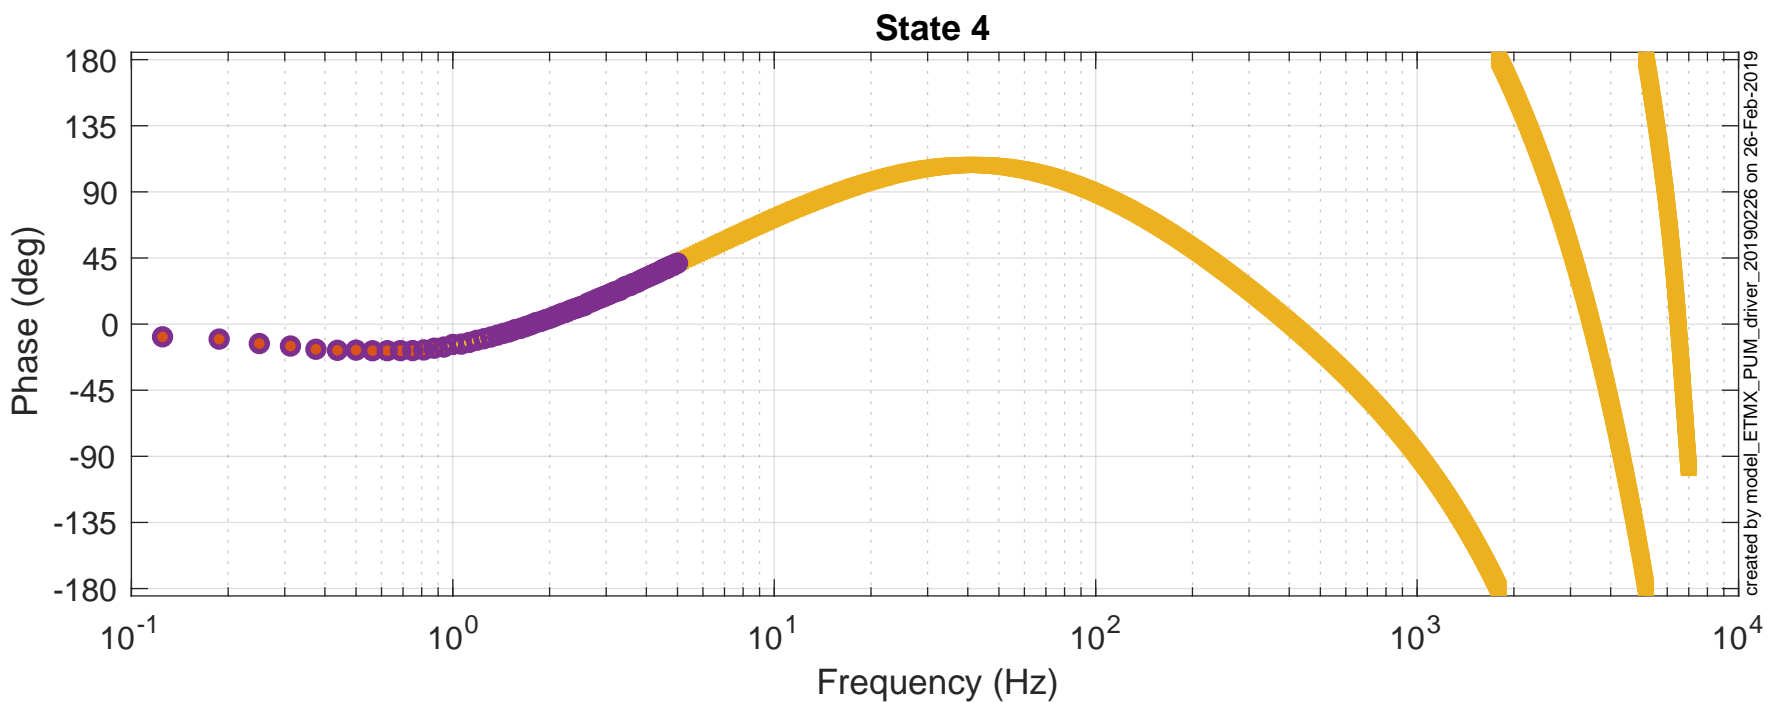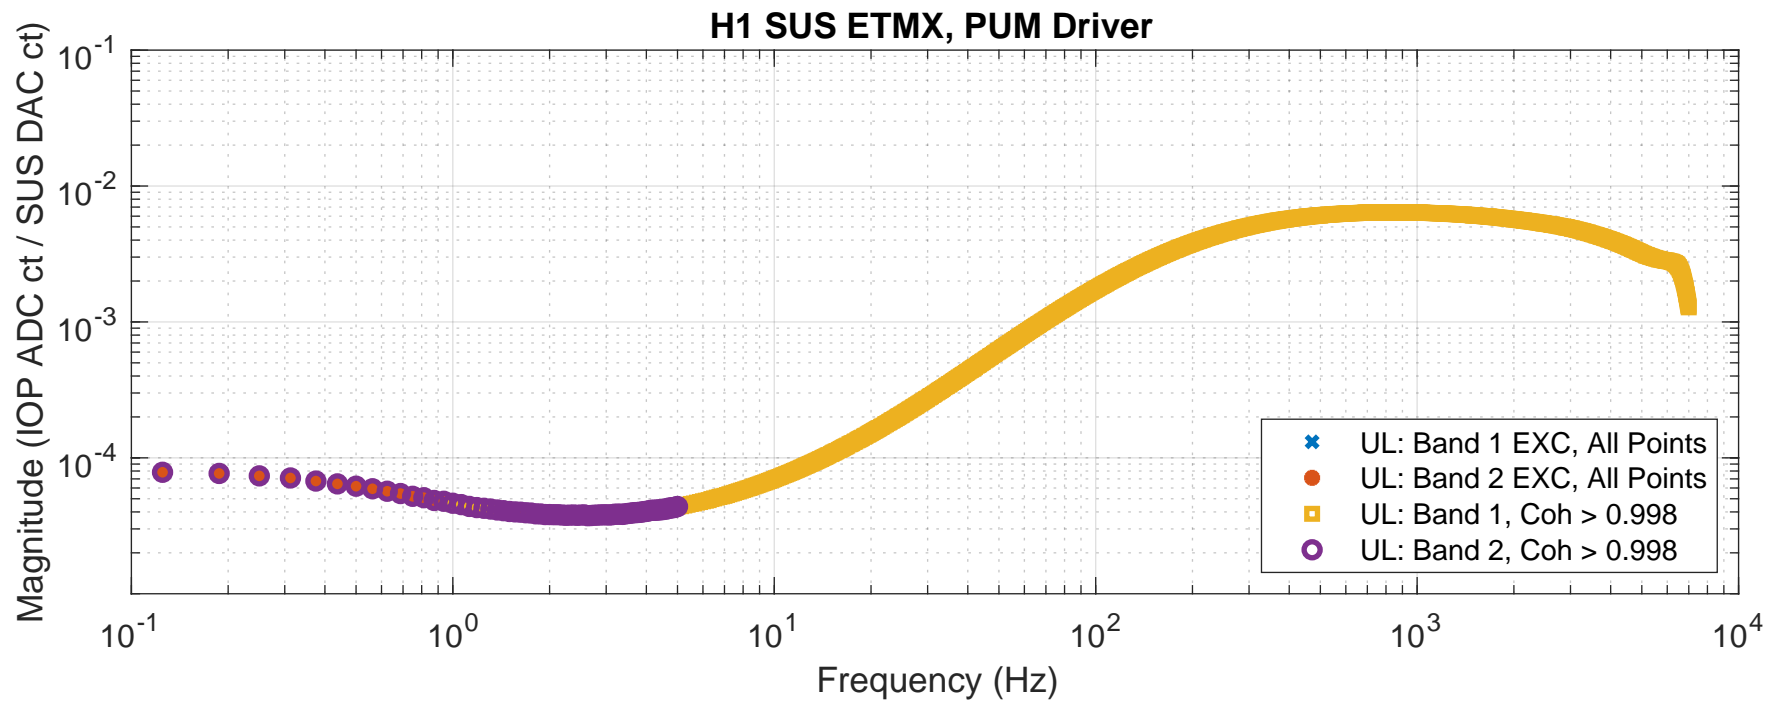  


H1 SUS ETMX, PUM Driver

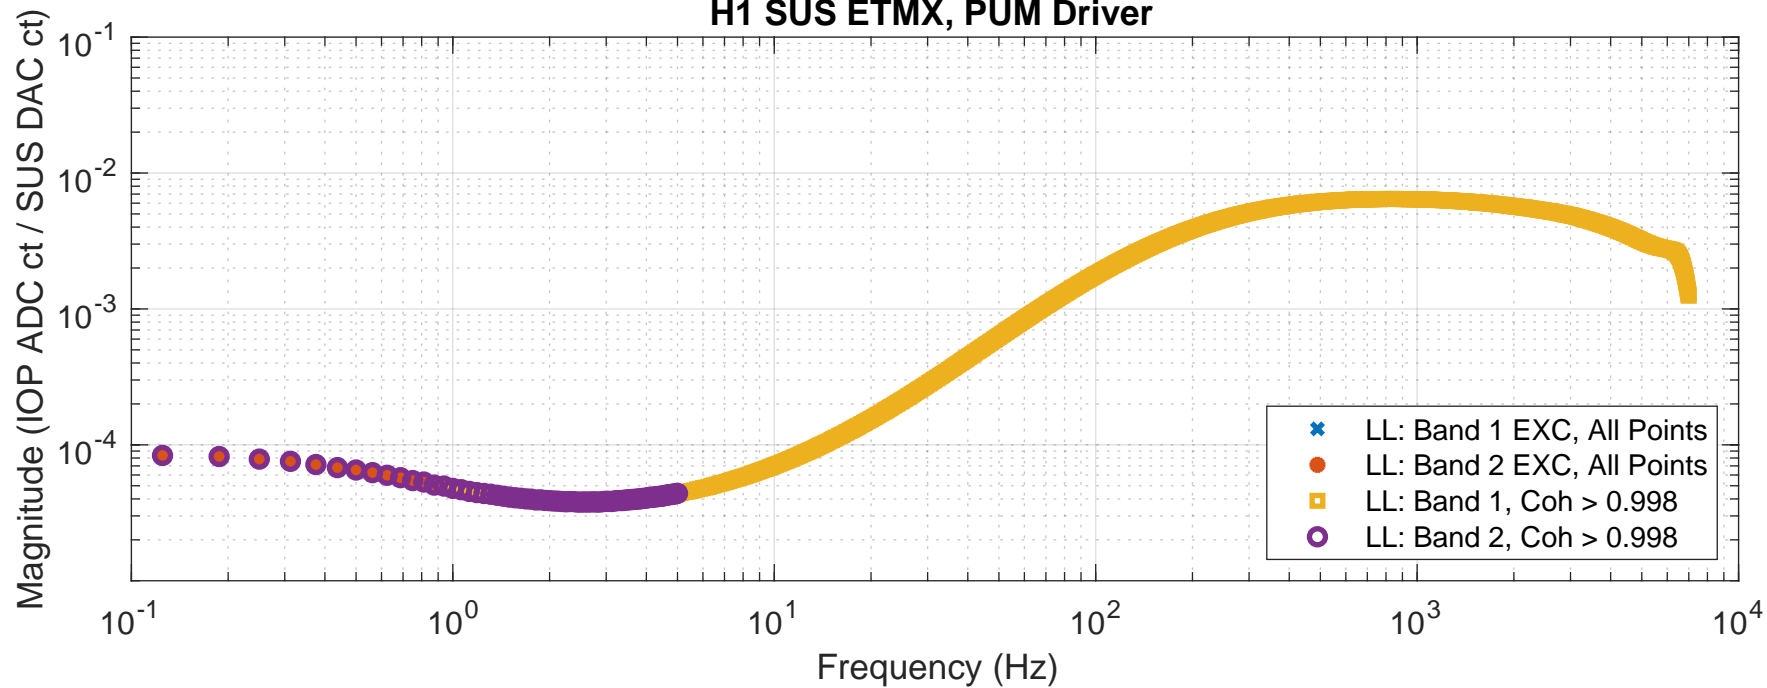 


State 4

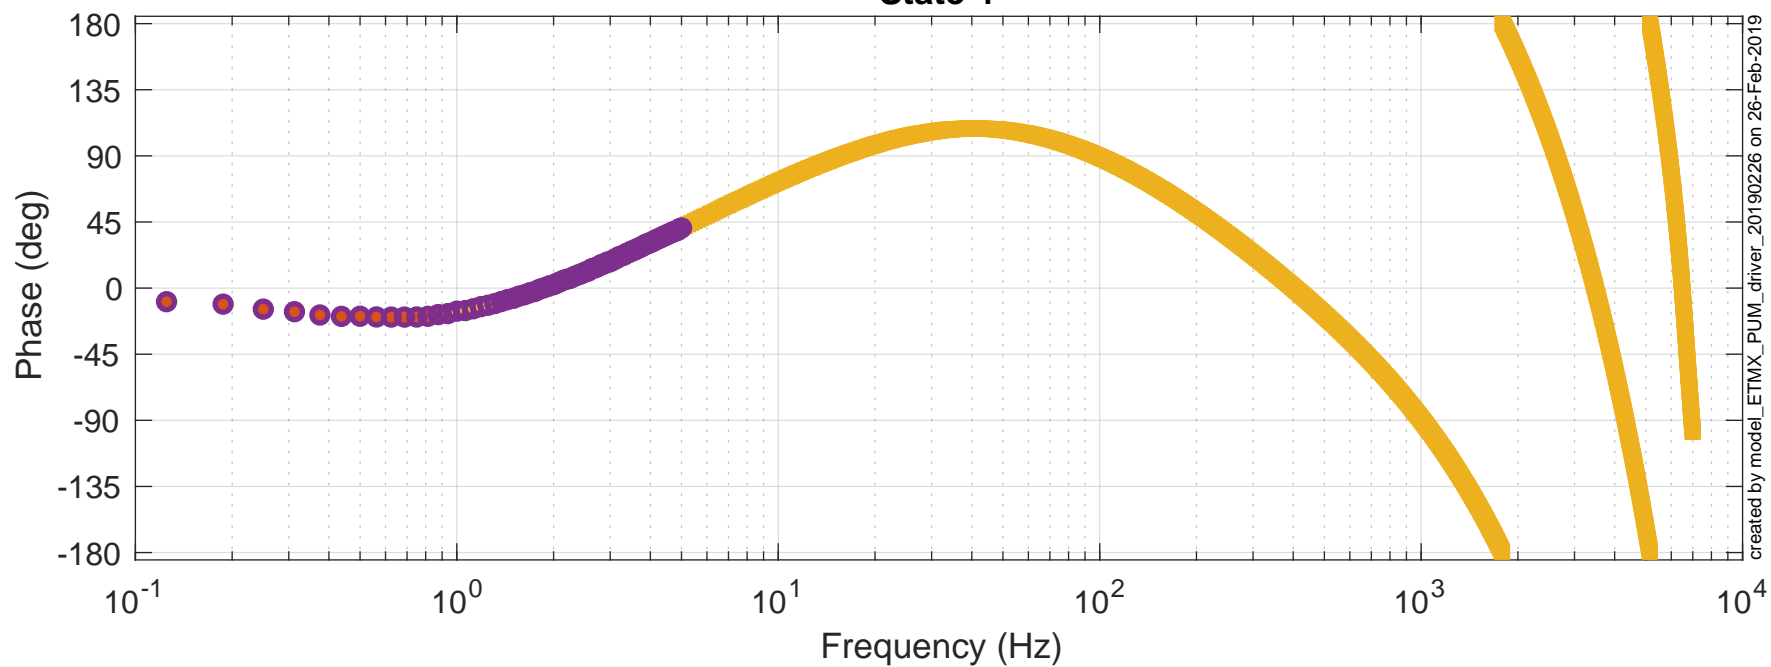 


H1 SUS ETMX, PUM Driver

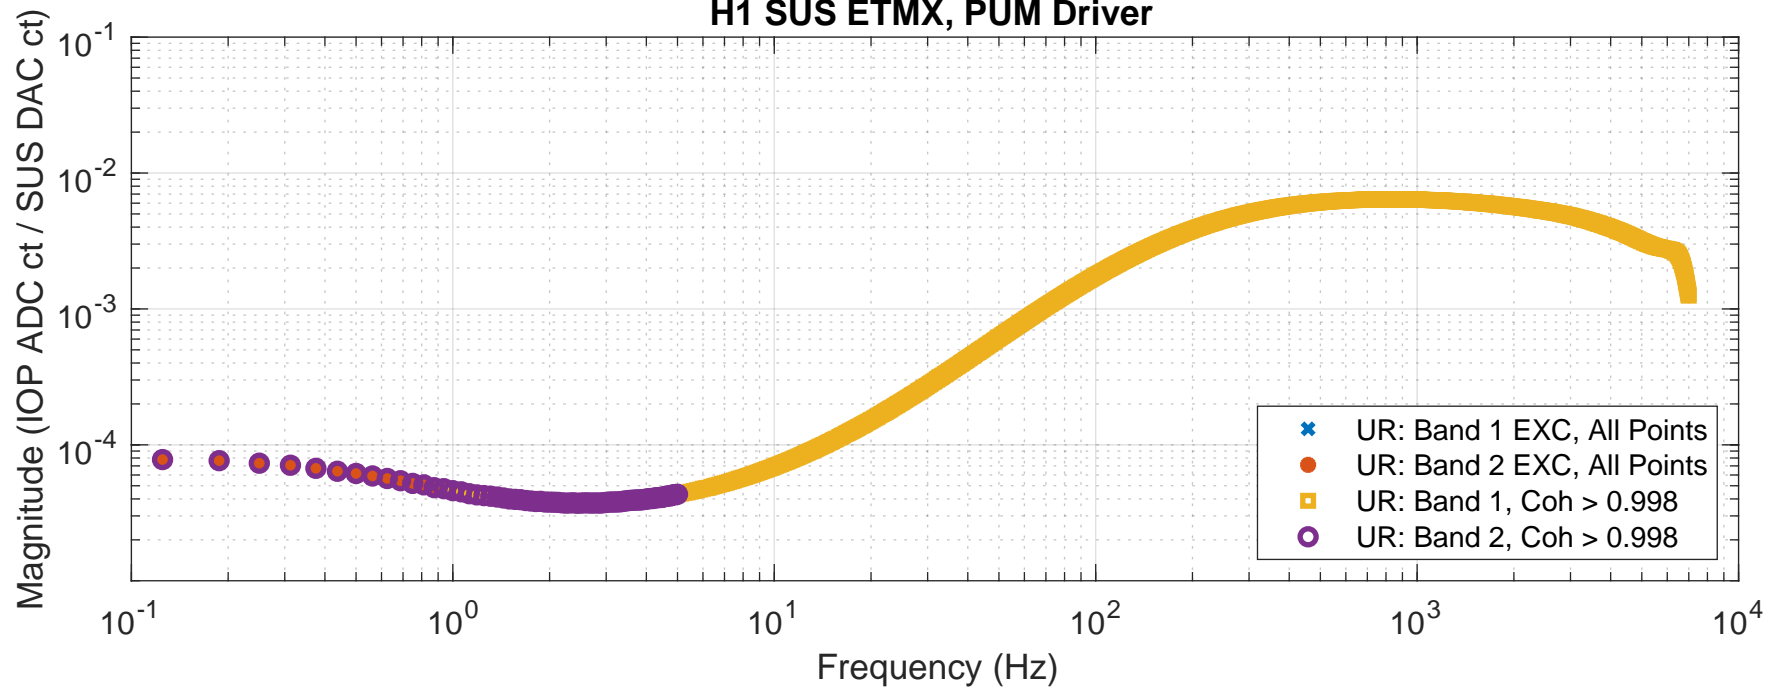 


State 4

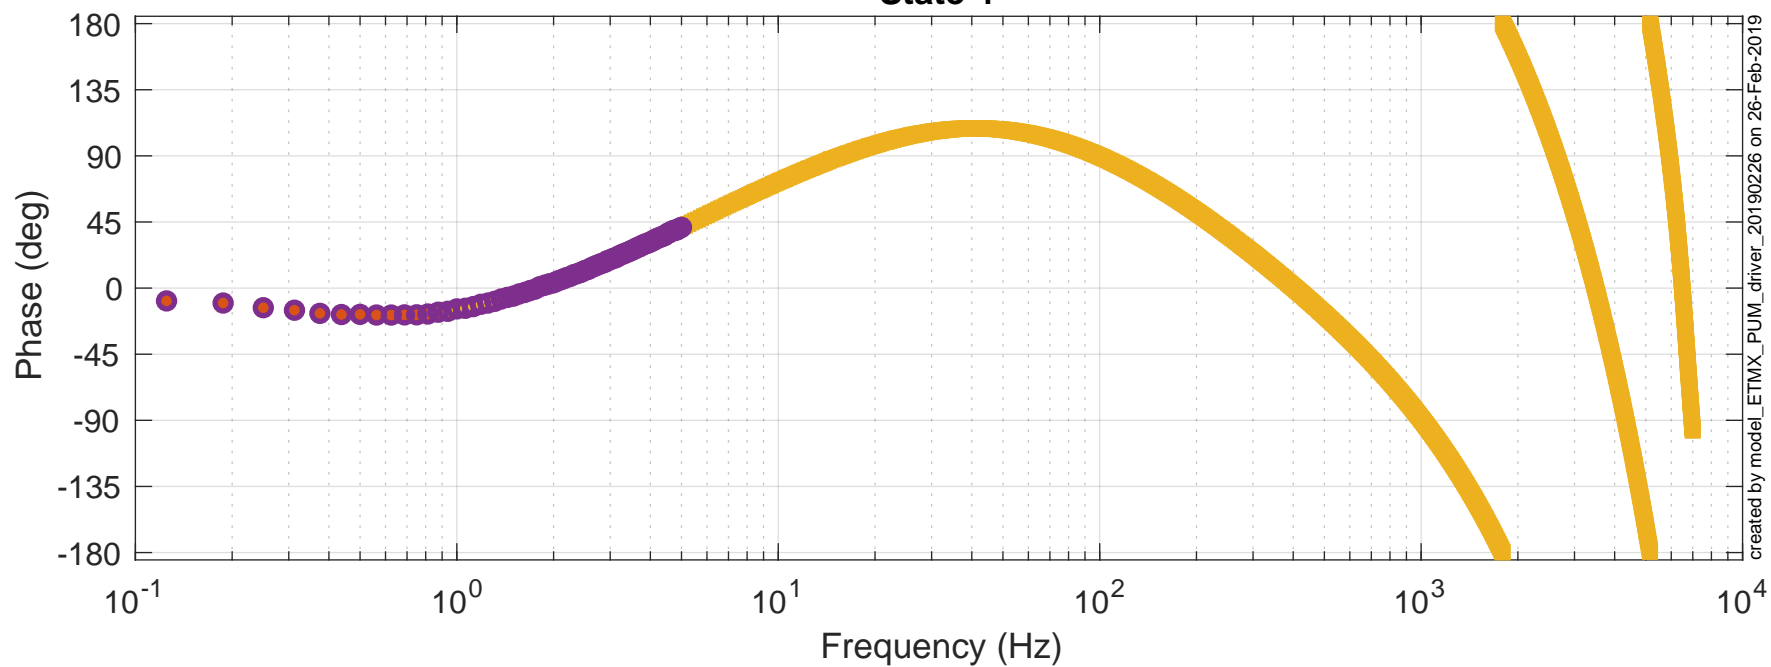 


H1 SUS ETMX, PUM Driver

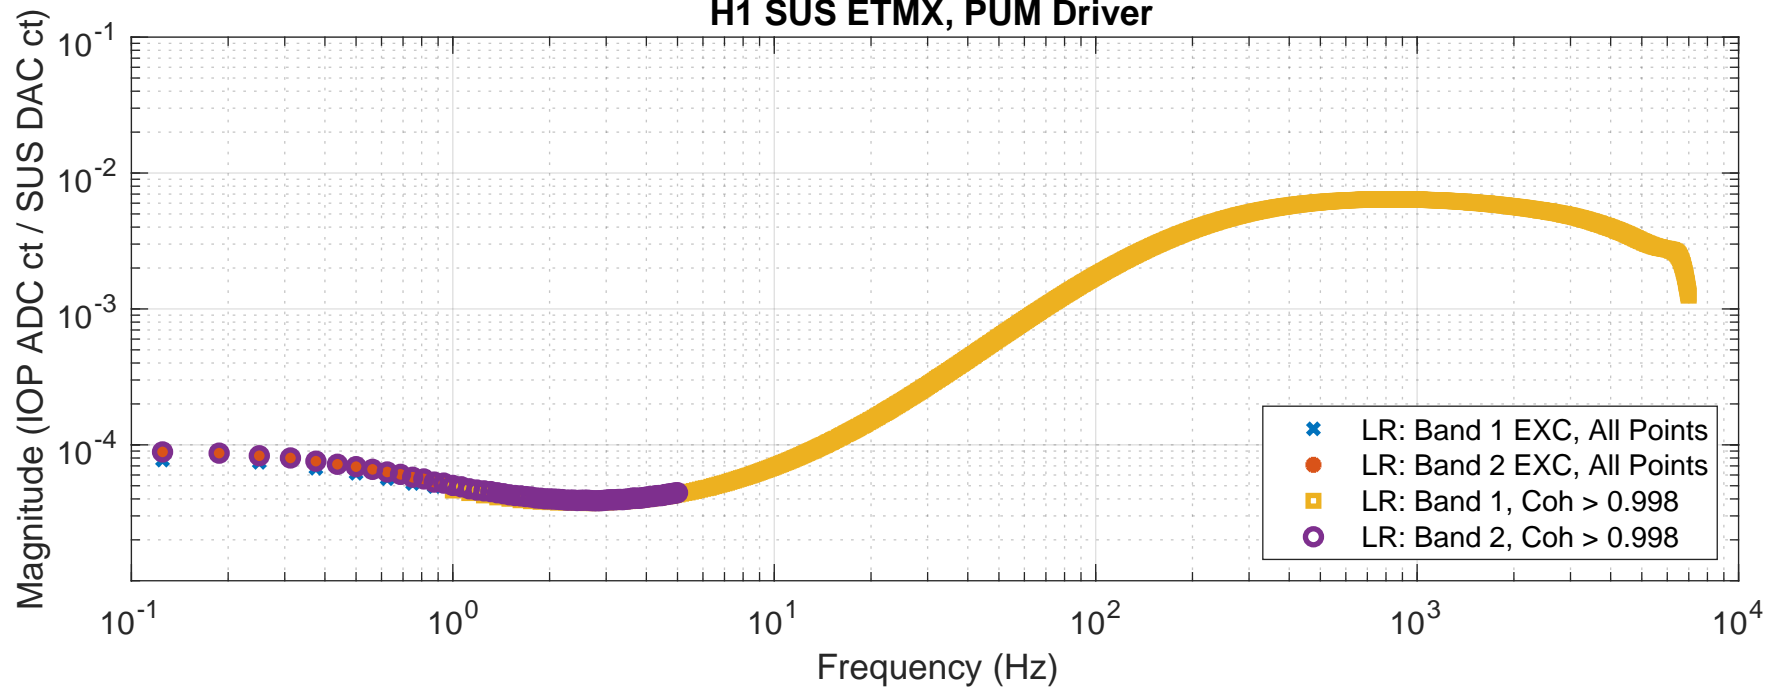 

State 4

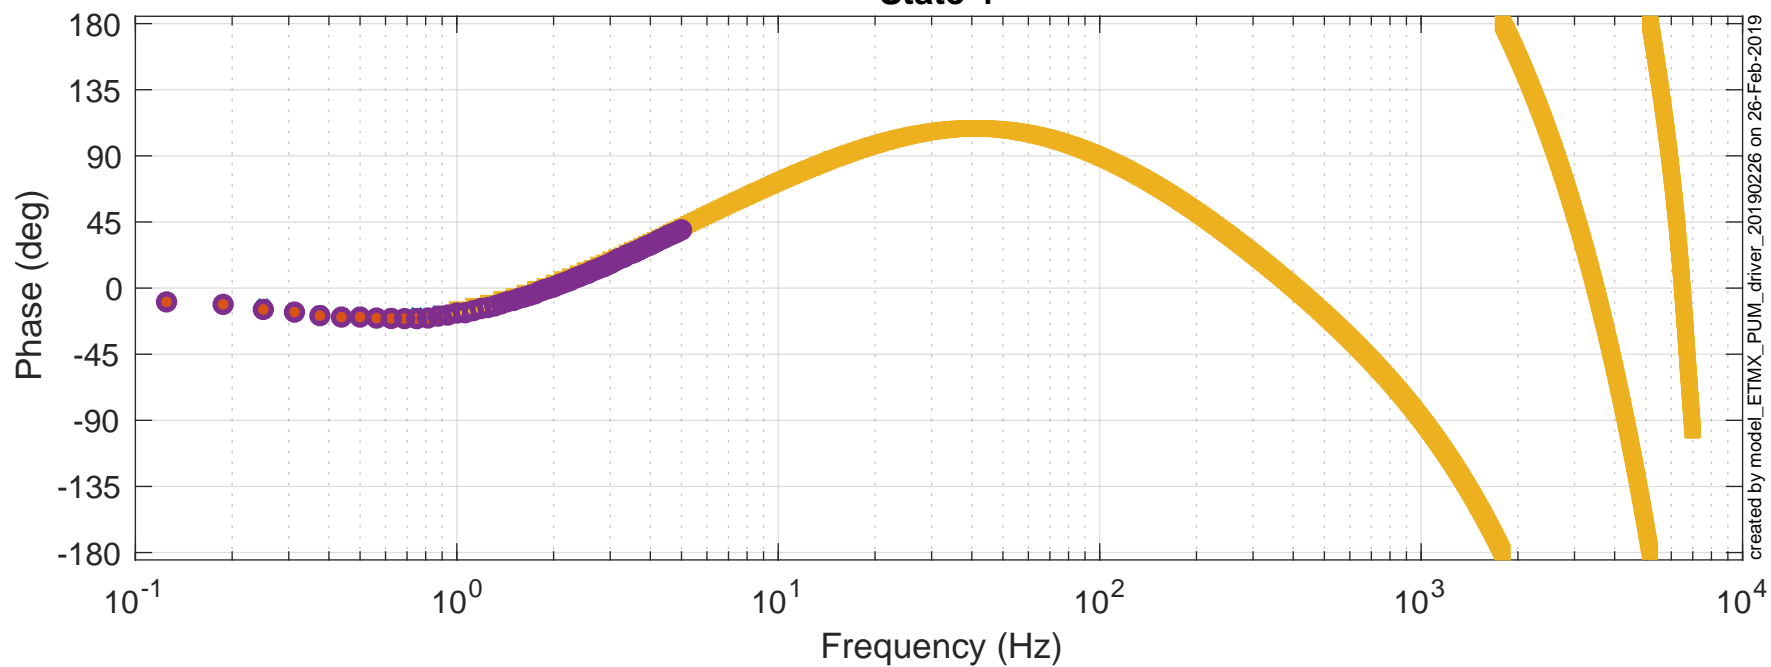 


 H1 SUS ETMX, PUM Driver
Coil: UL, State: 1

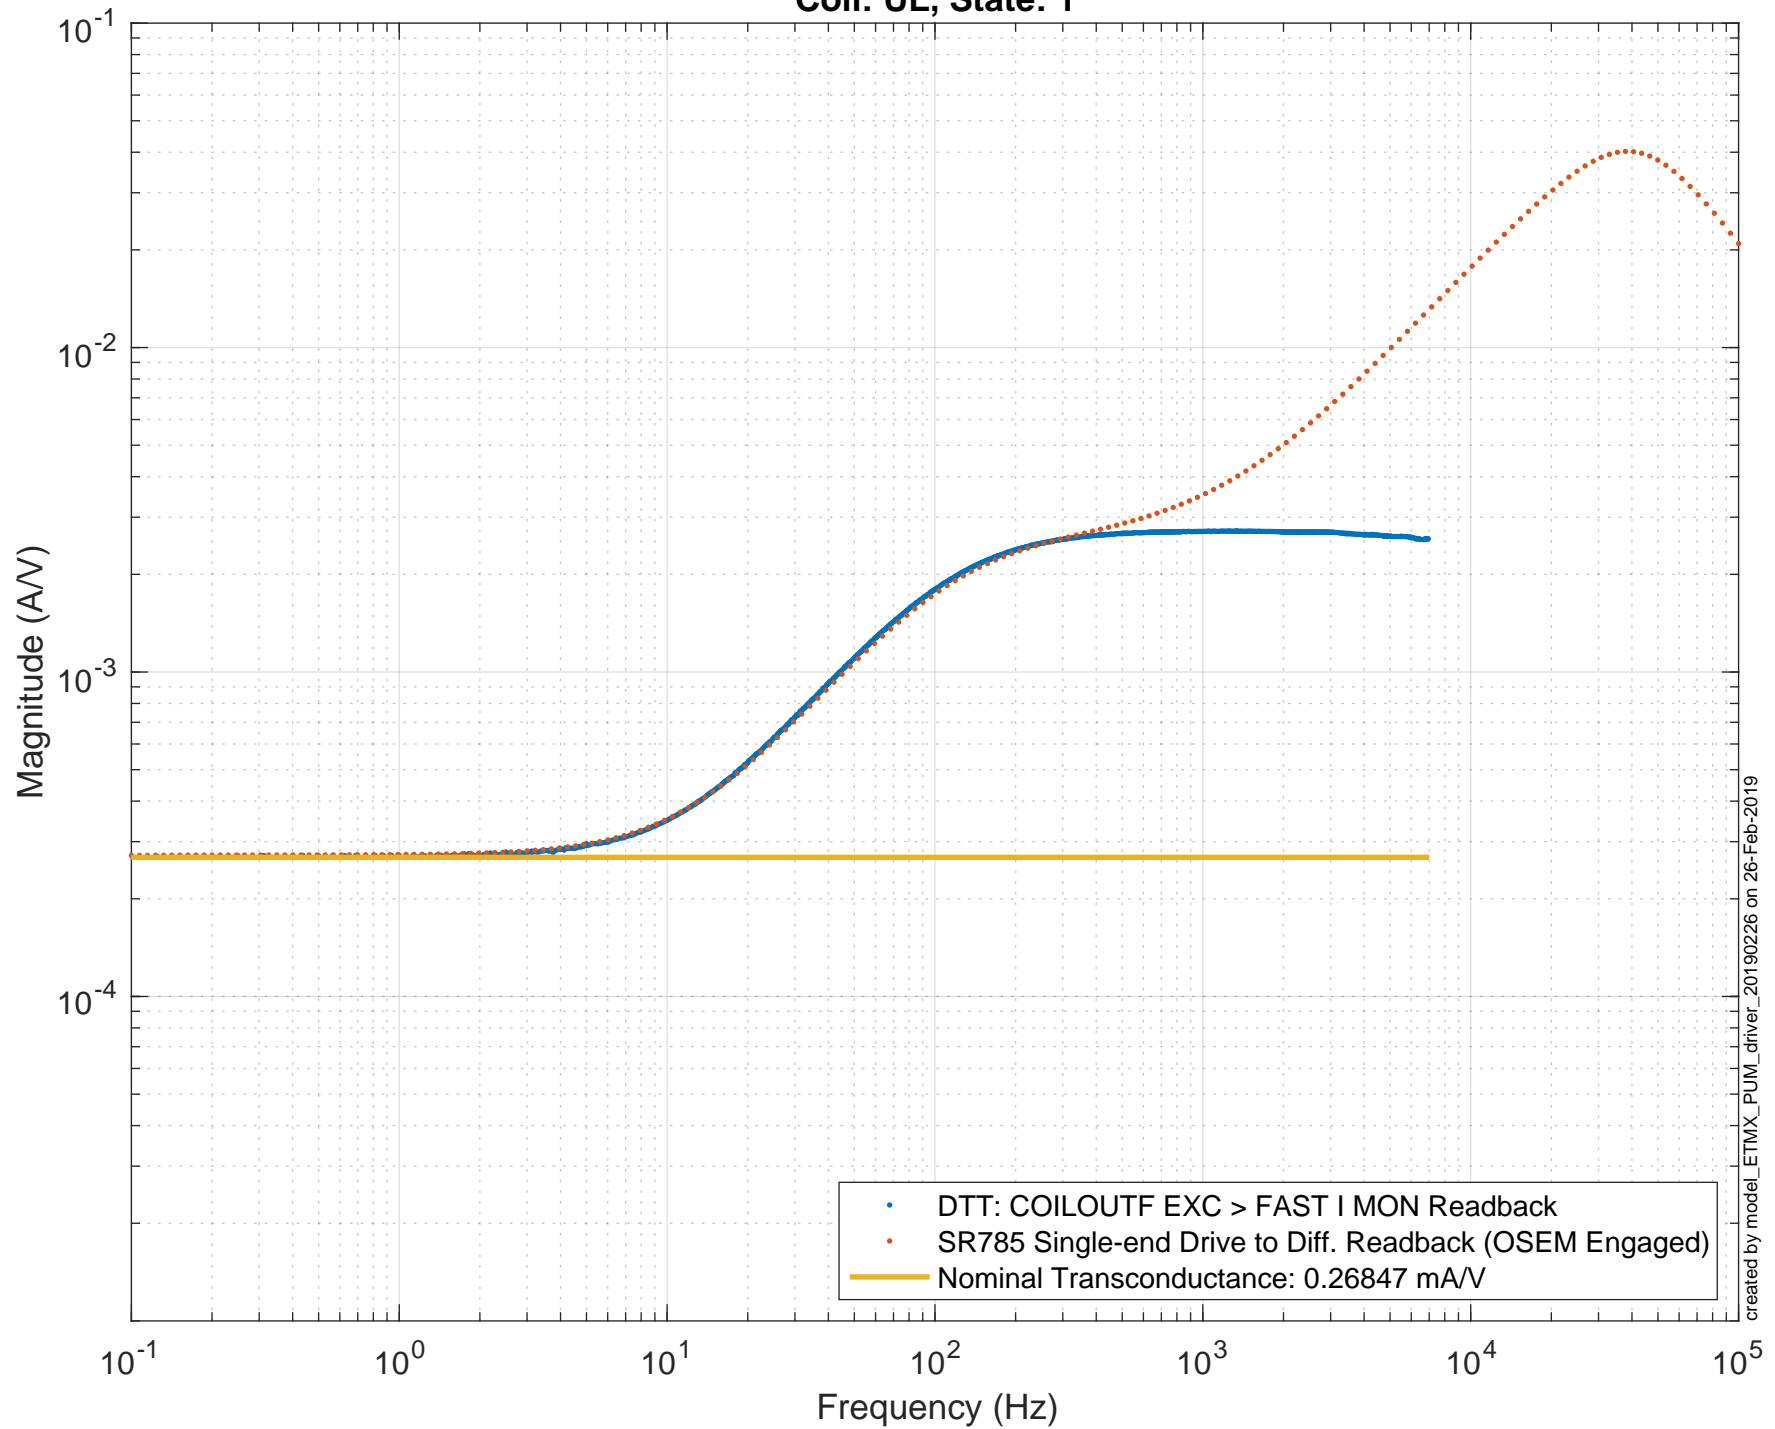


created by model_ETMX_PUM_driver_20190226 on 26-Feb-2019

 H1 SUS ETMX, PUM Driver
Coil: UL, State: 2

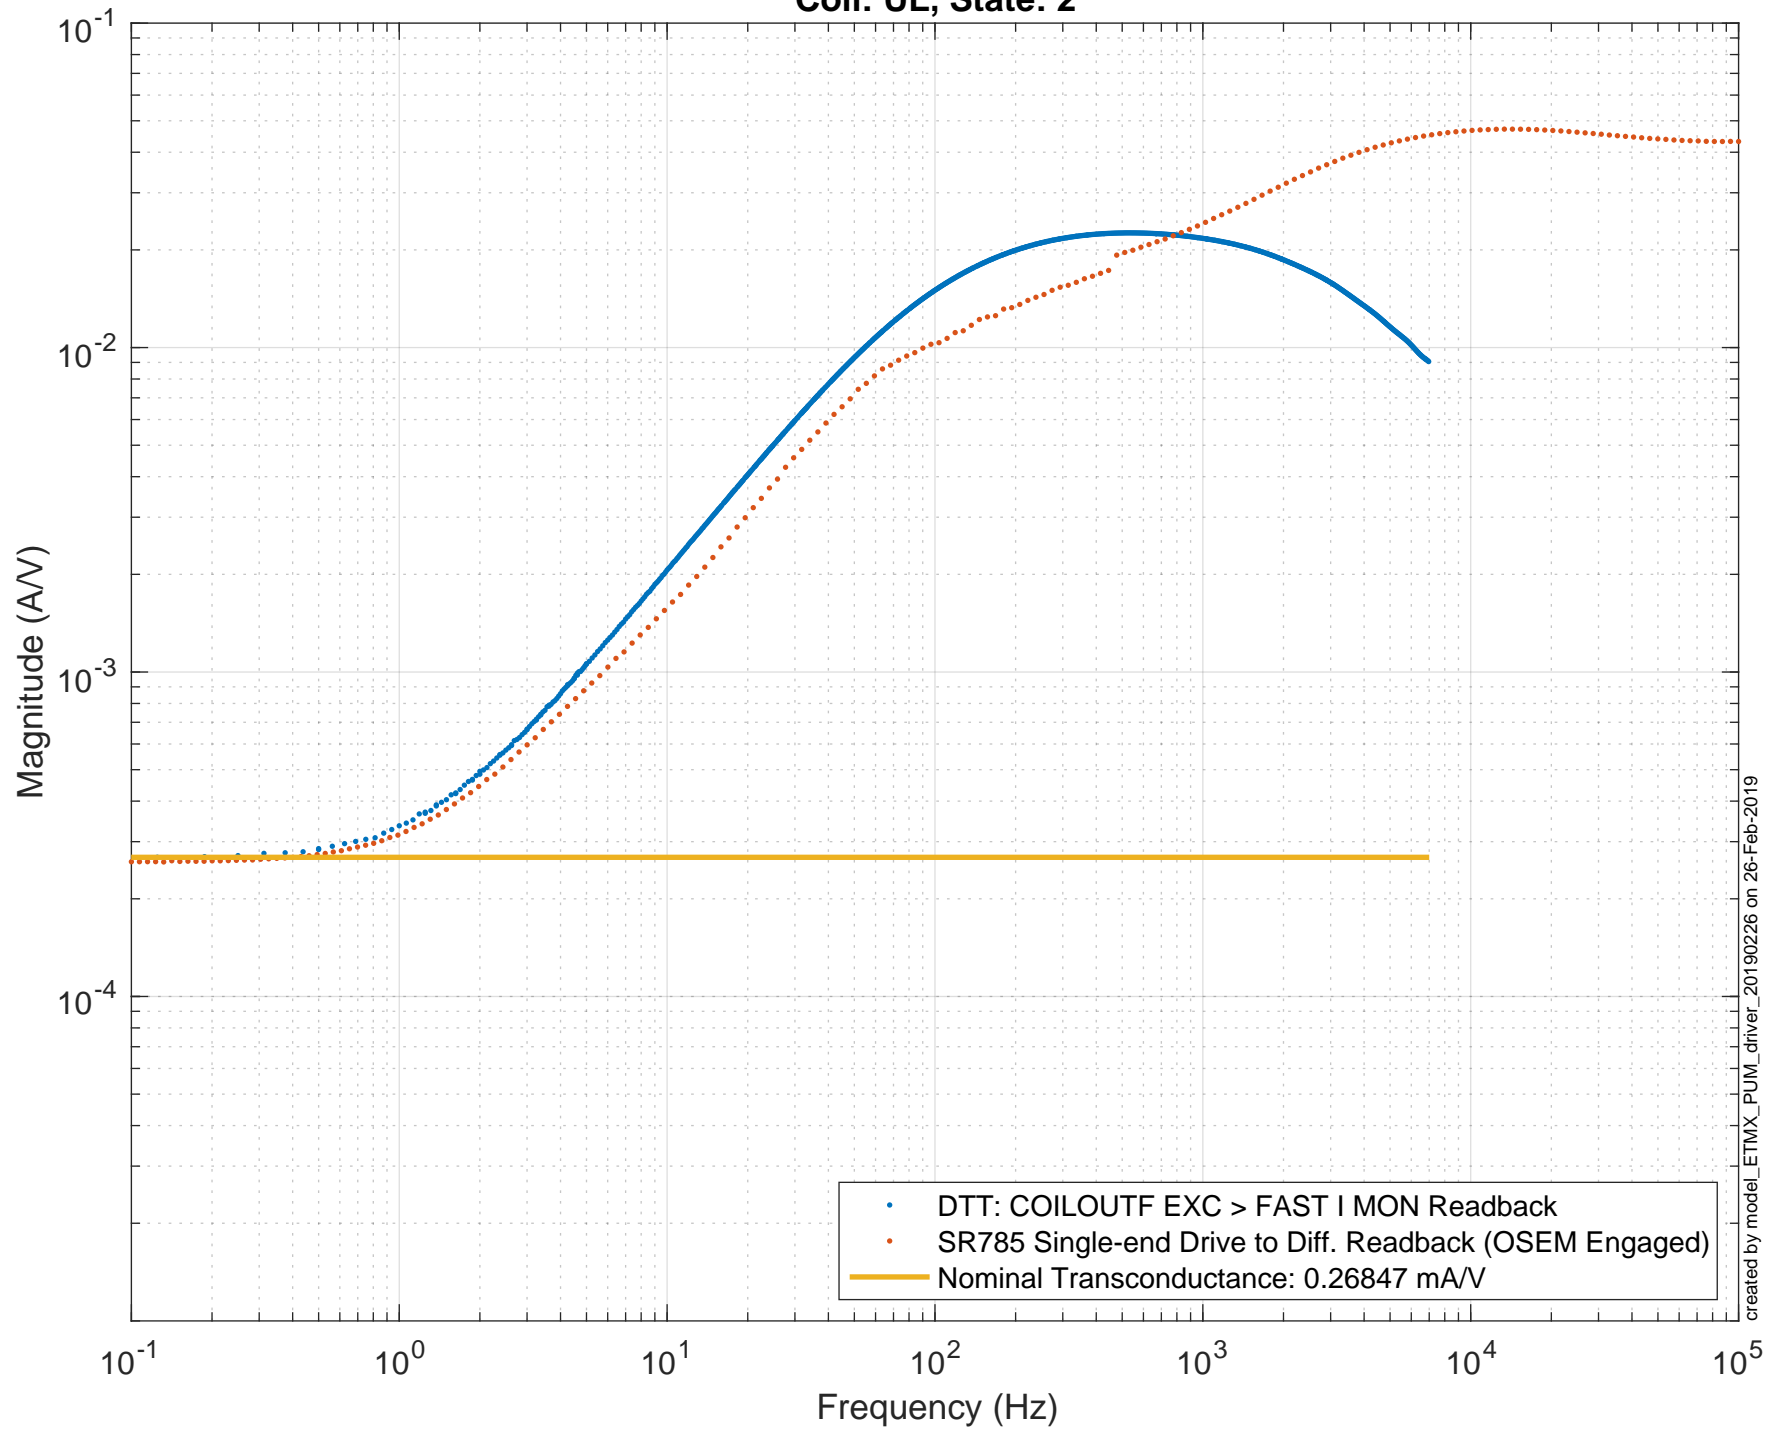


H1 SUS ETMX, PUM Driver

 Coil: UL, State: 3

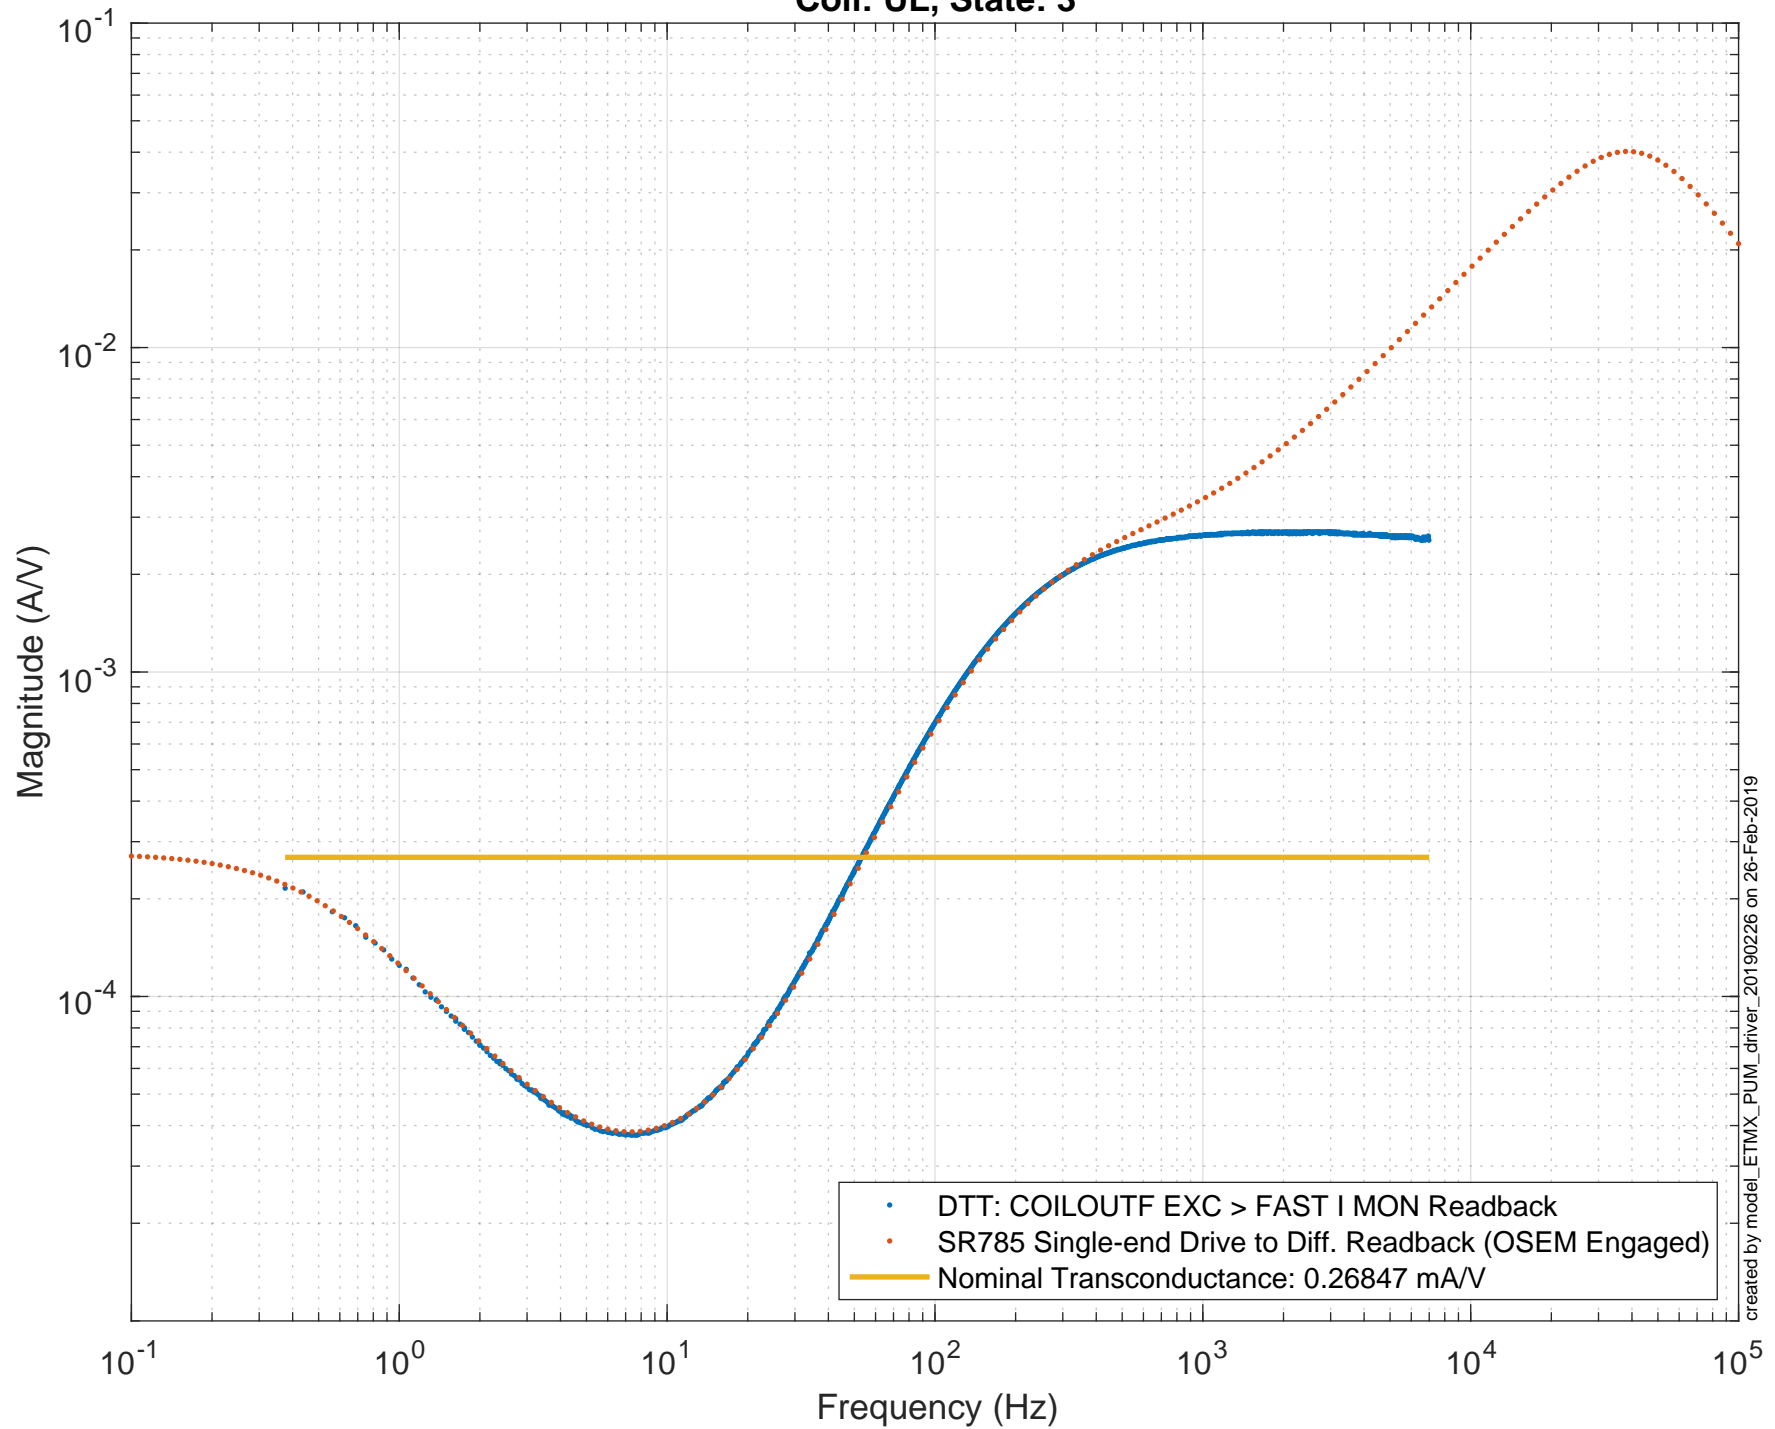


H1 SUS ETMX, PUM Driver

 Coil: UL, State: 4

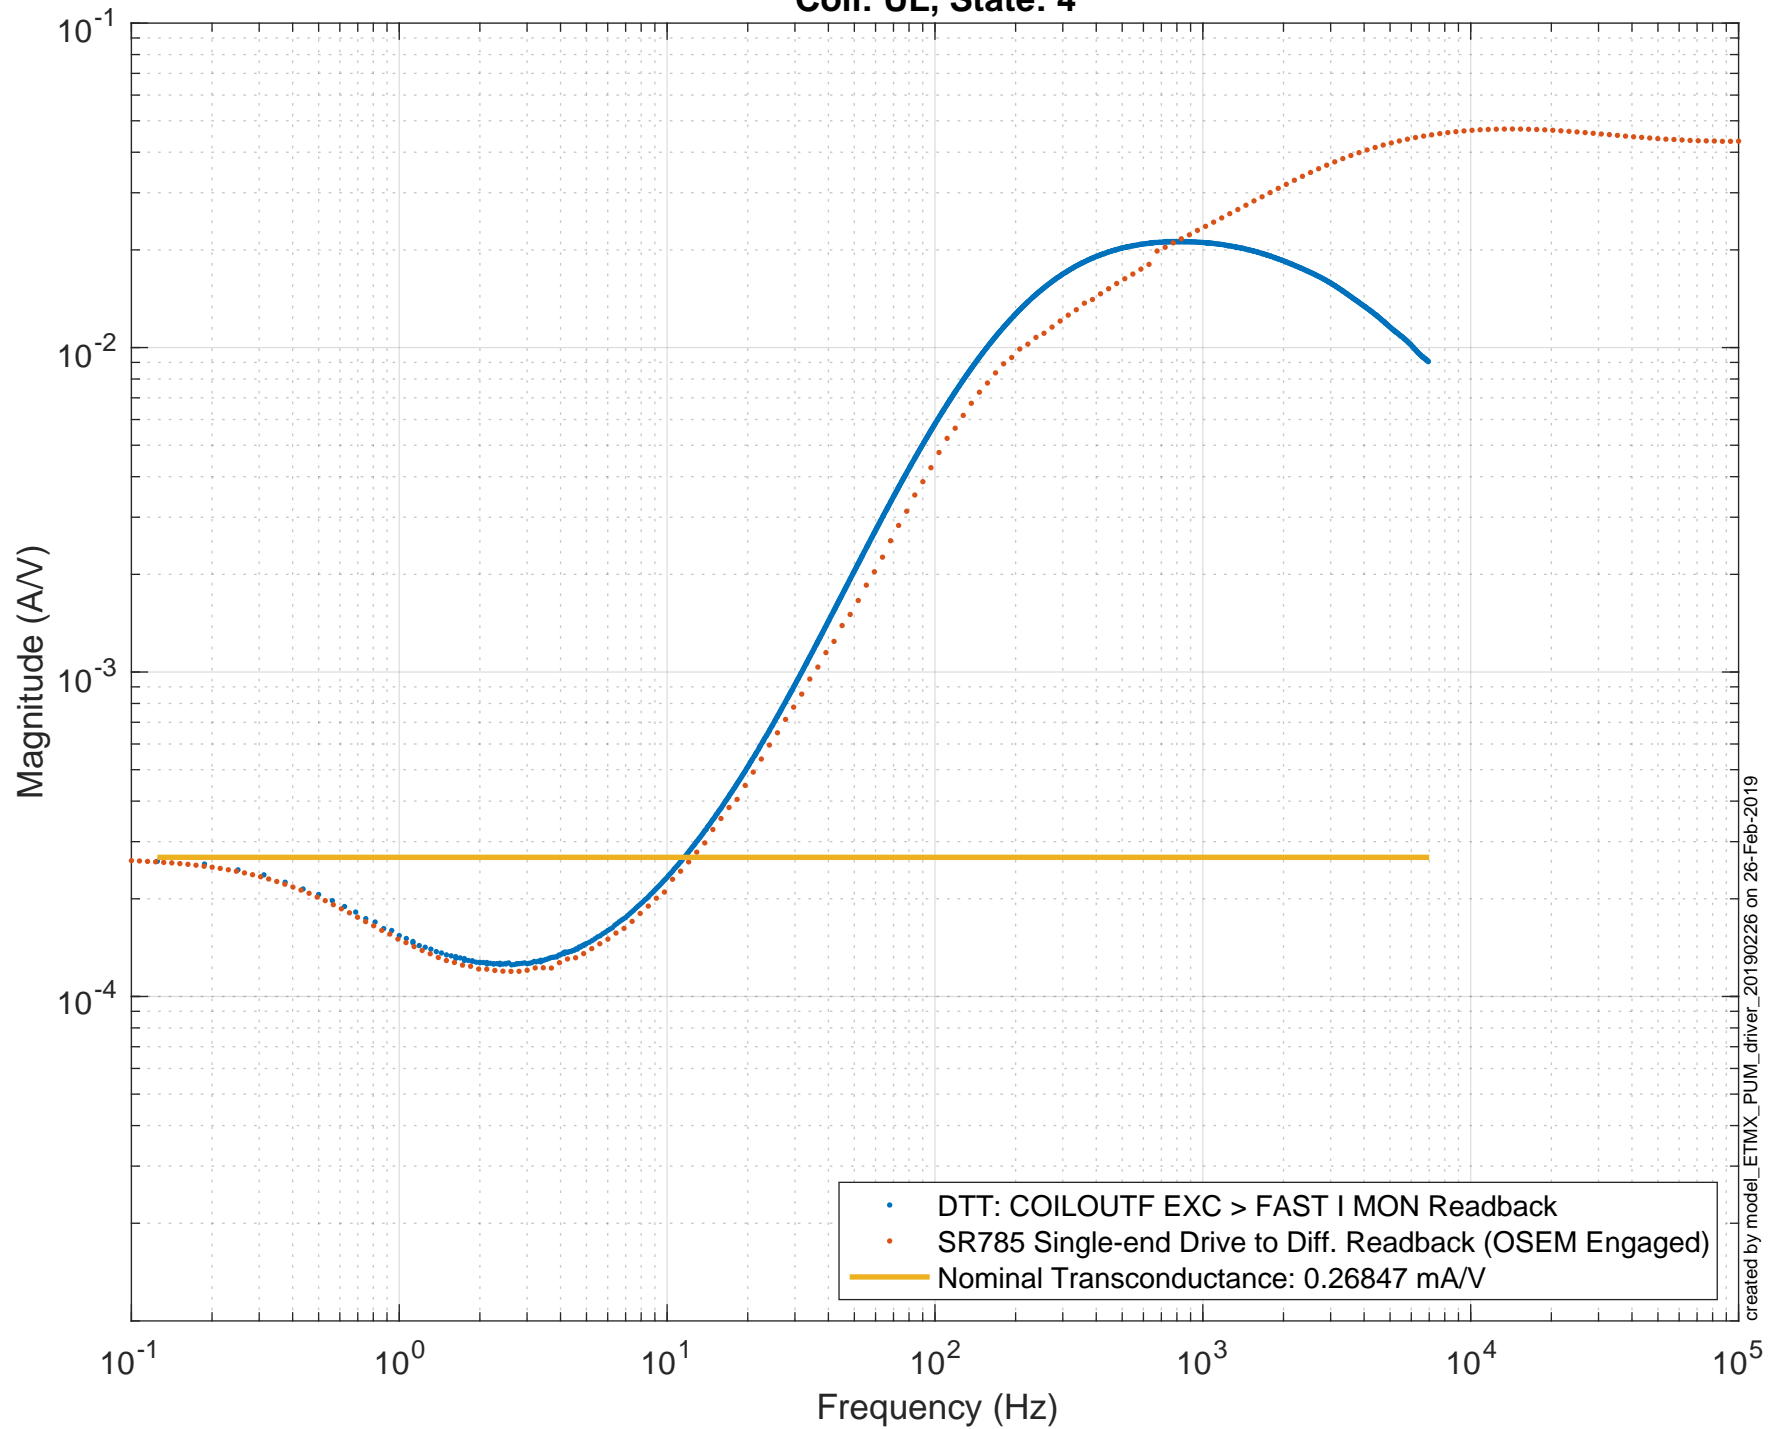


H1 SUS ETMX, PUM Driver

 Coil: LL, State: 1

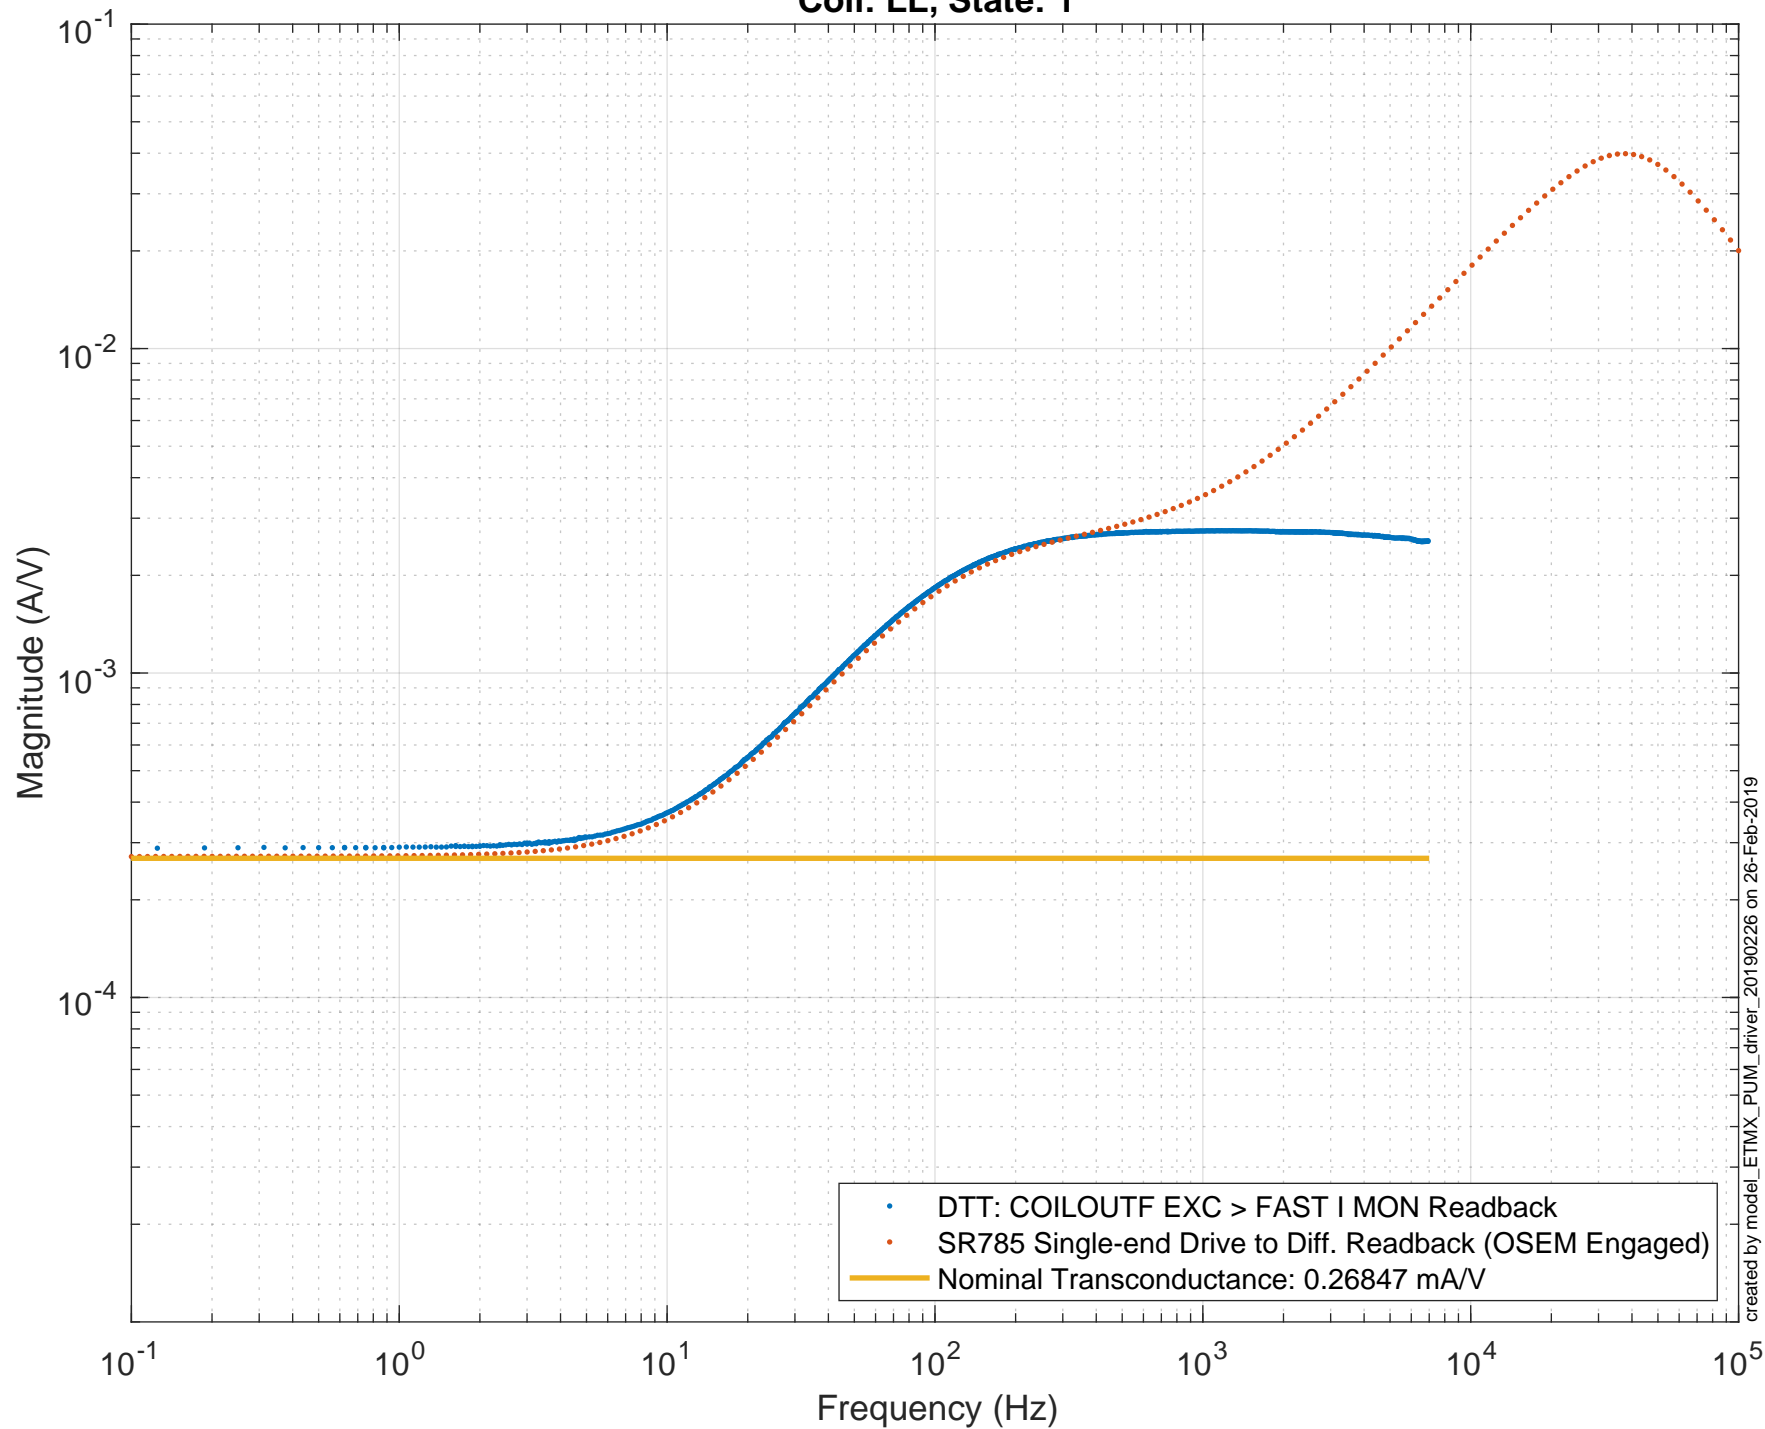


H1 SUS ETMX, PUM Driver

 Coil: LL, State: 2

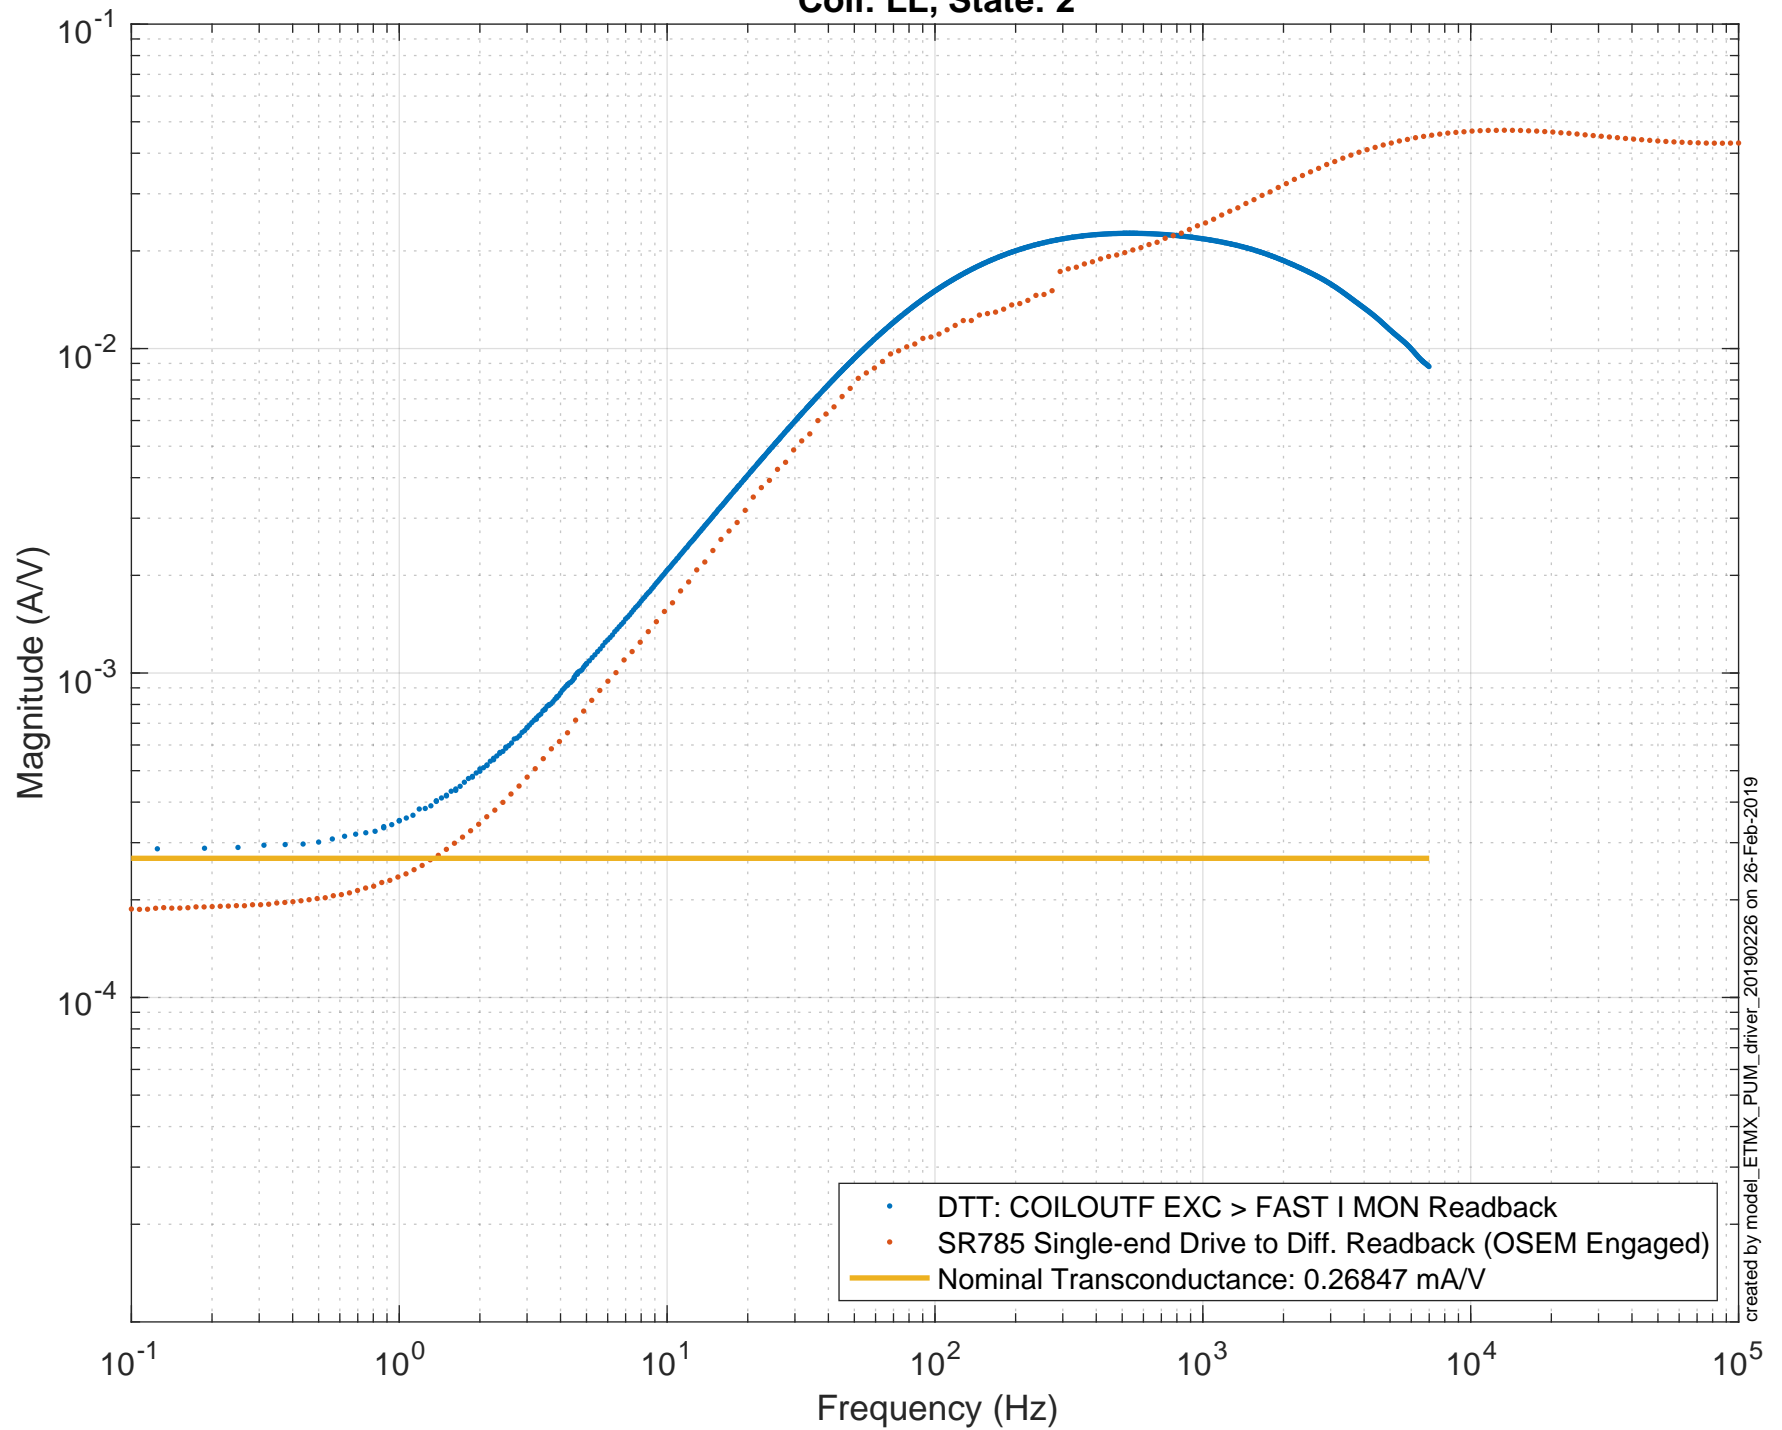


H1 SUS ETMX, PUM Driver

 Coil: LL, State: 3

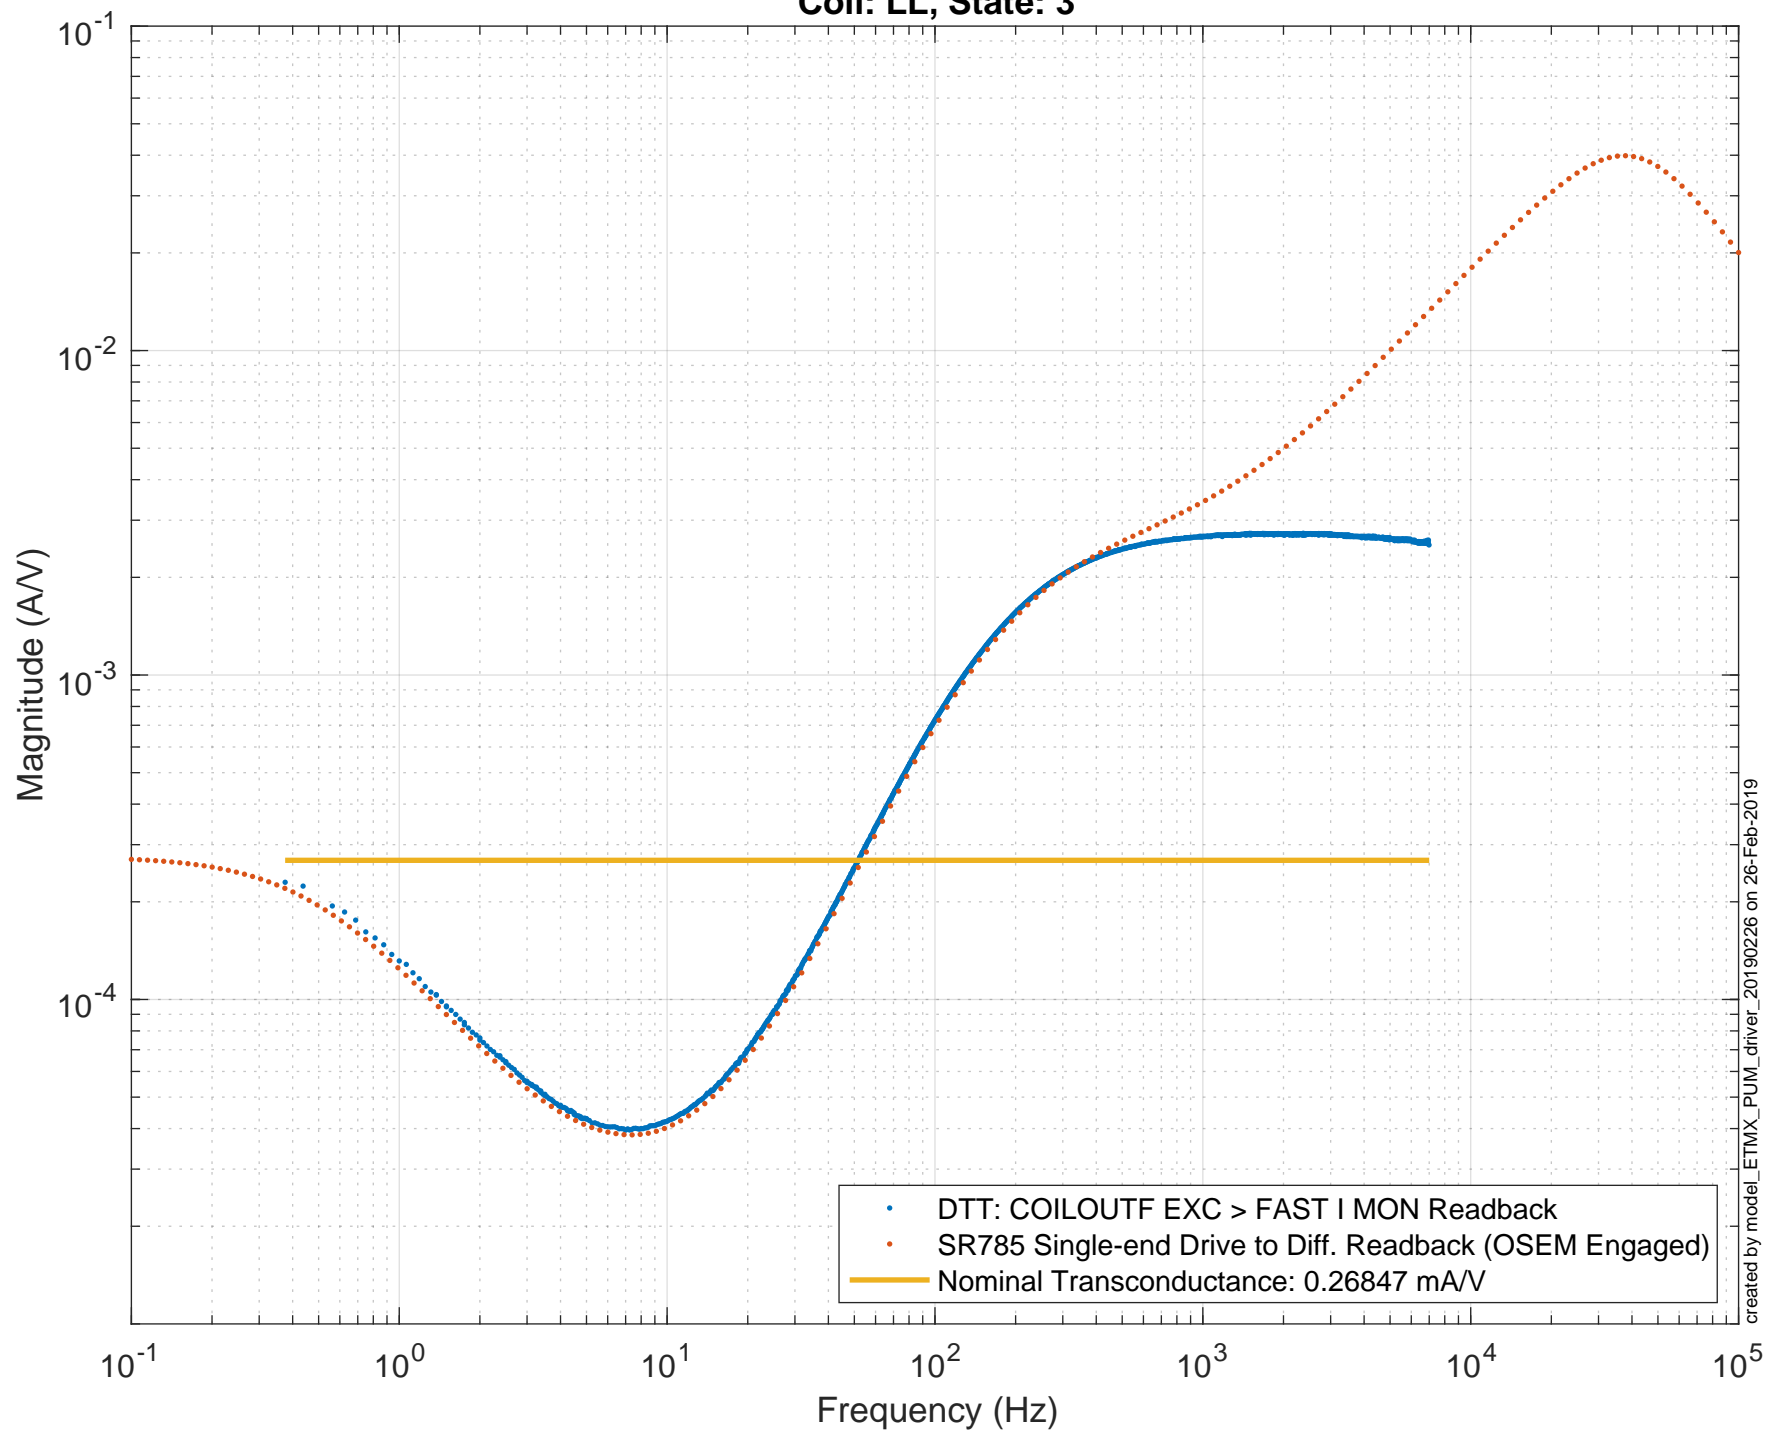


 H1 SUS ETMX, PUM Driver
Coil: LL, State: 4

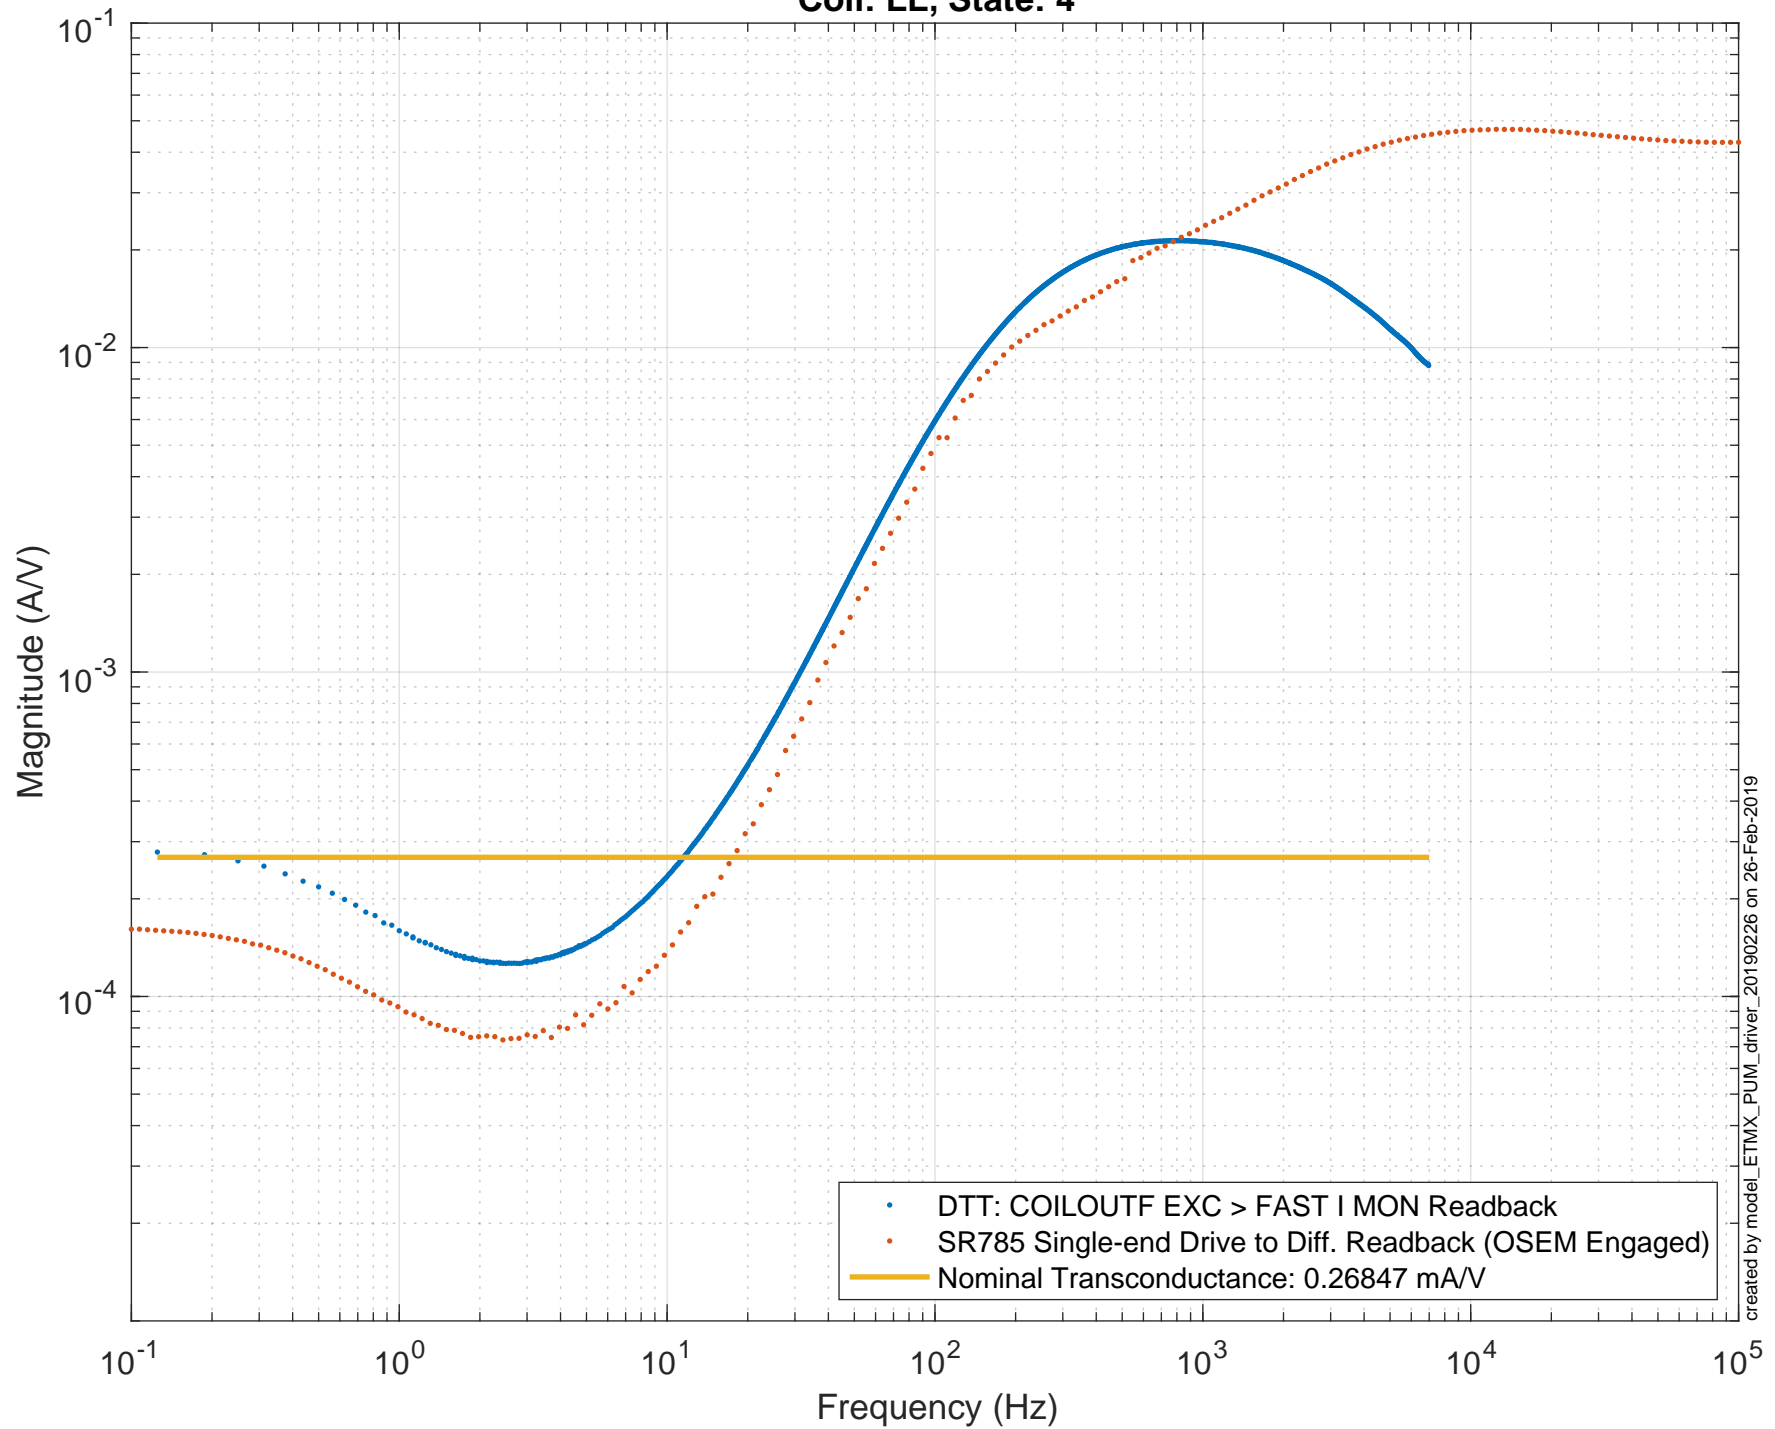


H1 SUS ETMX, PUM Driver

 Coil: UR, State: 1

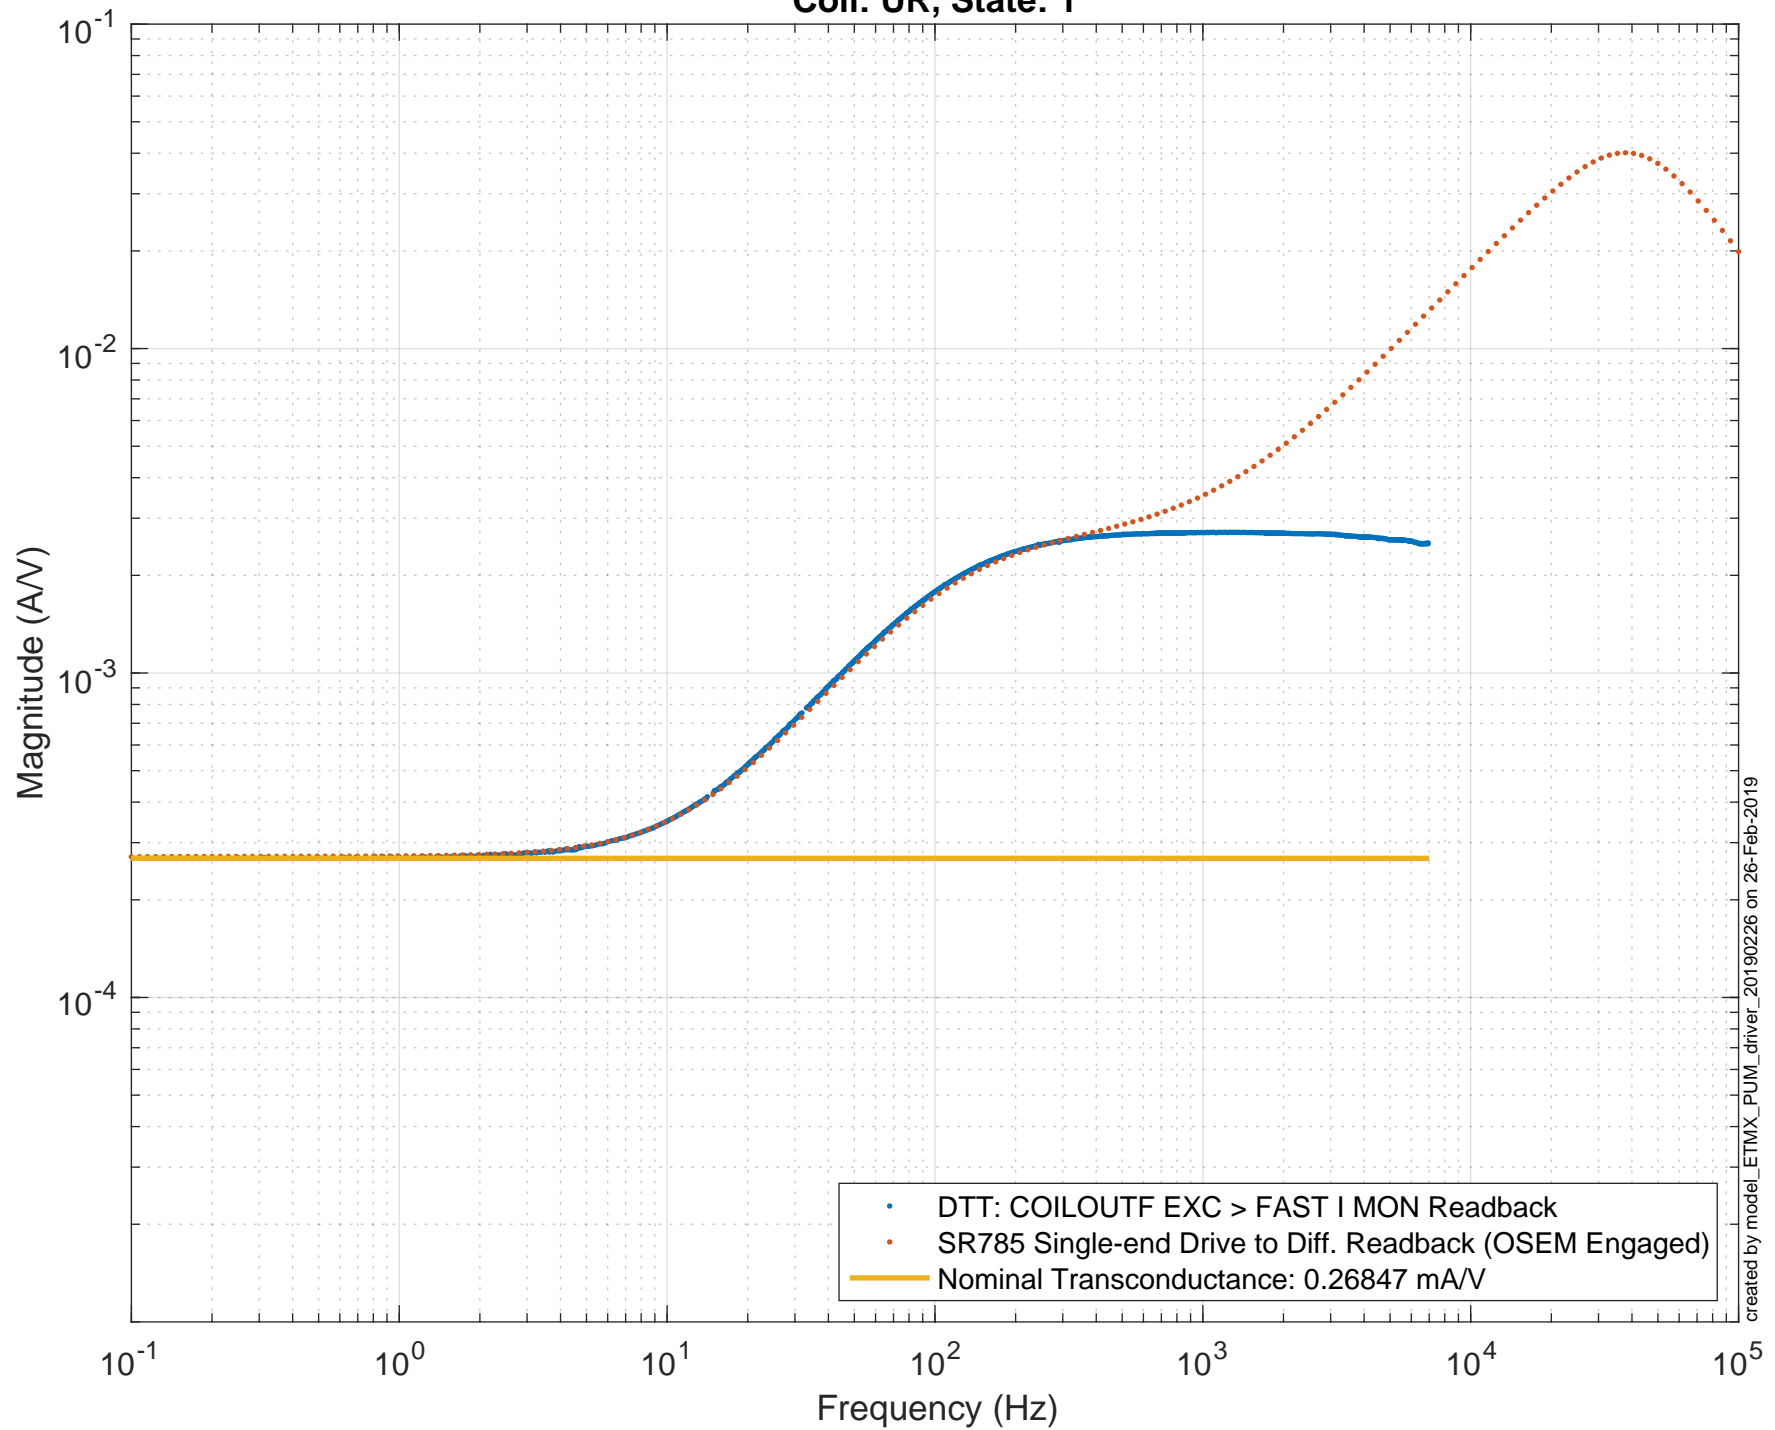


H1 SUS ETMX, PUM Driver

 Coil: UR, State: 2

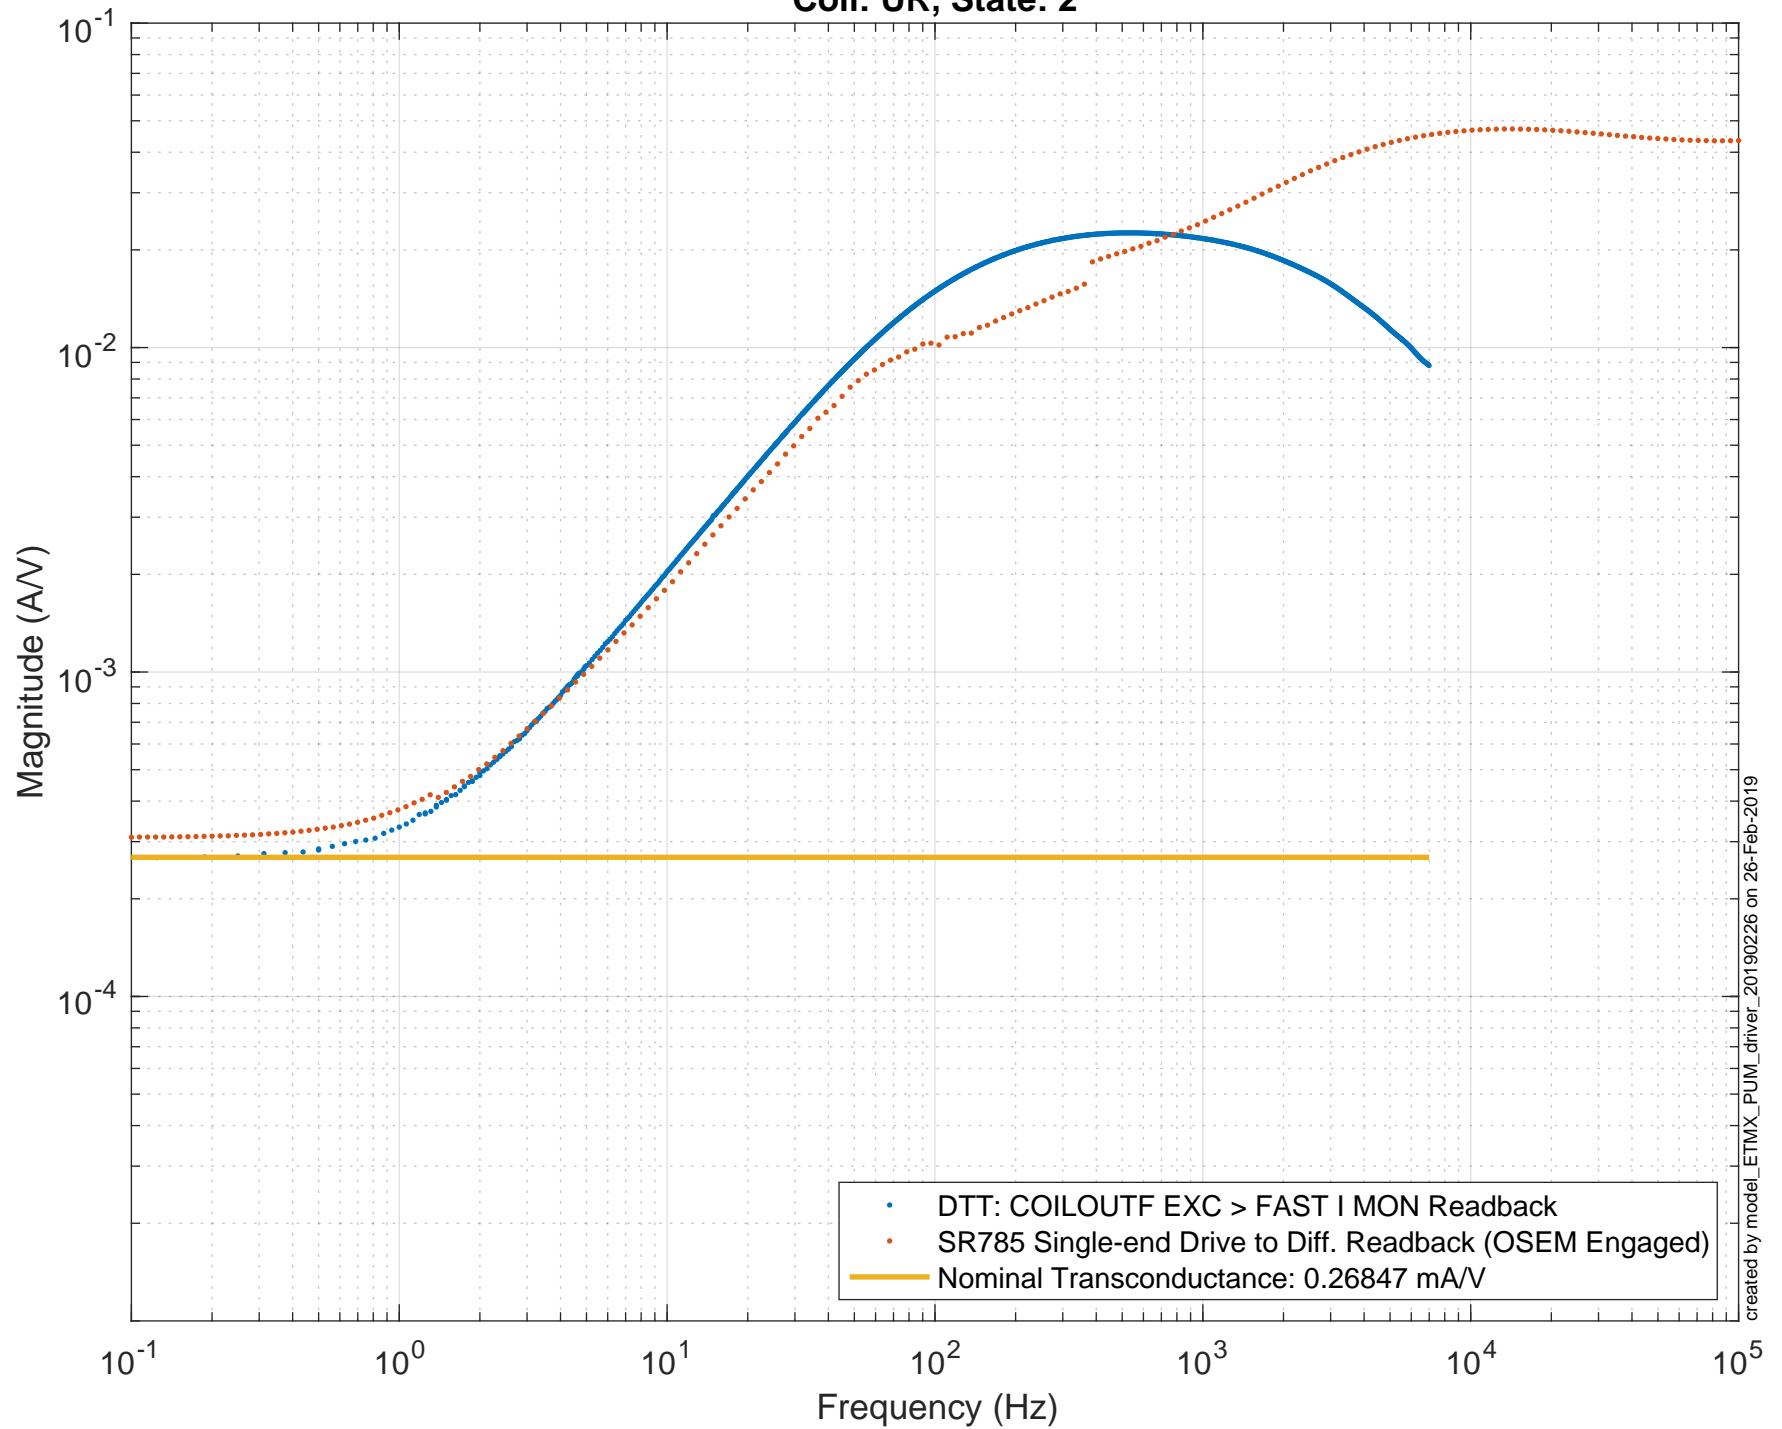


H1 SUS ETMX, PUM Driver

 Coil: UR, State: 3

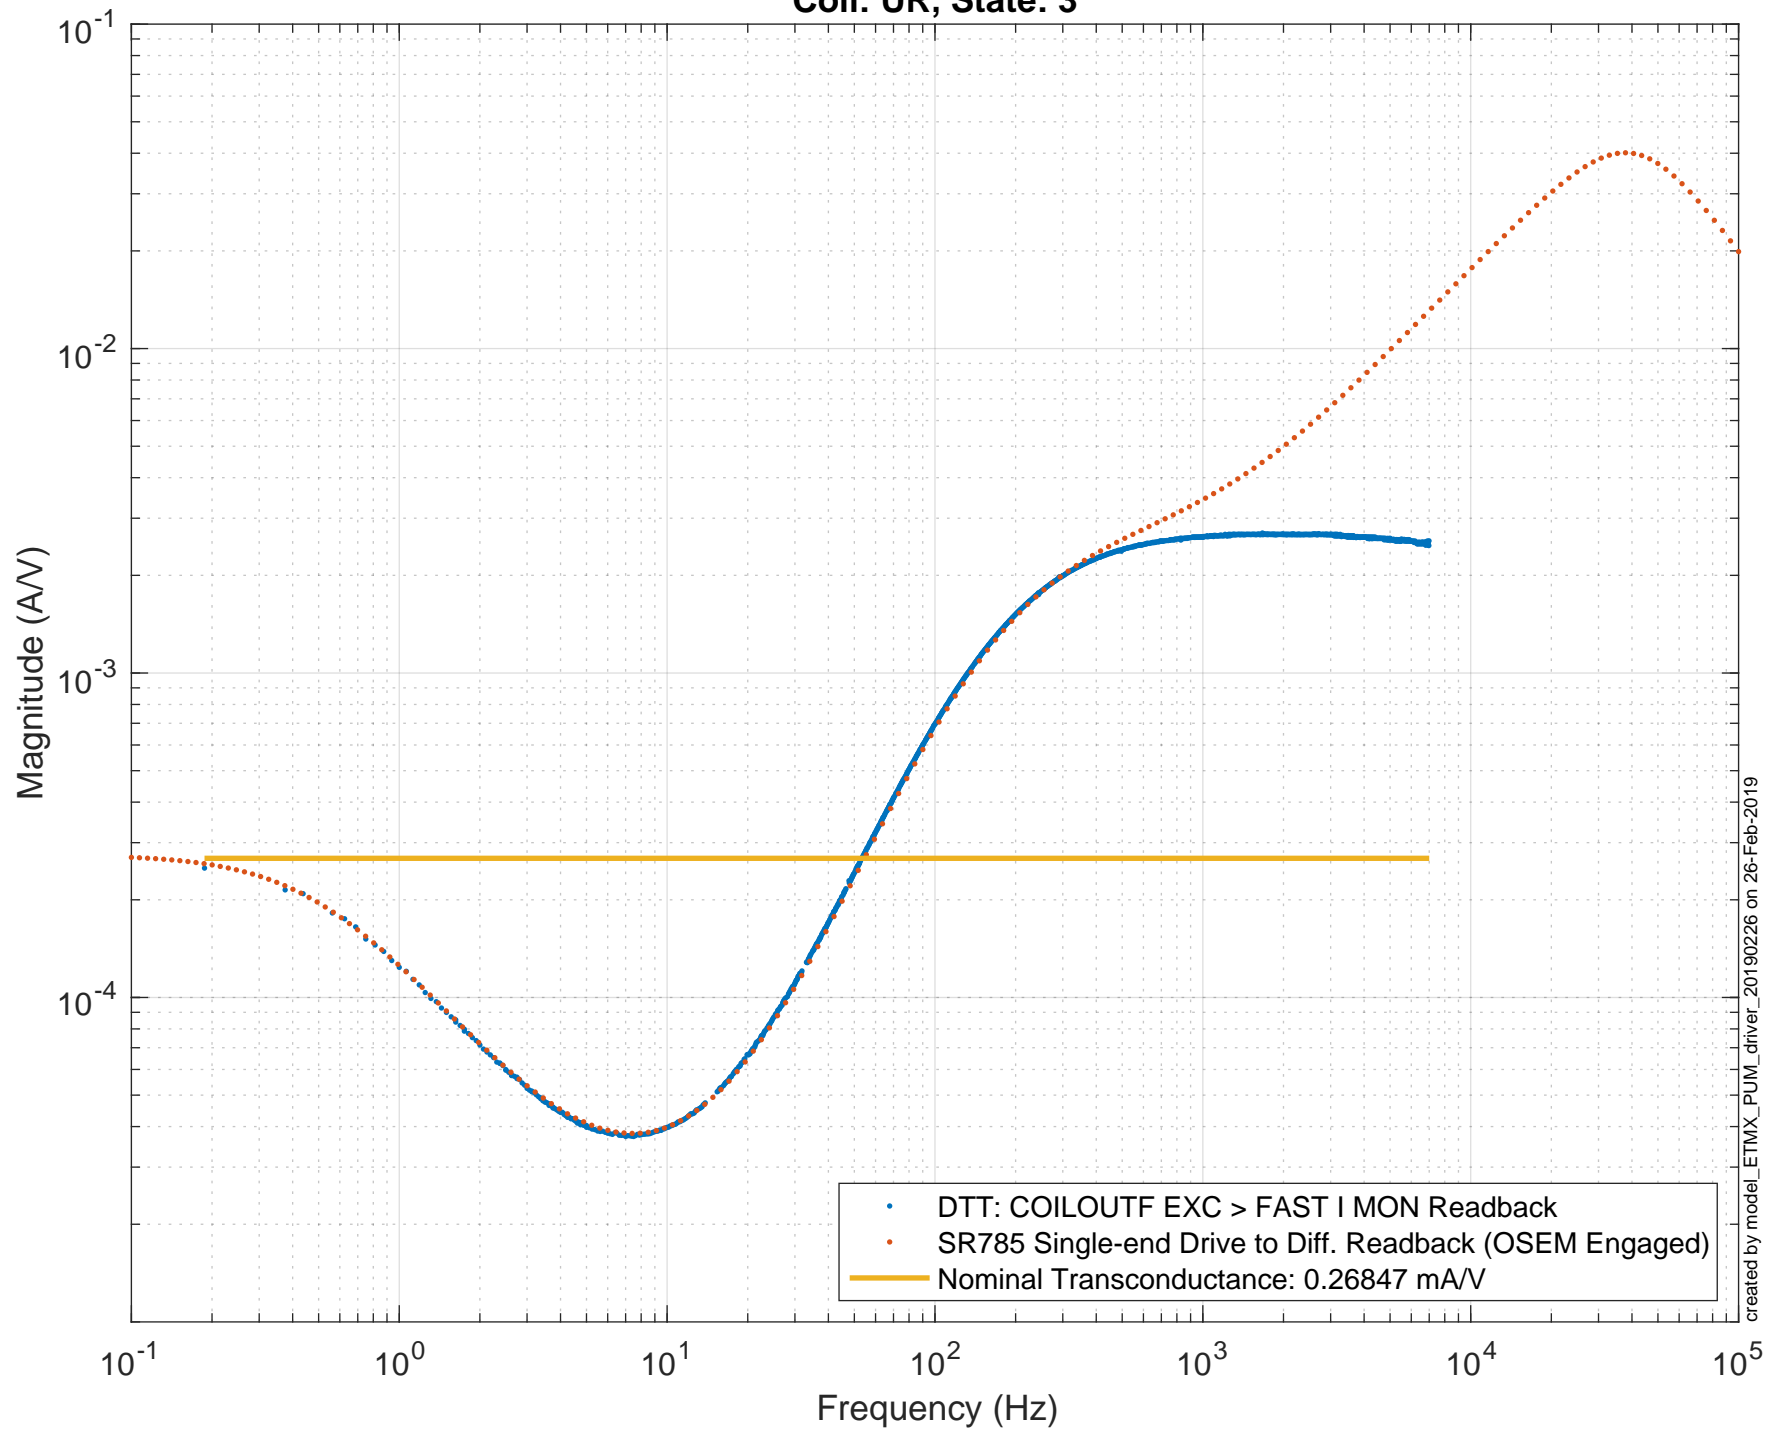


H1 SUS ETMX, PUM Driver

 Coil: UR, State: 4

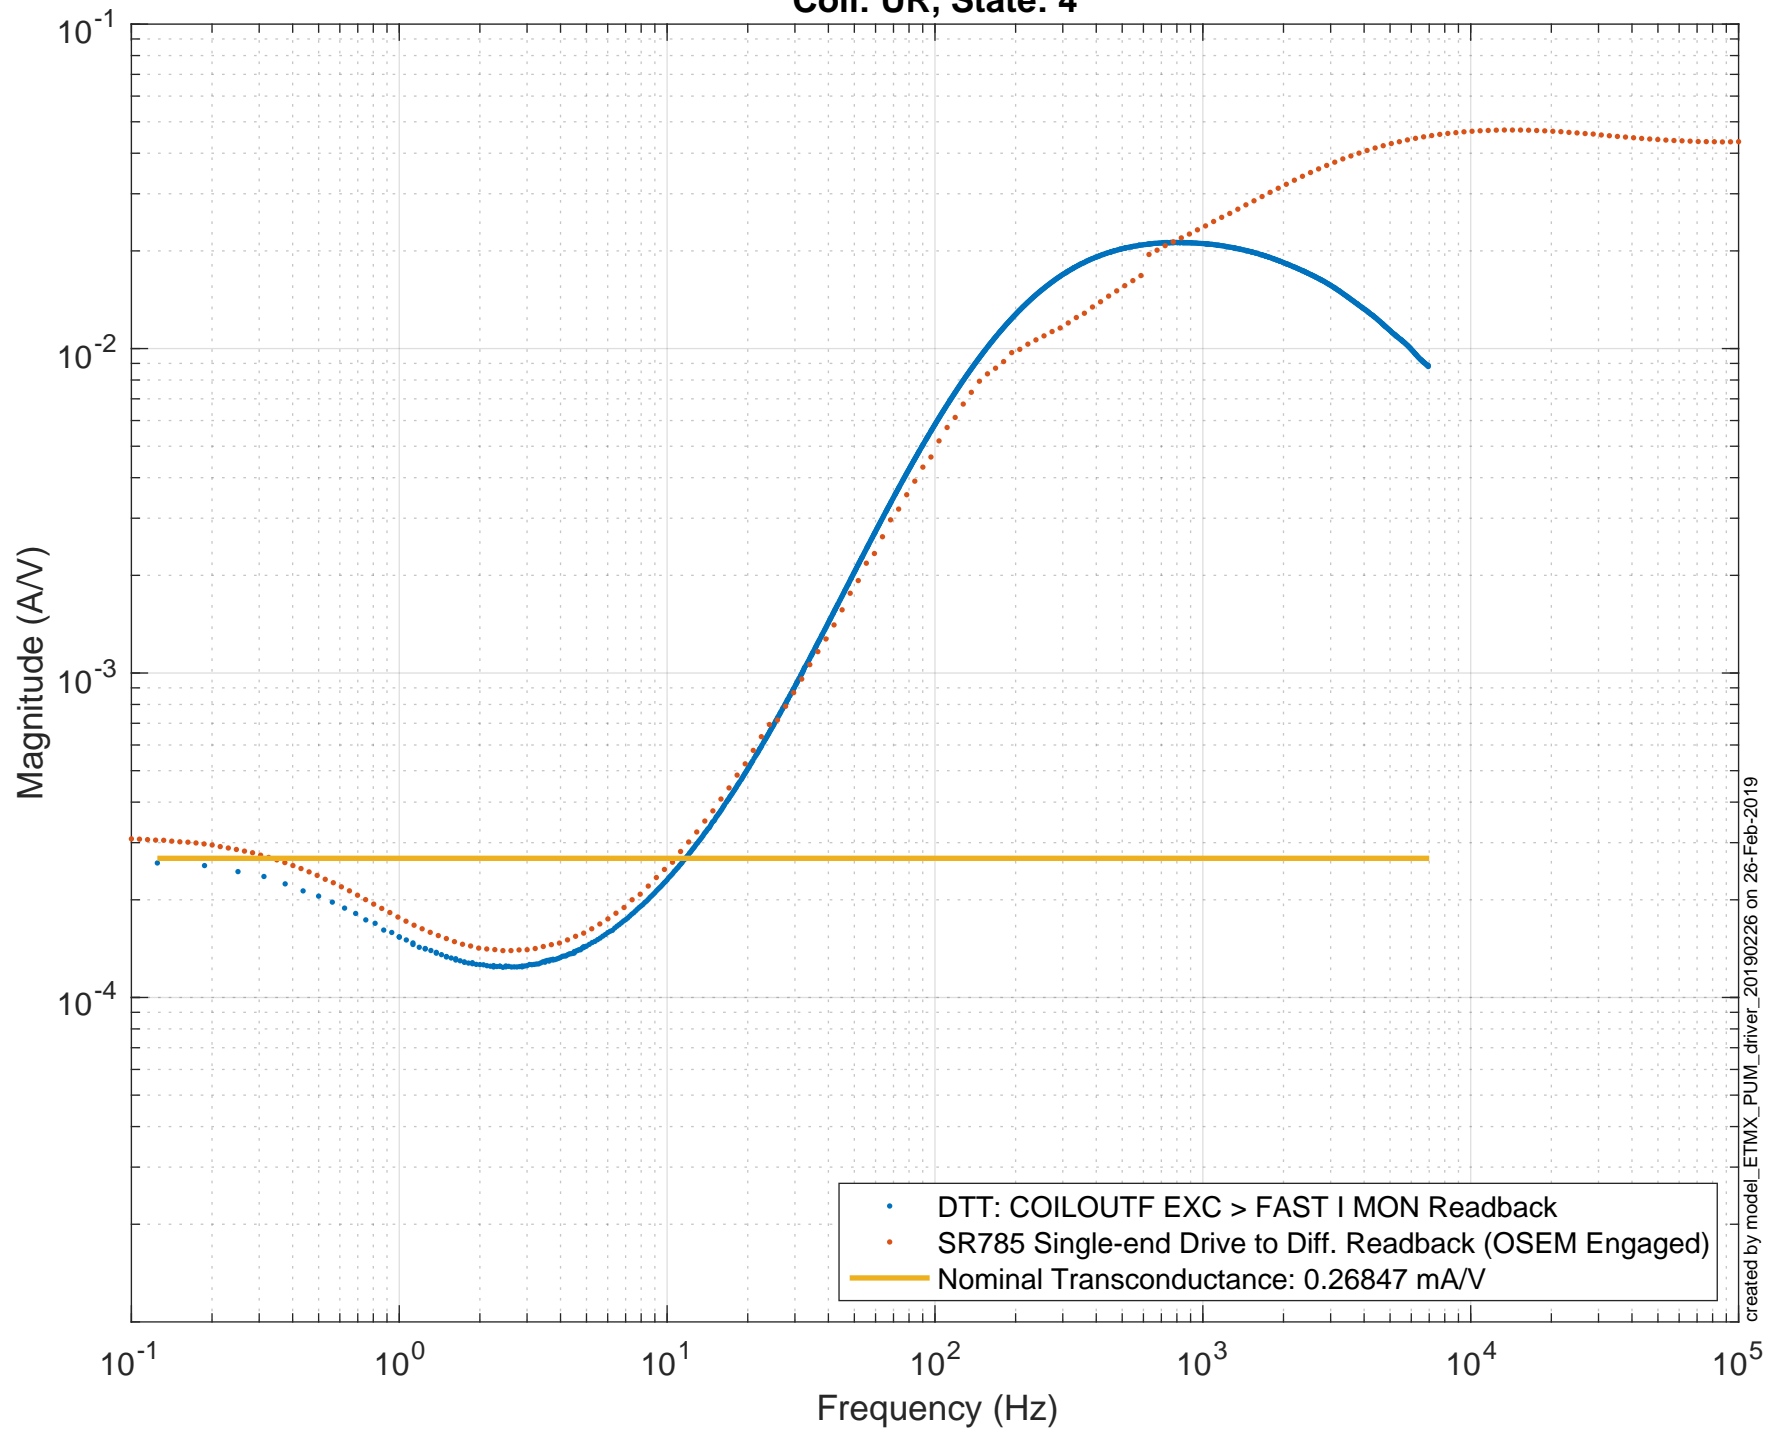


H1 SUS ETMX, PUM Driver

 Coil: LR, State: 1

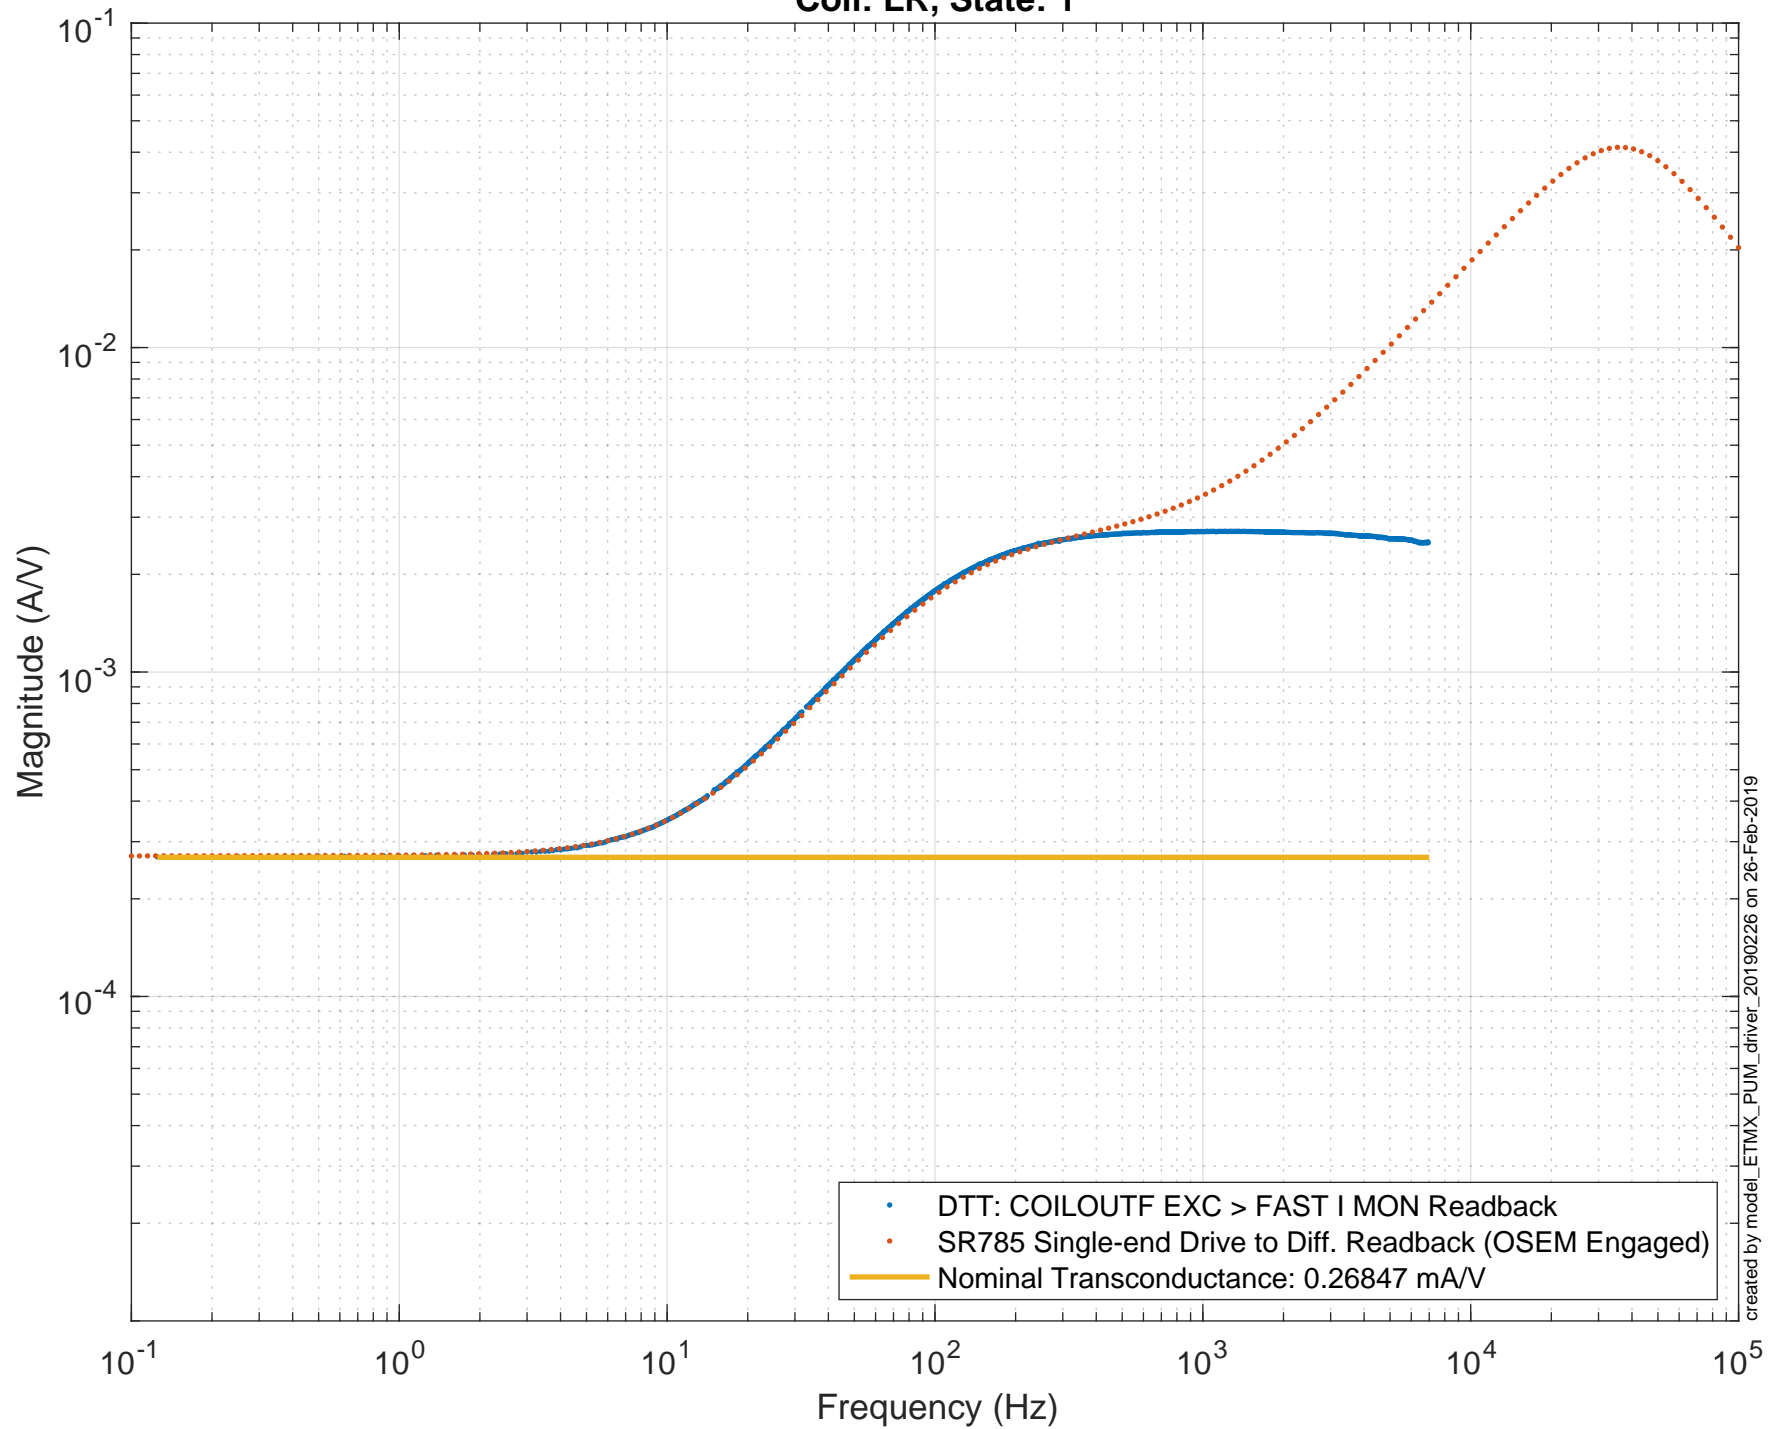


H1 SUS ETMX, PUM Driver

 Coil: LR, State: 2

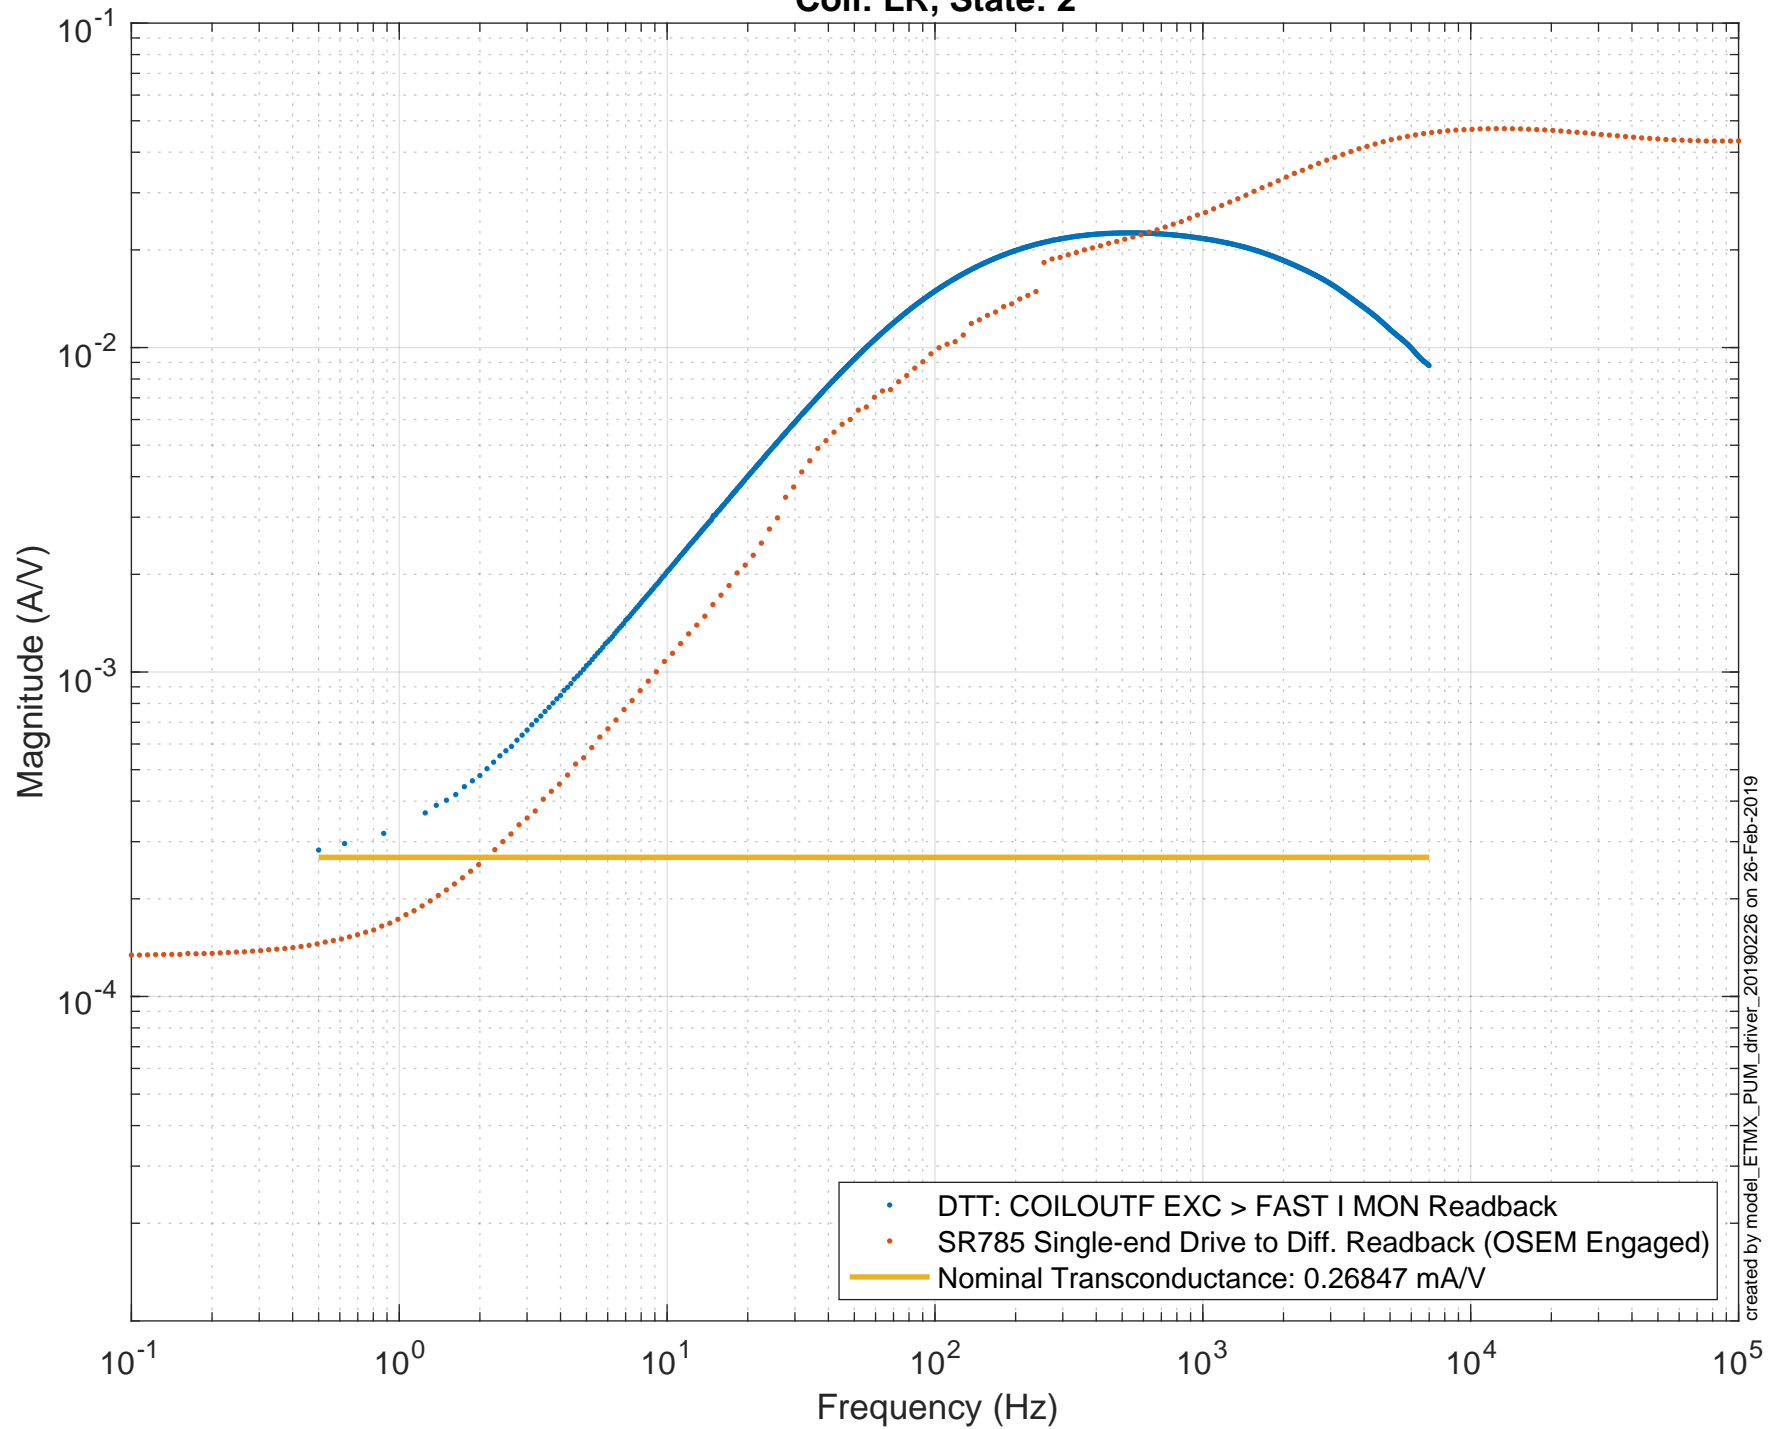


H1 SUS ETMX, PUM Driver

 
Coil: LR, State: 3

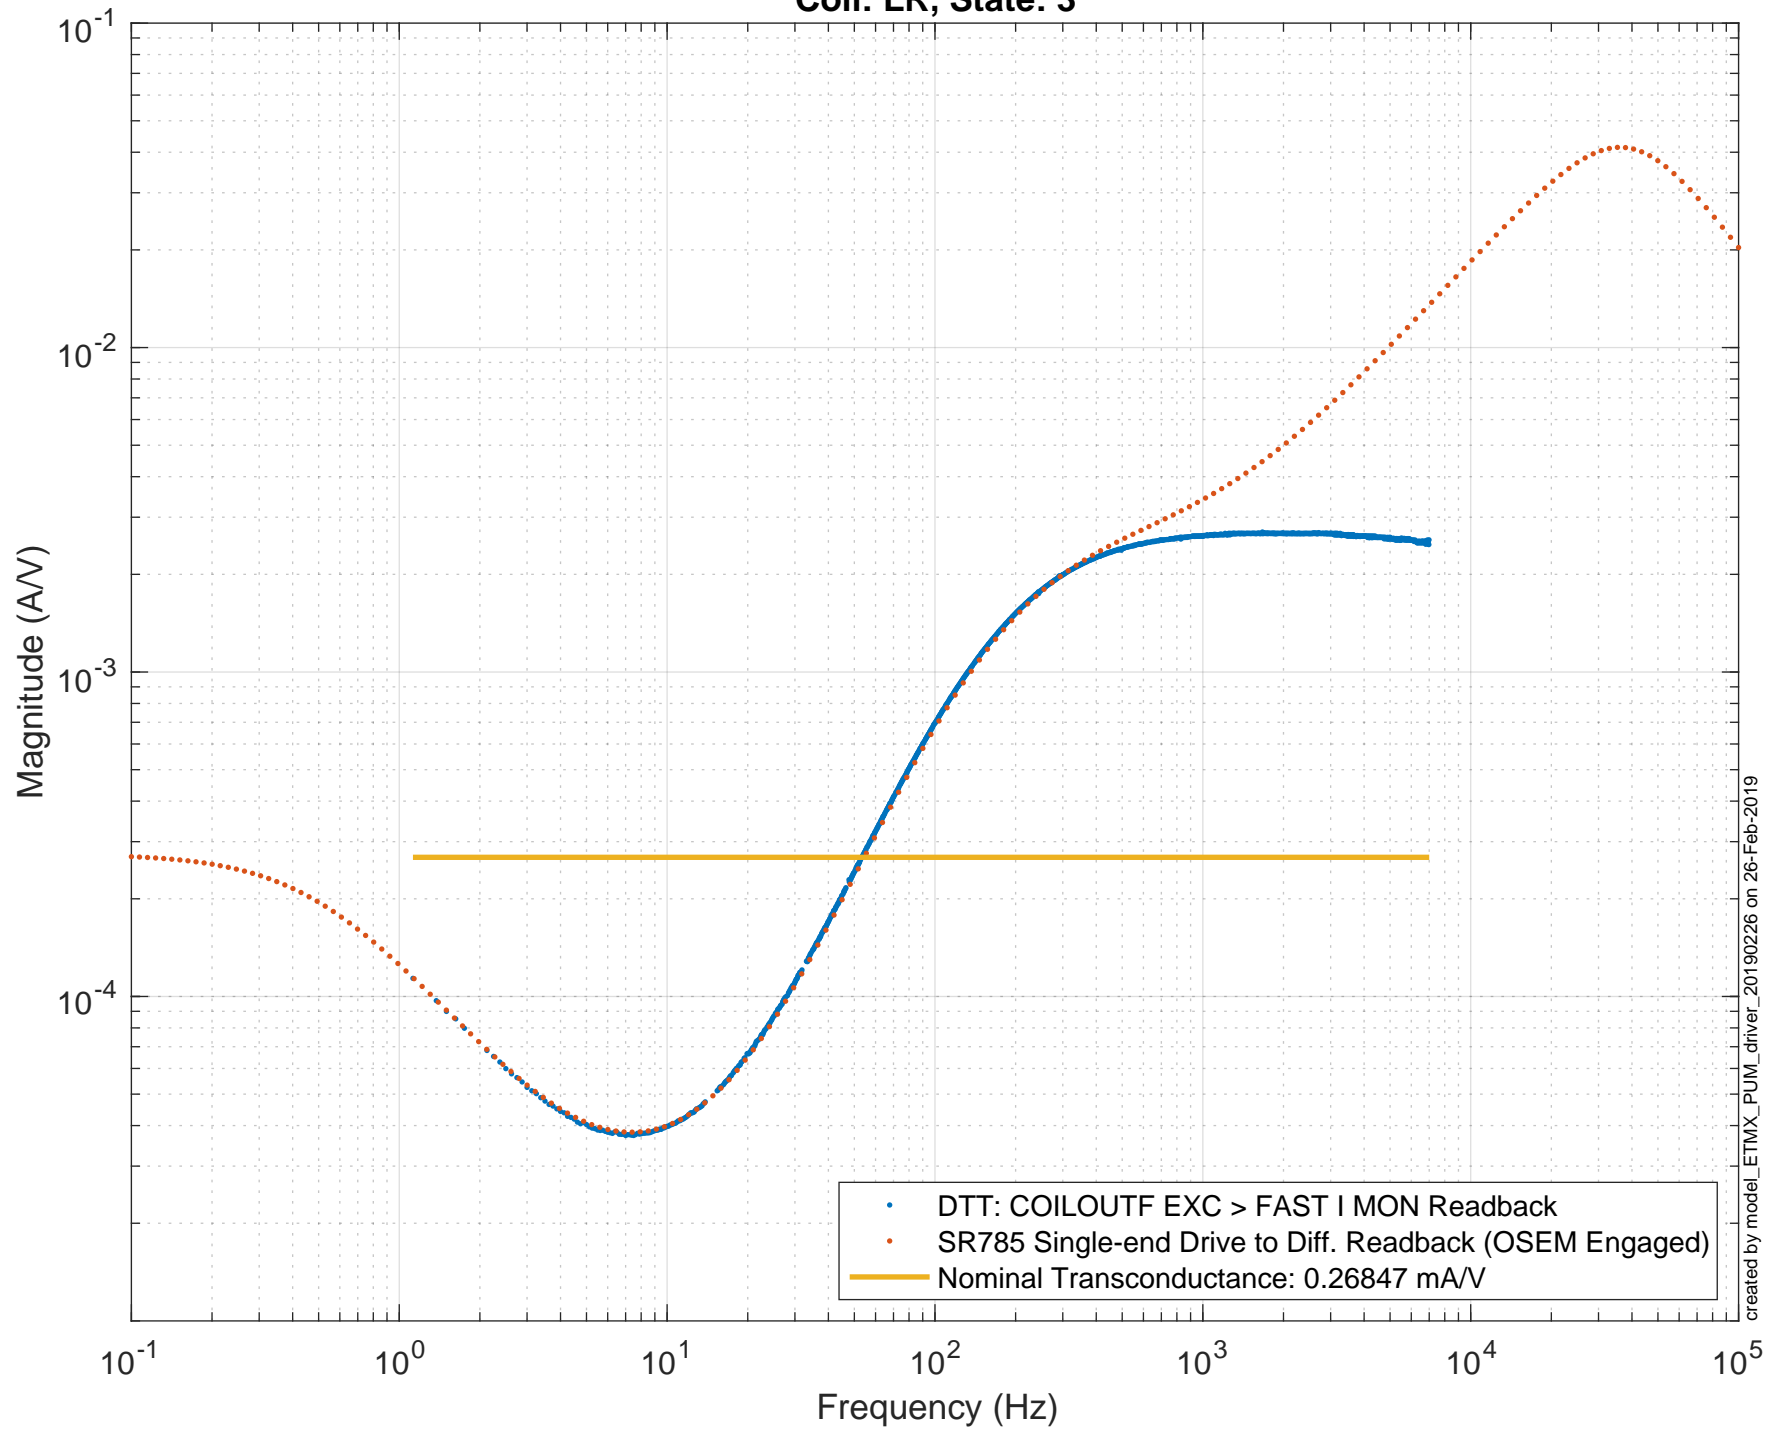

 
H1 SUS ETMX, PUM Driver
Coil: LR, State: 4

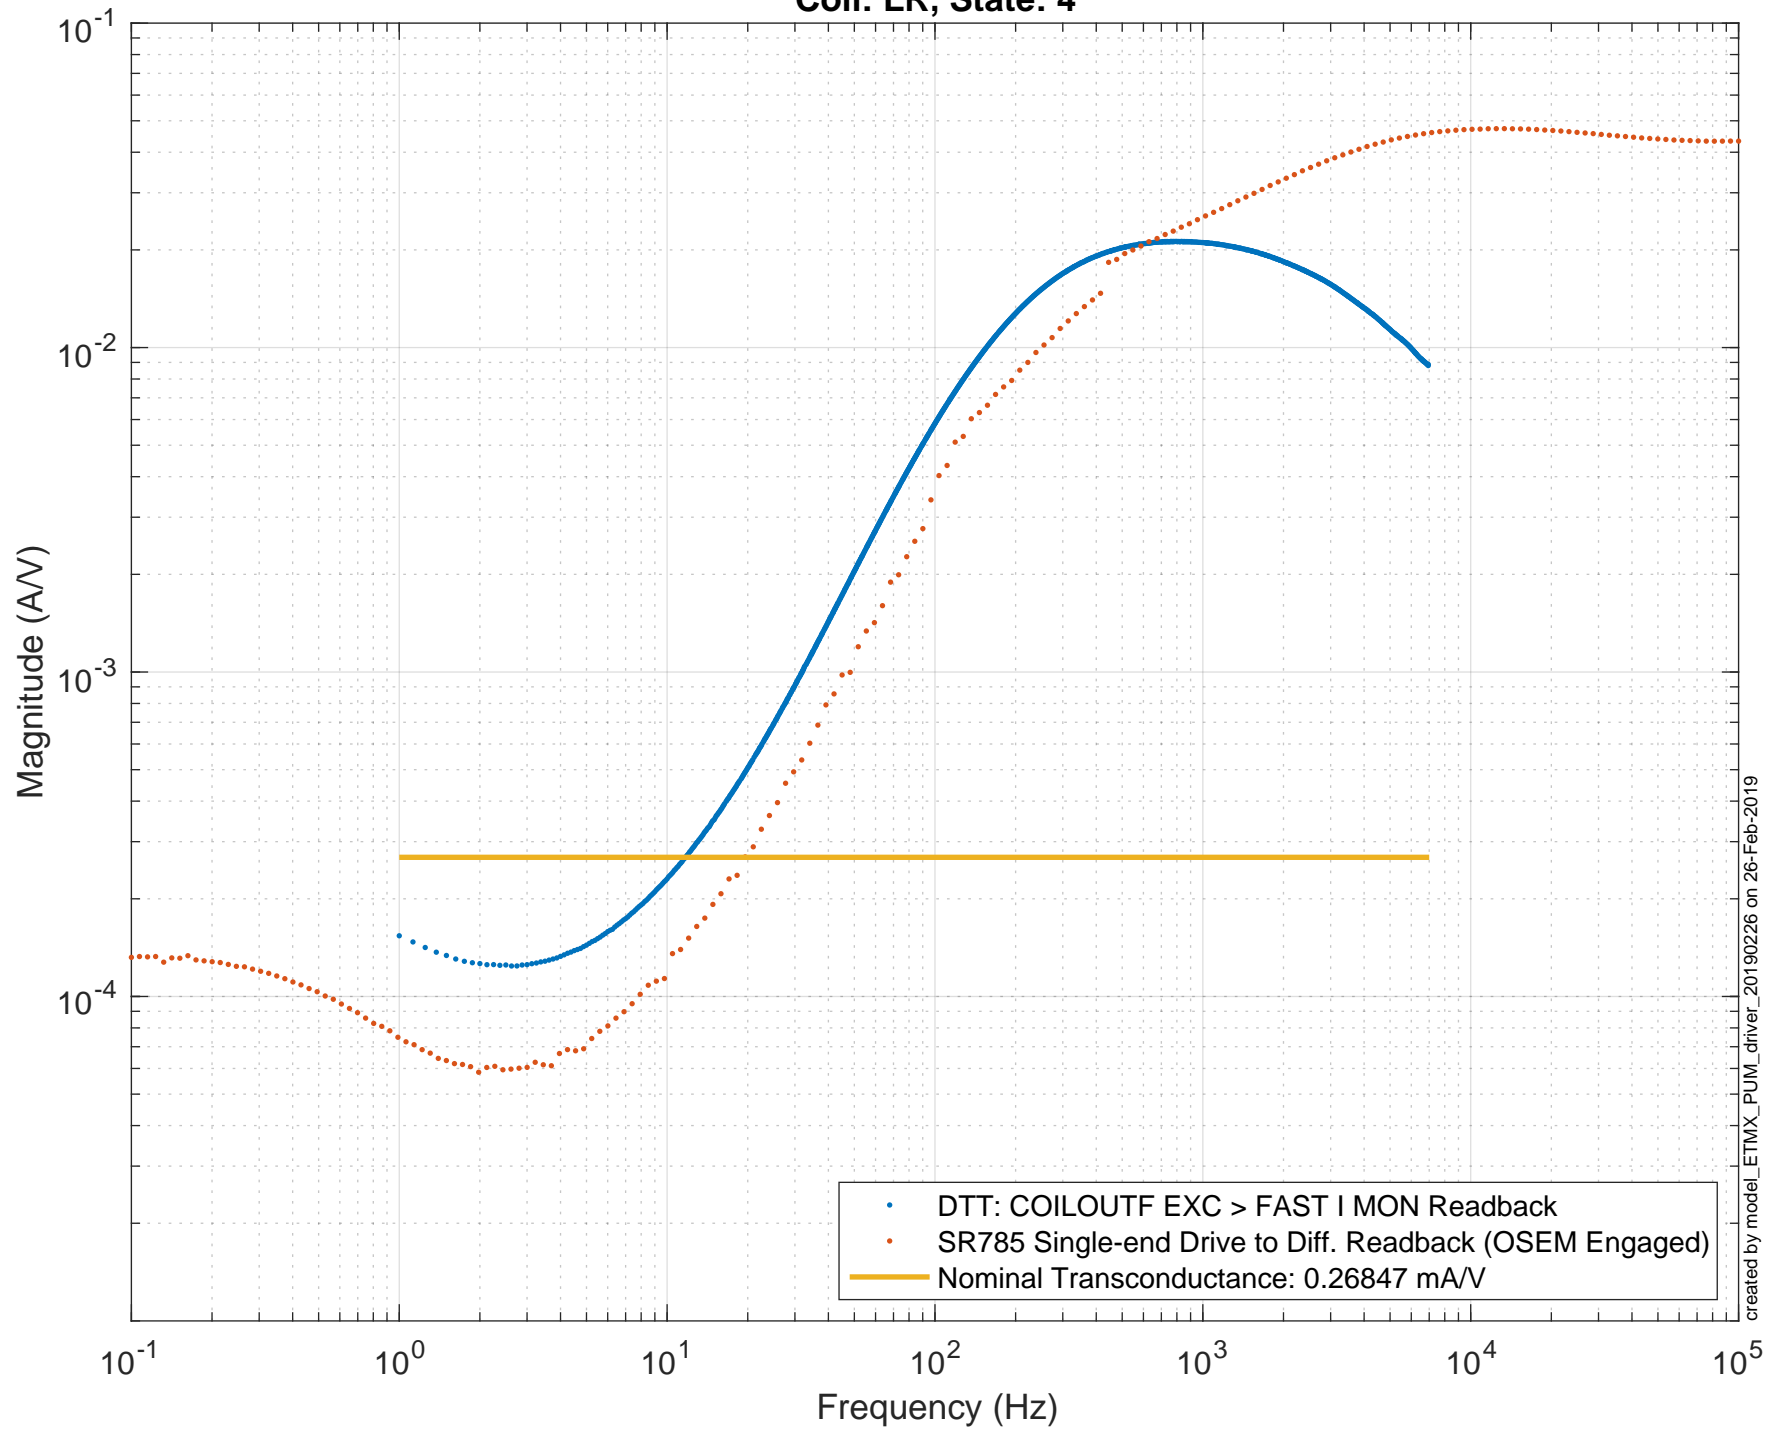


H1 SUS ETMX, PUM Driver

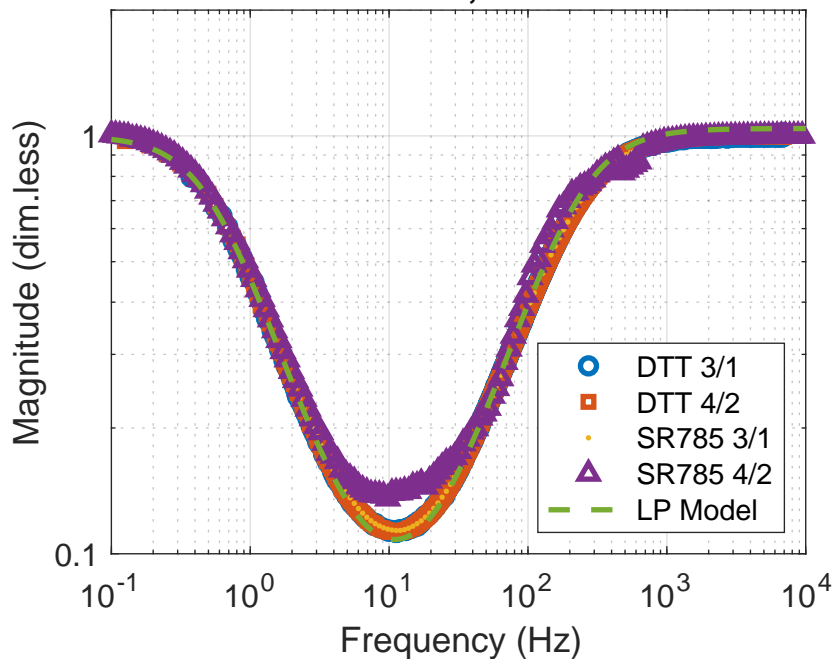 


UL

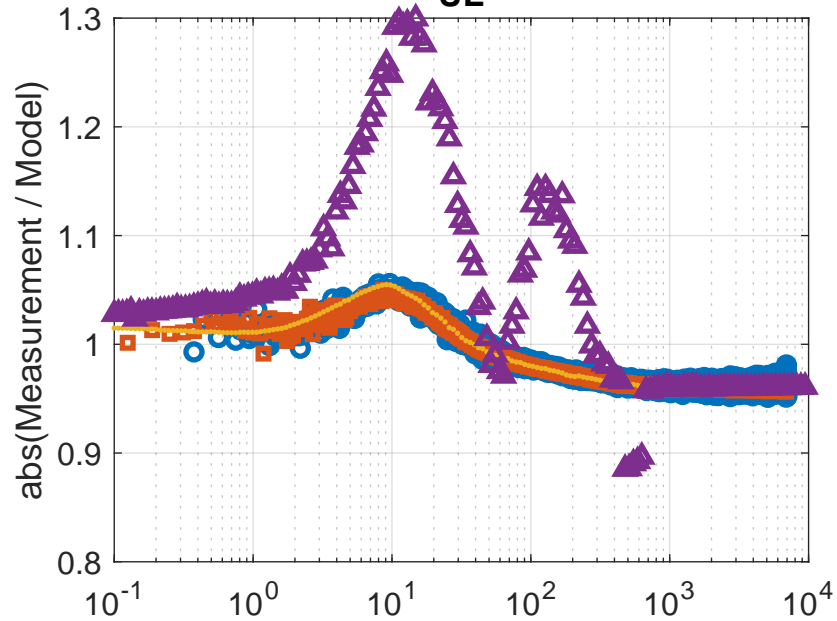 


LP ON

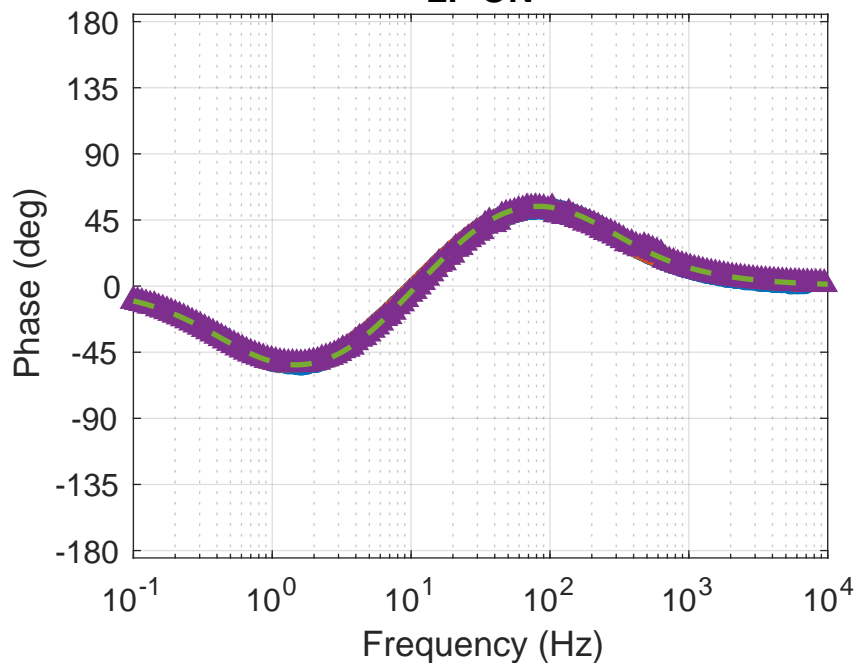 


Model (z):(p) = (6 20):(0.5 250)

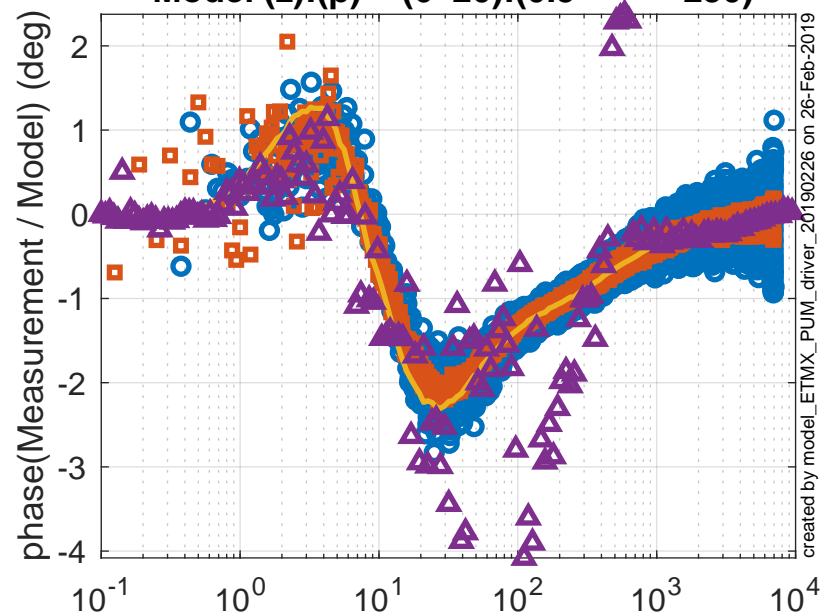 


H1 SUS ETMX, PUM Driver

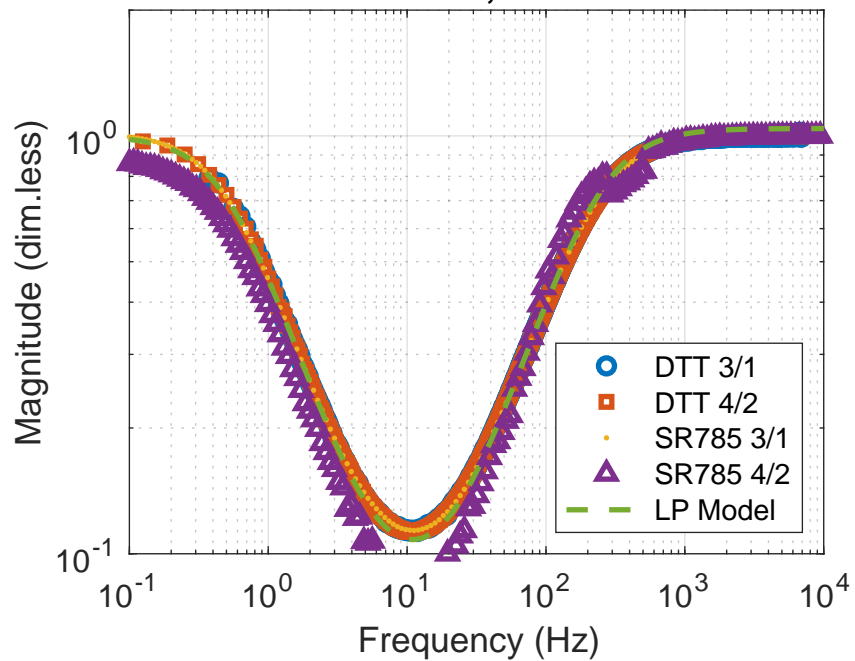 


LL

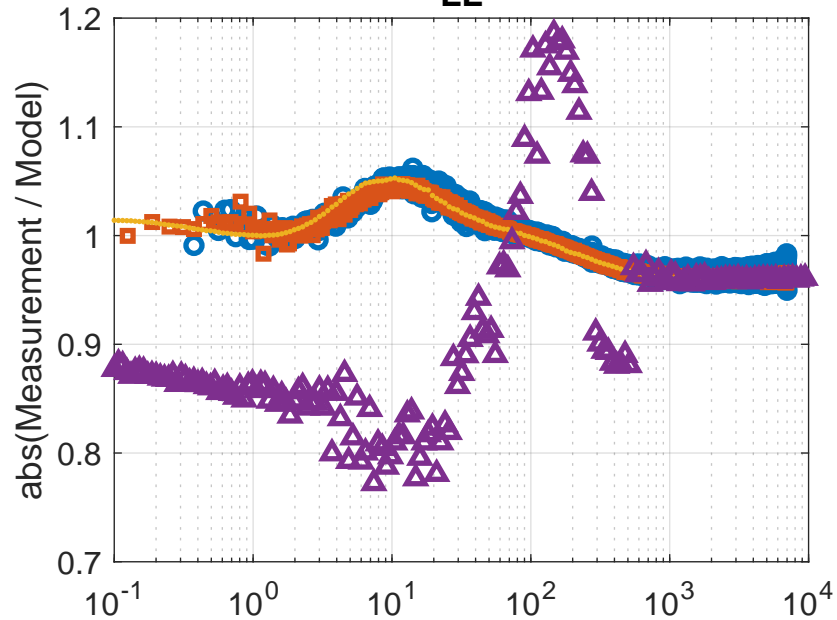 


LP ON

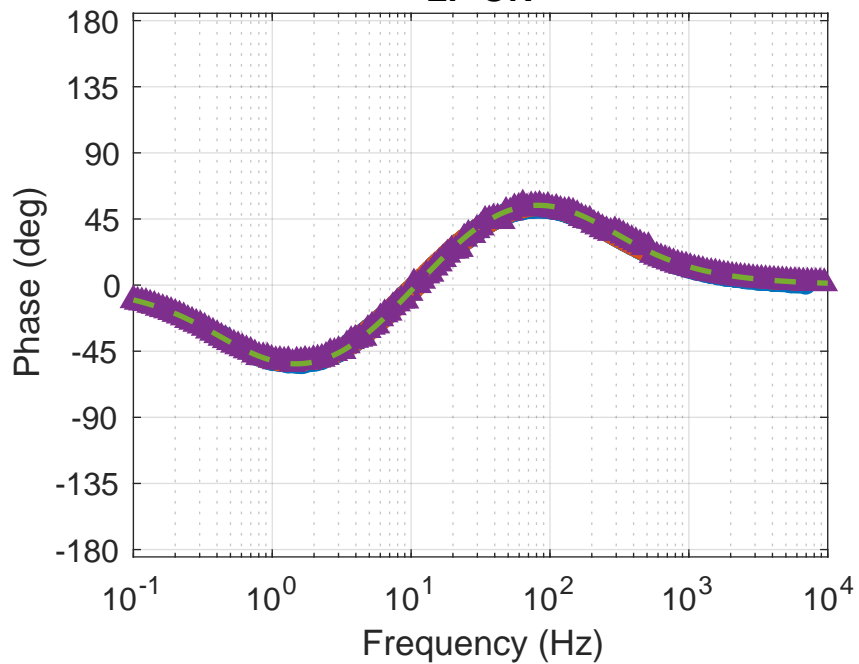 


Model (z):(p) = (6 20):(0.5 250)

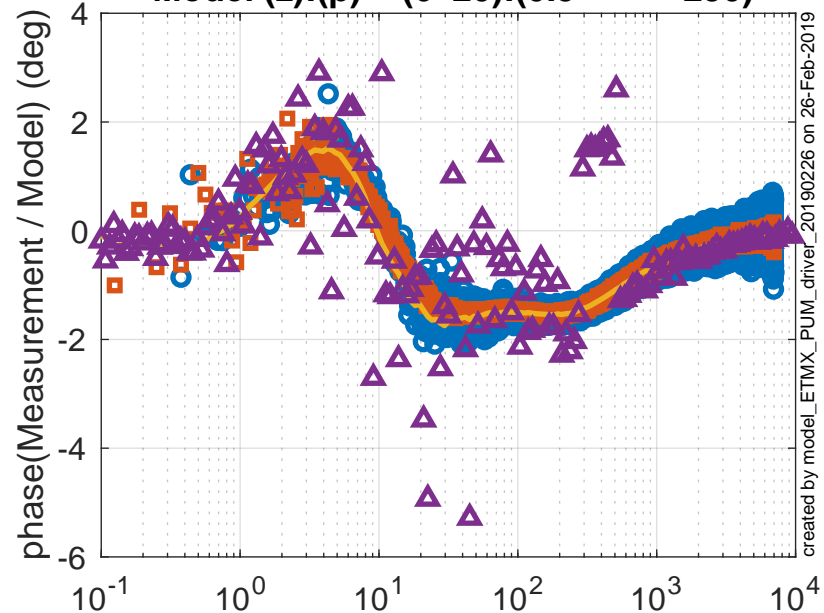 


H1 SUS ETMX, PUM Driver

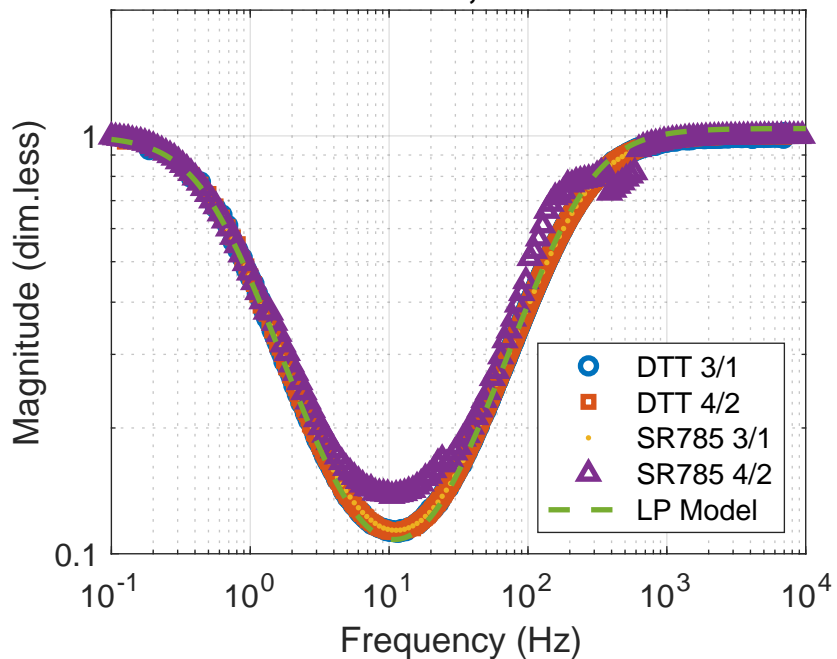 


UR

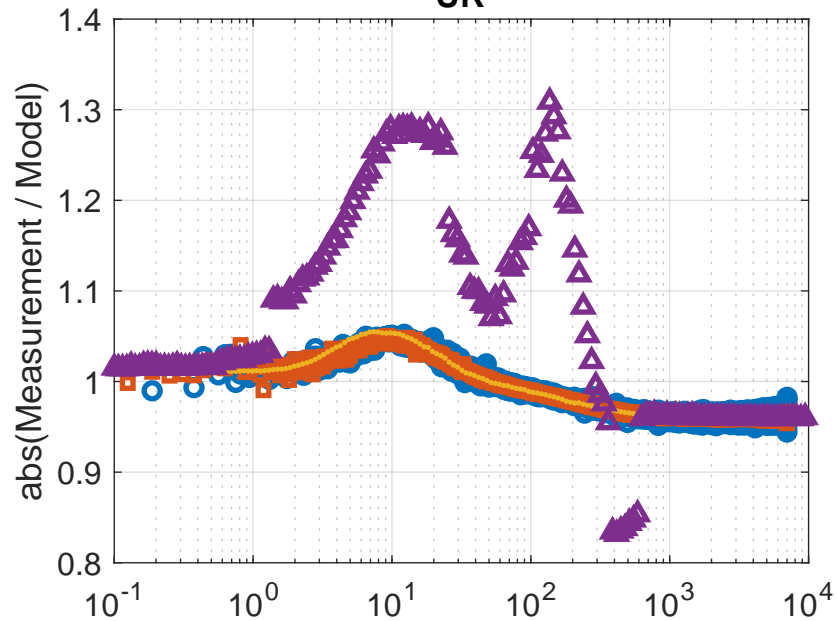 


LP ON

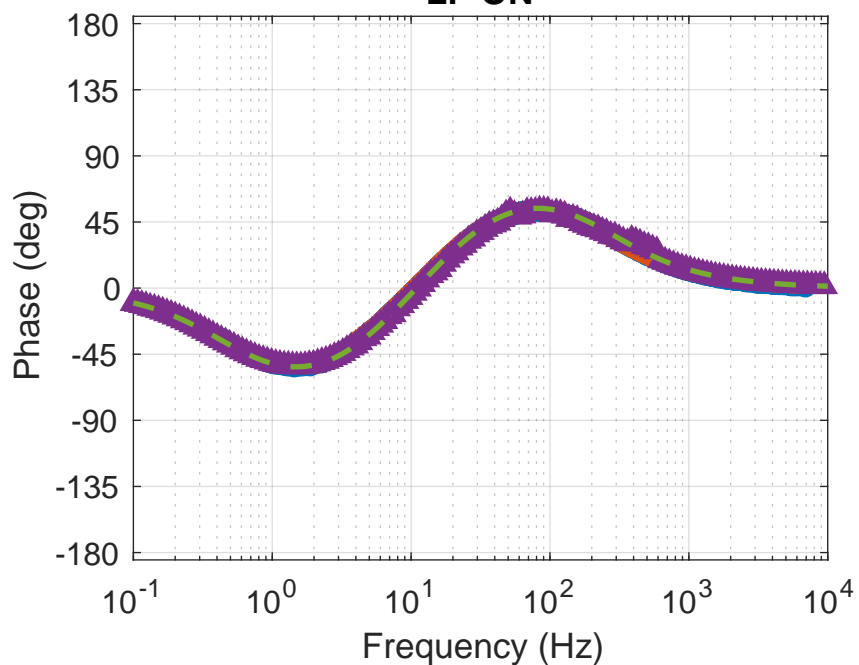 


Model (z):(p) = (6 20):(0.5 250)

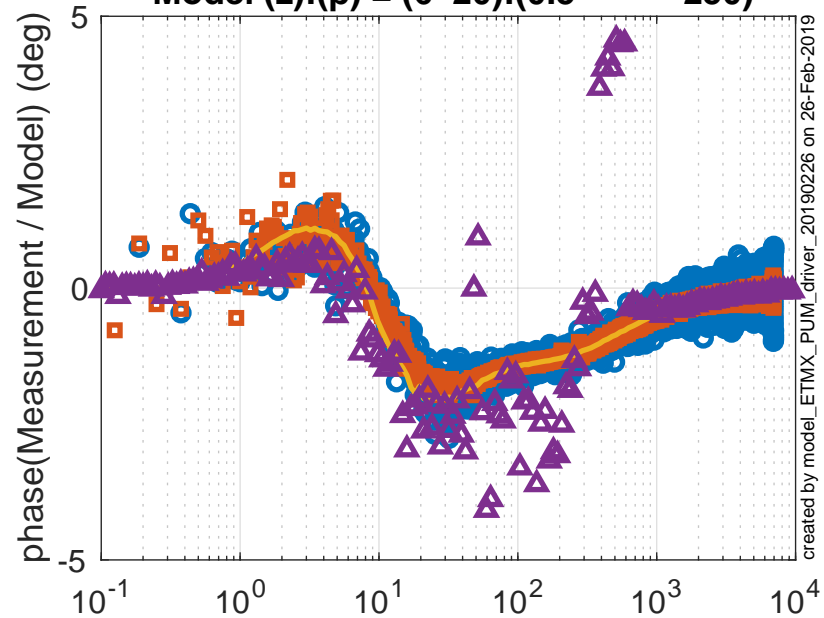 


H1 SUS ETMX, PUM Driver

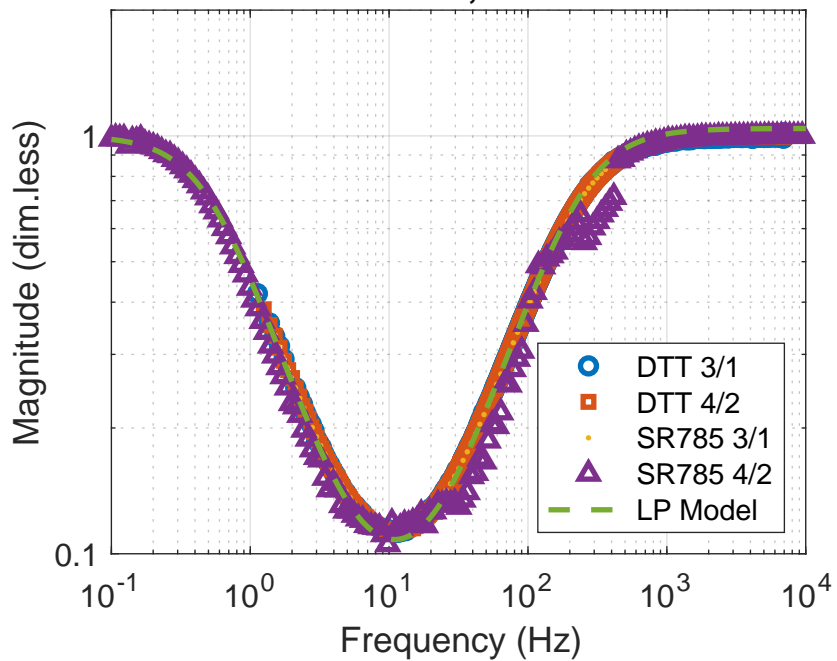 


LR

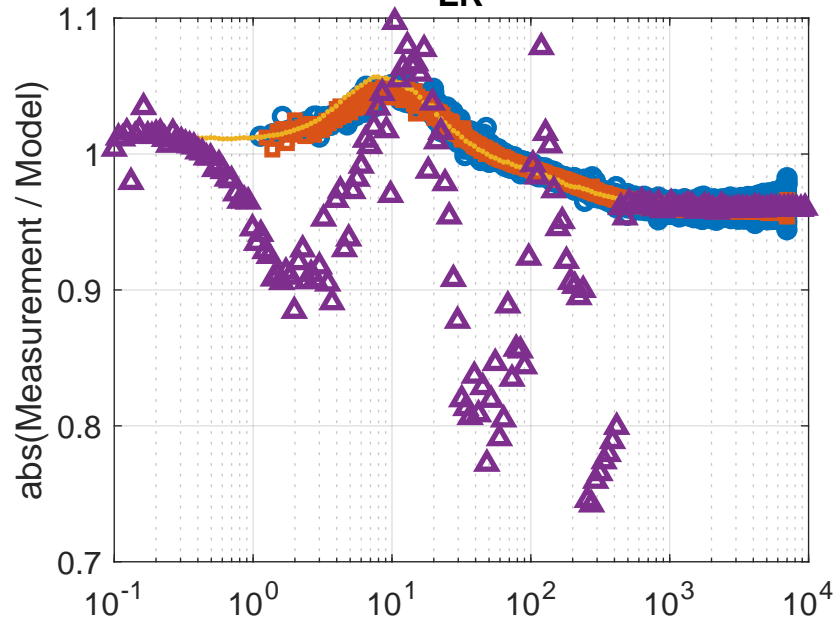 

LP ON

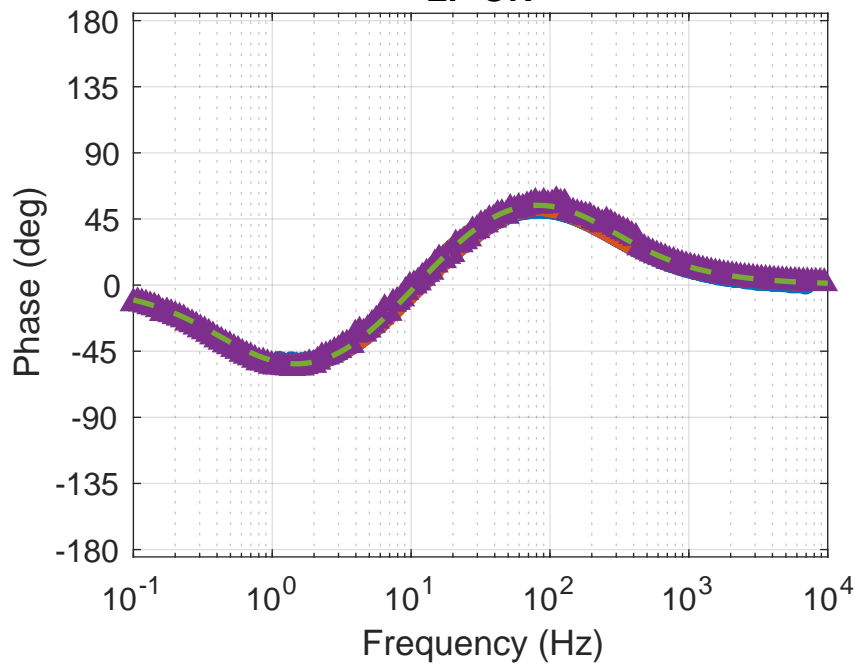 

Model (z):(p) = (6 20):(0.5 250)

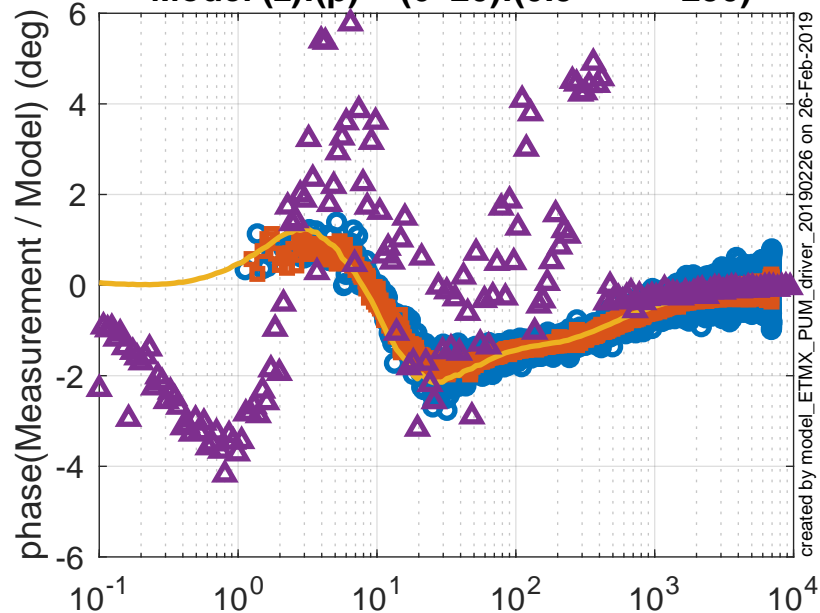 

created by model_ETMX_PUM_driver_20190226 on 26-Feb-2019

