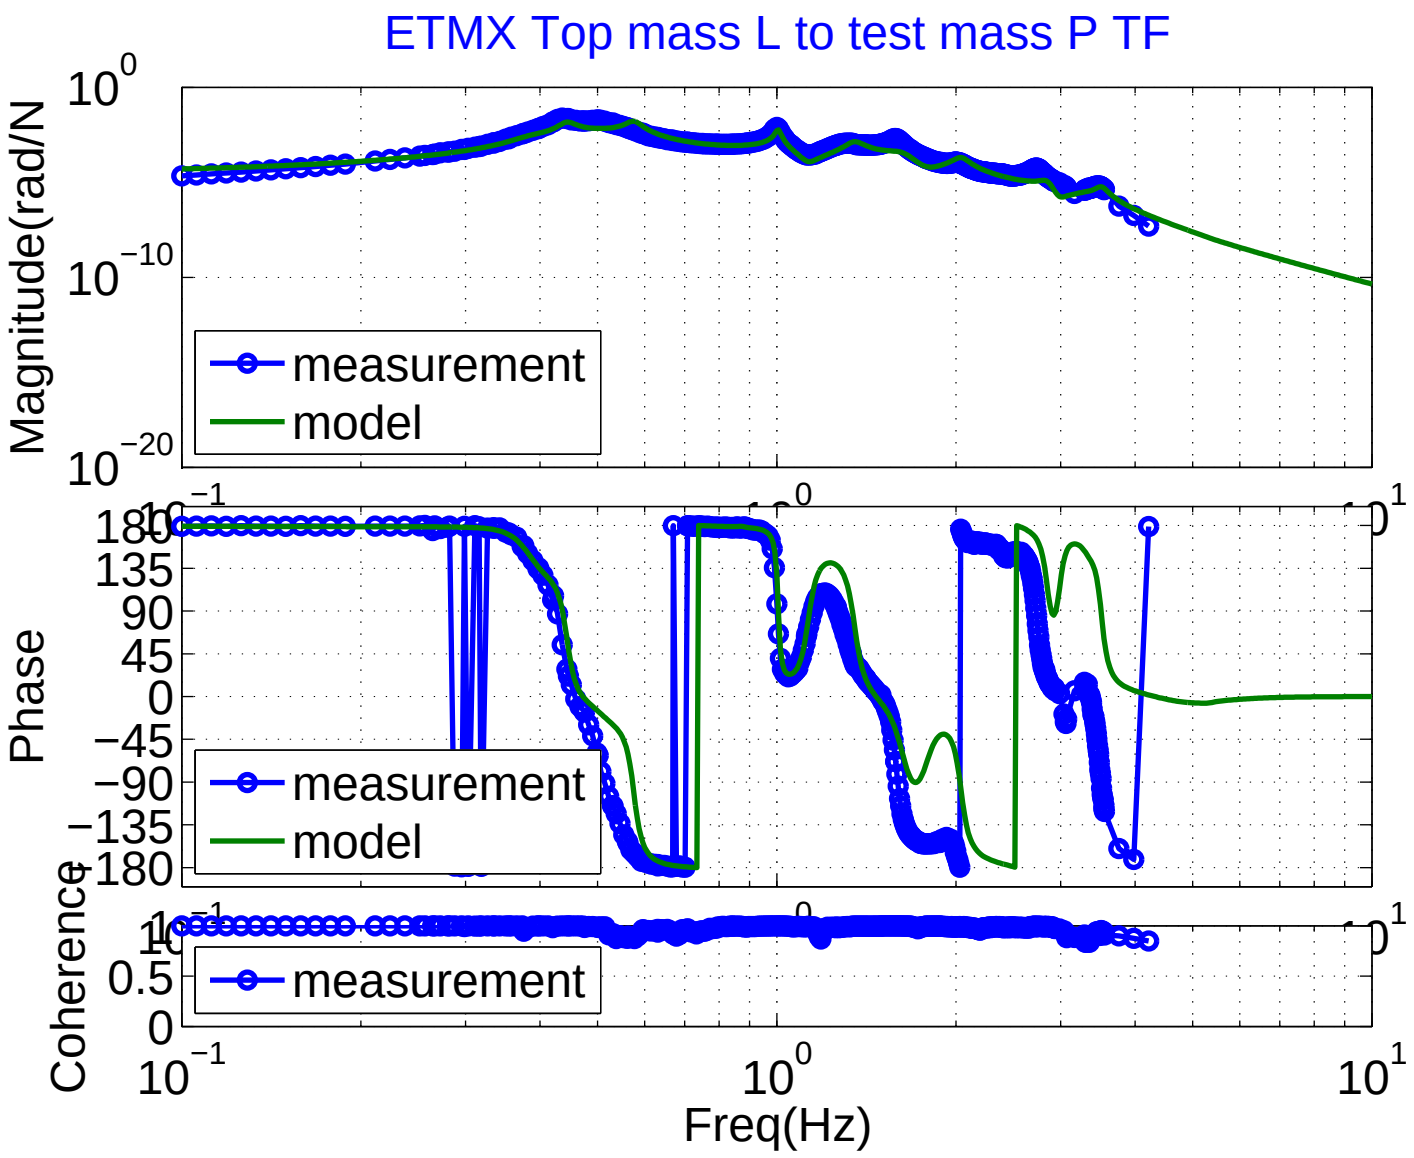
ETMX Top mass L to test mass P TF
Magnitude(rad/N
measurement
model
Phase
measurement
model
Coherence
measurement
Freq(Hz)

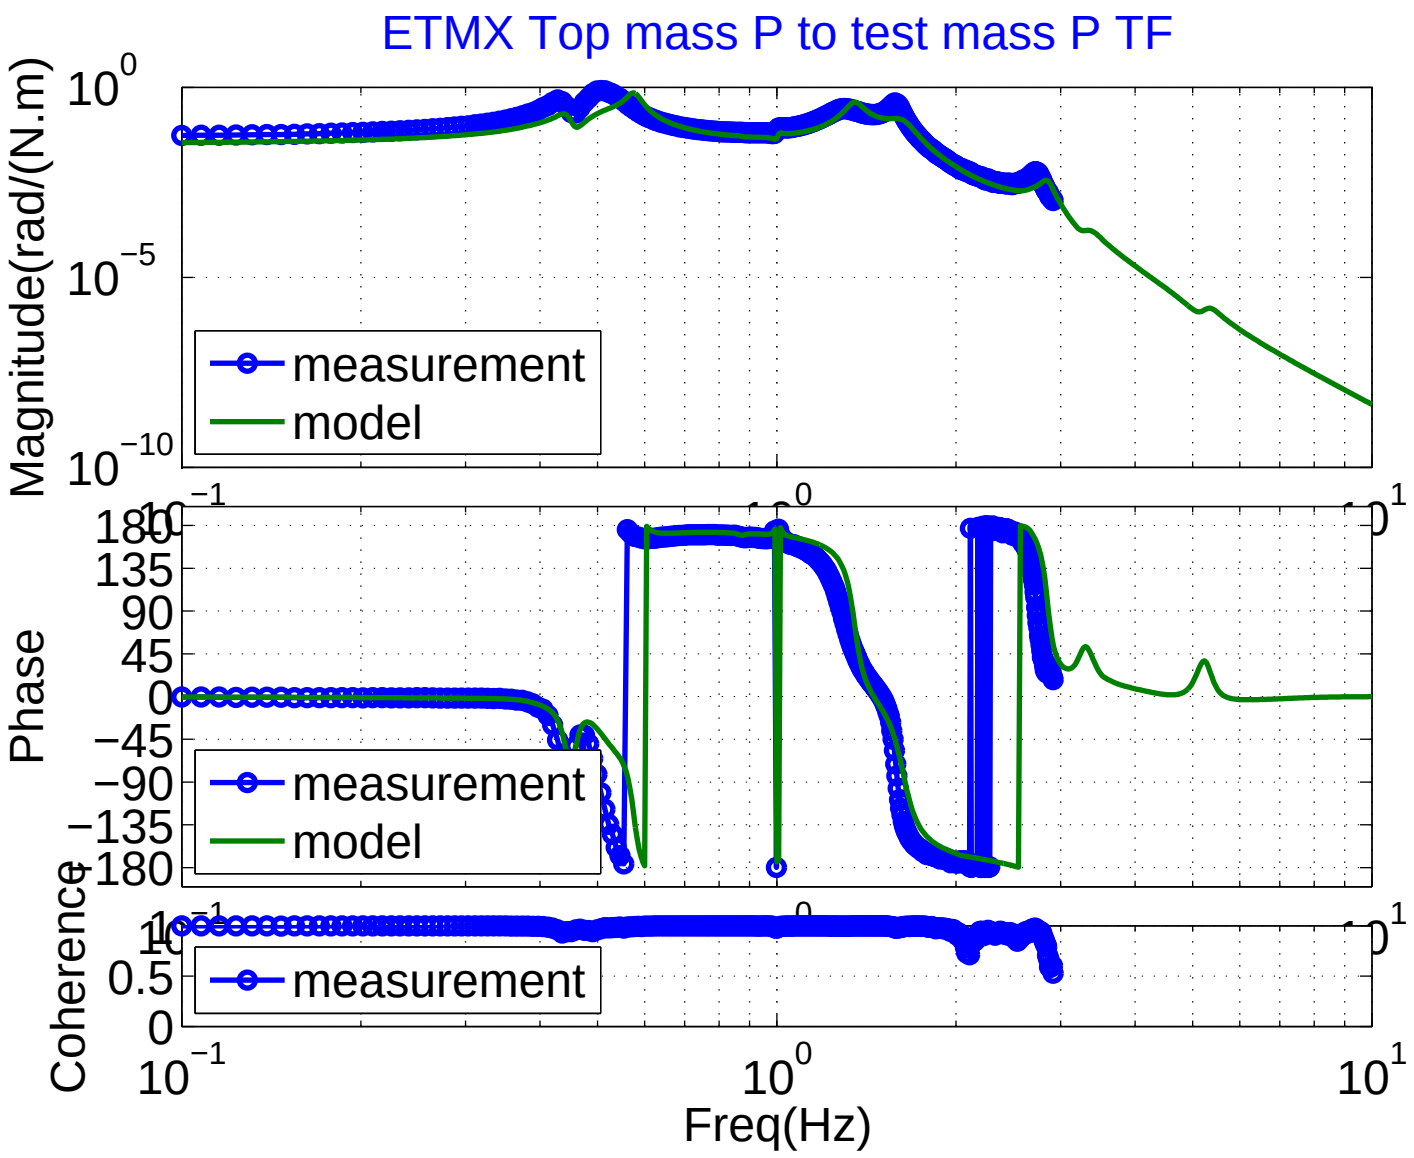
ETMX Top mass P to test mass P TF
Magnitude(rad/(N.m))
measurement
model
Phase
measurement
model
Coherence
measurement
Freq(Hz)

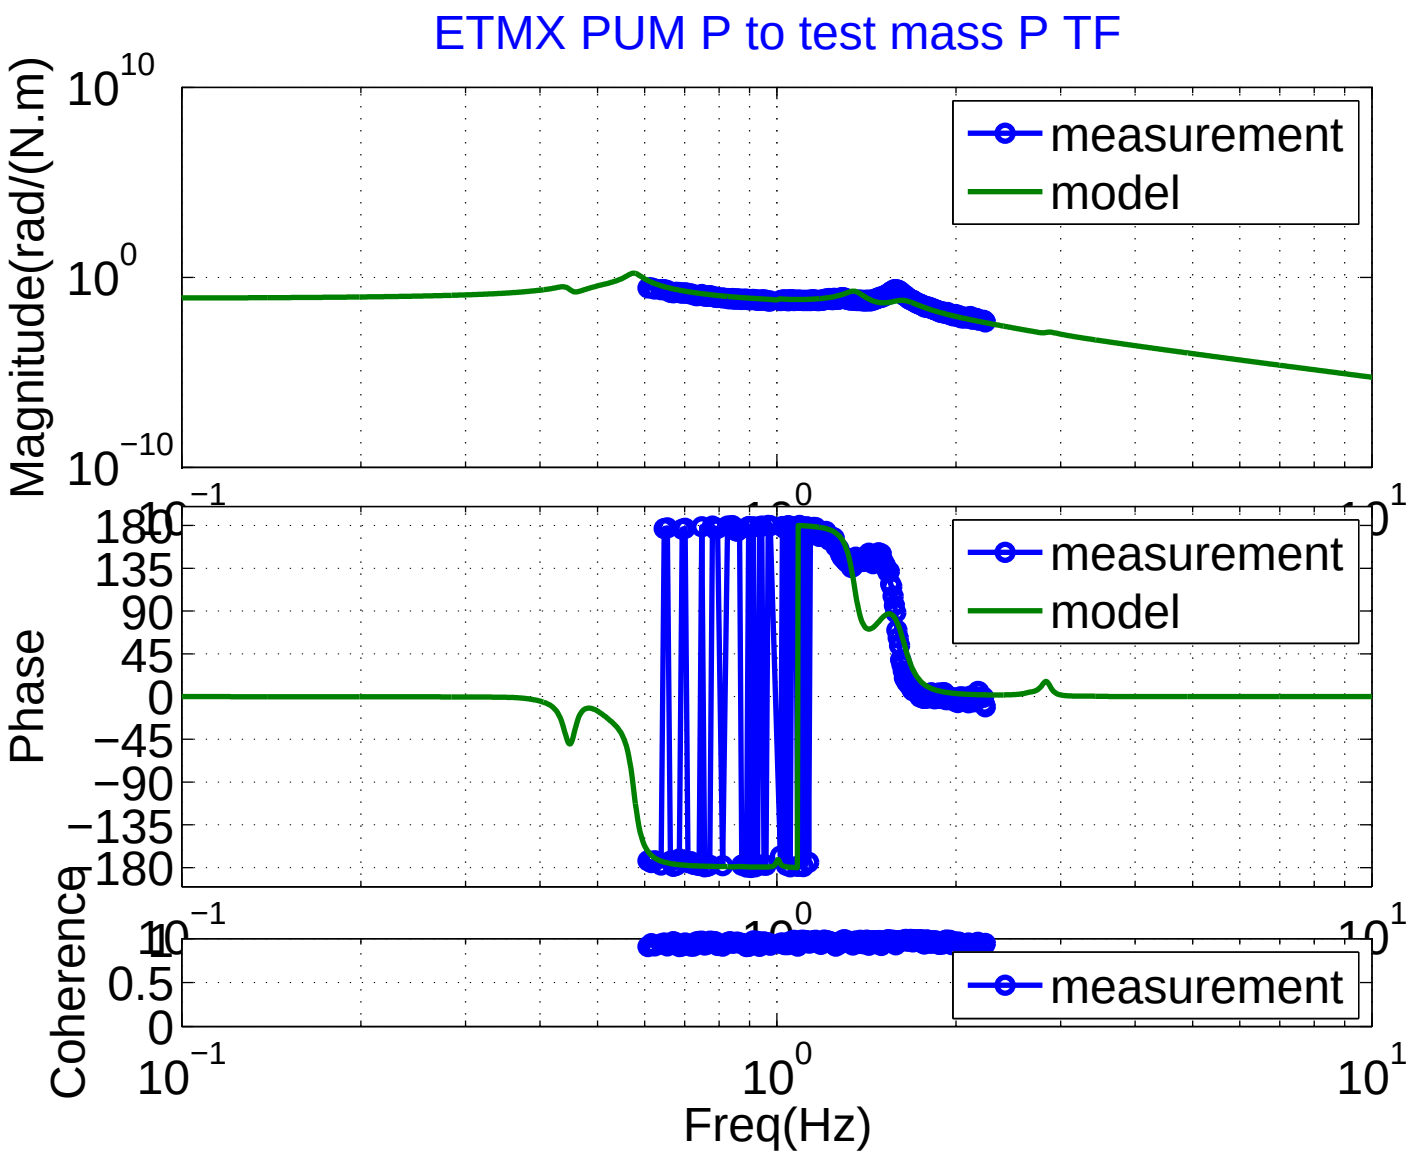
ETMX PUM P to test mass P TF
Magnitude(rad/(N.m))
measurement
model
Phase
measurement
model
Coherence
measurement
Freq(Hz)

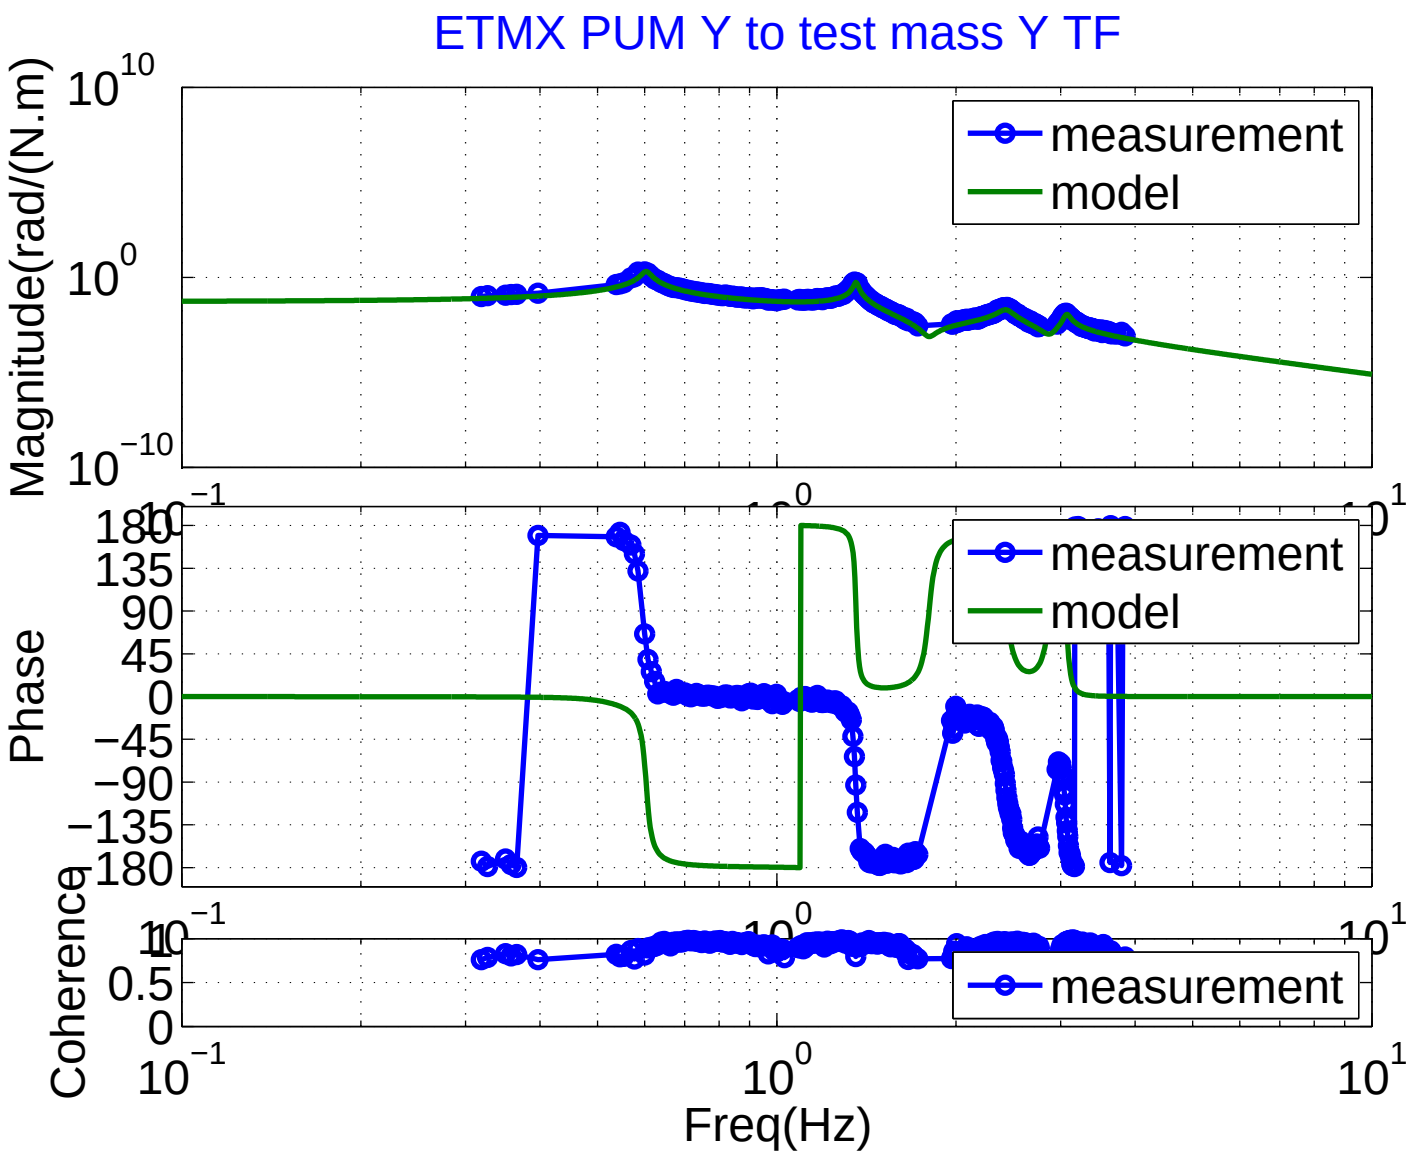
ETMX PUM Y to test mass Y TF
Magnitude(rad/(N.m))
measurement
model
Phase
measurement
model
Coherence
measurement
Freq(Hz)