


OMC GROUNDING

26 Feb 2019

R. Abbott

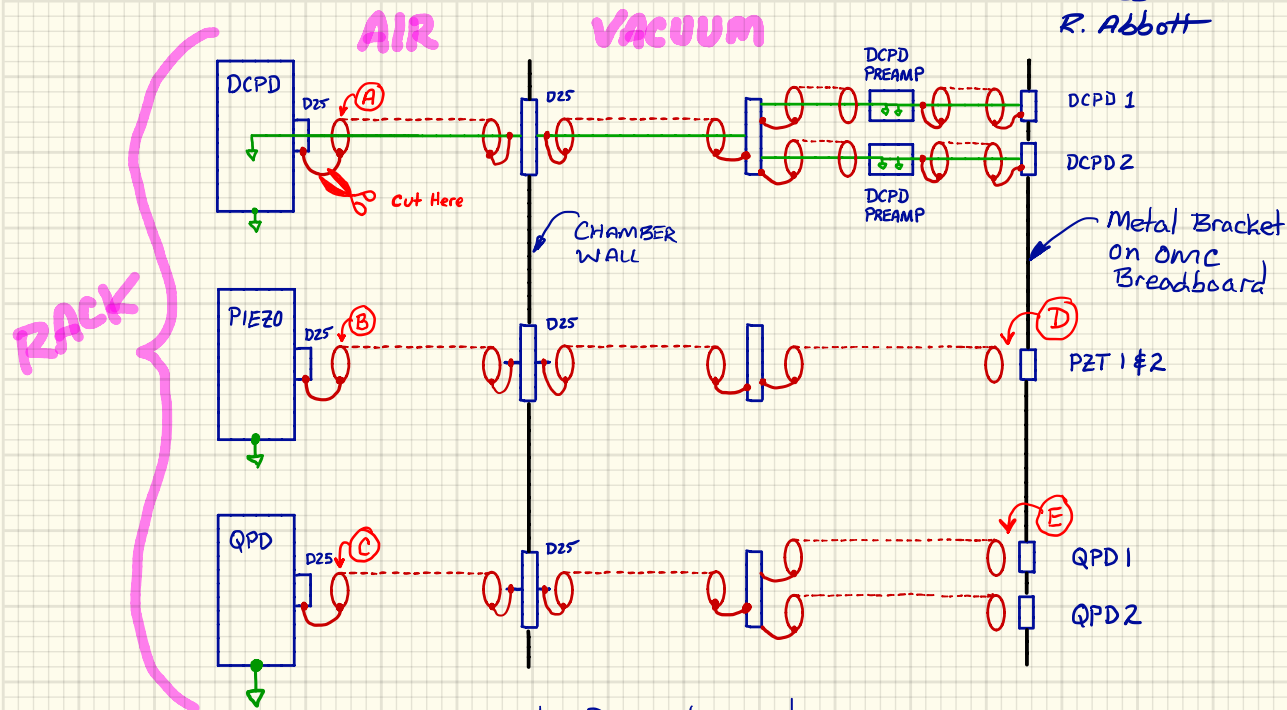

With airside connectors unplugged from the 3 chassis, documentation claims no connection from (A) → (B) or (A) → (C). If however there is a connection, cut where indicated at point (A).

Supporting Documents:

D1300502 - DCPD WIRING

D1300376 - PIEZO WIRING

D1300373 - QPD WIRING

KEY:

RED - SHIELDS

GREEN - GROUND

BLUE - CONNECTOR BACKSHELLS